


GT-R1

Portable Guitar/Bass Recorder

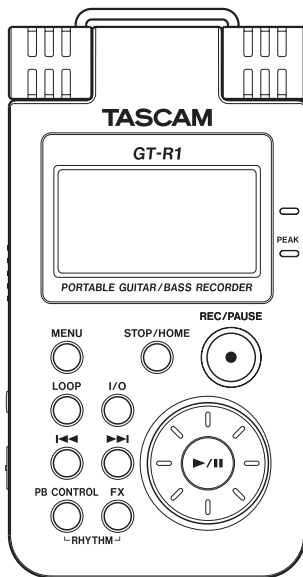

This device has a serial number located on the bottom panel. Please record it and retain it for your records.

Serial number:

IMPORTANT SAFETY PRECAUTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

FOR U.S.A.

TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Turn the power off when on an aircraft, because there is a danger of this device interfering with the safe navigation of the aircraft.

Declaration of Conformity

Model Number : GT-R1
Trade Name : TASCAM
Responsible party : TEAC AMERICA, INC.
Address : 7733 Telegraph Road, Montebello,
California, U.S. A.
Telephone number : 1-323-726-0303

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand,

tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Do not expose this apparatus to drips or splashes.

- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- The main plug is used as the disconnect device; the disconnect device should remain readily operable.
- An apparatus with Class I construction shall be connected to an AC outlet with a protective grounding connection.
- Batteries (battery pack or batteries installed) should not be exposed to excessive heat such as sunshine, fire or the like.
- Excessive sound pressure from earphones and headphones can cause hearing loss.

SAFETY INFORMATION

产品有毒有害物质或元素的名称及含量

机种: GT-R1		有毒有害物质或元素					
	品名	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
1	CHASSIS部份	○	○	○	○	○	○
2	PCB Assy部份	×	○	○	○	○	○
3	附属品部份	○	○	○	○	○	○
4	SEAL部份	○	○	○	○	○	○
5	包装部份	○	○	○	○	○	○
6	Battery部份	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。

×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

(针对现在代替技术困难的电子部品及合金中的铅)

For European Customers

Disposal of your old appliance

- 1 When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.



- 2 All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
- 3 The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
- 4 For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents

1—Introduction	6	6—Playing along with Tracks	23
About the Owner's Manual	6	Connecting a guitar or bass	23
Cleaning the unit	7	Perform along with a playing track	24
About fonts used in this guide	7	Using effects	24
2—Preparation	8	7—Playback Control Functions	26
Inserting an SD card	8	Changing playback speed	26
Powering the unit	9	Changing the playback pitch	28
Turning the power on and off	11	Reducing recorded part volume	29
Connecting to a computer by USB	11	8—Loop Playback	31
Preparation for monitoring	13	Using loop playback	31
Resetting the unit	13	9—Using the Rhythm Machine	32
3—Recording	14	Connecting an instrument	32
Recording with the built-in microphone	14	Setting the rhythm machine	32
Recording with other sources	17	Playing along with the rhythm machine	33
Erasing files	18	Recording with the rhythm machine	33
4—Playback	20	10—Overdubbing	35
5—Copying CD Tracks to the Unit	22	Preparation for overdubbing	35
		Overdubbing	36

1–Introduction

The GT-R1, a portable recorder that uses SD cards for data storage, is designed especially for guitar and bass players. In addition to recording with the built-in microphone, you can connect a guitar or bass to the dedicated jack and record what you play. You can also connect and record the line level output of a CD player or other external audio device. You can select among MP3 (44.1/48 kHz, 32 kbps–320 kbps) and WAV (44.1/48 kHz, 16/24-bit) audio recording formats. Moreover, with this unit, you can mix and record a sound input through the built-in mic or one of the input jacks with an audio file that is played back using the mix and record functions.

In addition, this unit has playback control functions that are useful during guitar and bass practice. These include the ability to slow playback without changing the pitch, a part cancel function to reduce the volume of recorded guitars, basses and other parts and a rhythm machine. Furthermore, you can apply built-in effects to the input signal. You can also record musical pieces that you are practicing using the unit's input jacks and copy music saved on a computer to this unit using a USB connection.

About the Owner's Manual

This Quick Start Guide explains the basic operations of the GT-R1 so that you can start using it soon after purchase. The Owner's Manual, has more detailed information about the GT-R1. A copy of the Owner's Manual is stored on the SD card included with this unit as an electronic file.

How to access the Owner's Manual

Insert the included SD card into the GT-R1, and use the included USB cable to connect this unit with a computer (See “Connecting to a computer by USB” on page 11 for more about how to make the connection). Inside the GT-R1 folder is a MANUAL folder that has a PDF file of the Owner's Manual. To open this file, you will need to install Adobe Reader on your computer (or use Preview in Mac OS X). You can download Adobe Reader for free from the Internet.

1-Introduction

NOTE

Please make one or more backup copies of the Owner's Manual data on different media (computer hard disk, CD-R, etc.).

What to do if you accidentally erase the Owner's Manual

If you should erase all your copies of the Owner's Manual, you can download a copy from the TASCAM web site (<http://www.tascam.com/>).

Cleaning the unit

Use a dry soft cloth to wipe the unit clean.

Do not clean the unit with a chemically treated cloth or substances such as benzene, thinner and alcohol because they might cause damage to the surface of the unit.

About fonts used in this guide

When we refer to a key or connector or control on the GT-R1, the typeface looks like this: **PLAY**.

When we refer to items shown on the display, the typeface looks like this: MENU.


2-Preparation

Inserting an SD card

Since this unit uses an SD card for recording and playback, you must insert an SD card before use.

NOTE

When purchased, this unit comes with a 1-GB SD card inserted. This card can be used for recording and playback as is. There is no need to reinsert it.

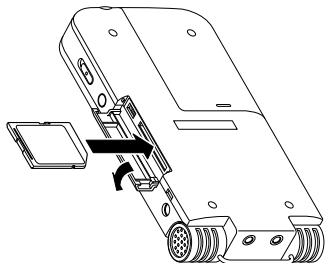


The SD card slot and the USB connector are under the cover on the left side panel.

Press the cover down in the direction of the arrow to open it. Insert the included SD card in the SD card slot and push it until it clicks fully into place.

Removing the SD card

Press the inserted SD card in gently and it will disengage from the unit so that you can pull it out completely.

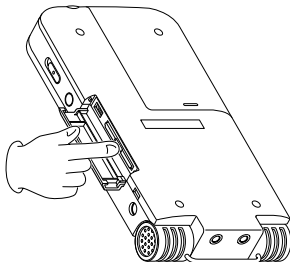

CAUTION

Do not remove the SD card during recording or playback, or when the unit is connected to the computer by USB.

2-Preparation


Powering the unit

The GT-R1 can be operated using a special lithium ion battery (BP-L2) designed for it (included and also available for purchase separately) or an AC adapter (PS-P520) that is available for purchase separately. Charge the battery or connect the AC adapter before using the unit.


Using the GT-R1 battery

When shipped new, the specialized battery (included or purchased separately) is not charged, so it must be charged before using the unit. Charge the battery by connecting the GT-R1 (with the battery inside) to a computer by USB.

- 1 Slide the battery case cover on the bottom of the unit to open it, and insert the GT-R1 battery that was included in the box.

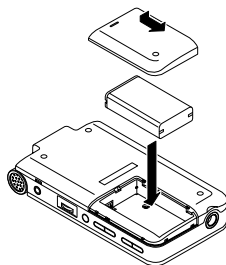


- 2 Open the cover on the left side panel and use the included USB cable to connect the unit to a USB port on a computer.

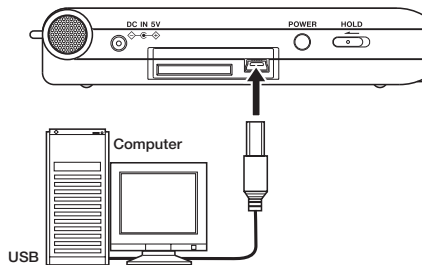


2-Preparation

When the USB connection is made, the unit starts to charge the battery and the charge indicator to the right of the screen lights orange. The light goes out when charging completes.

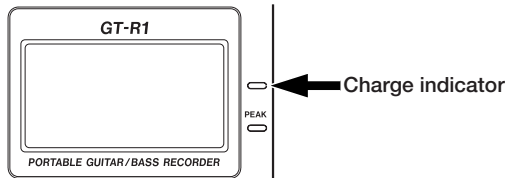

Using an AC adapter (purchased separately)

Connect a PS-P520 AC adapter (purchased separately) to the DC IN 5V jack.

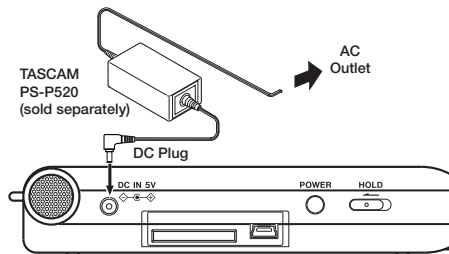


NOTE

- Even if the power for the unit is off, the battery charges when connected to a computer by USB. The computer may need to be ON to charge the battery.
- GT-R1 batteries can also be purchased separately, so you can prepare spare batteries as necessary.
- If you connect an AC adapter (purchased separately), it also charges the battery in the unit. The charge indicator lights during charging. Moreover, if the AC adapter is connected the battery charges even if the GT-R1 power is OFF.

2-Preparation

Turning the power on and off

To turn the power ON, press and hold the **POWER** key on the left side panel until “TASCAM GT-R1” appears on the display.

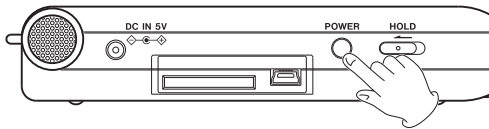

The Home Screen appears when the unit starts up.




To turn the power OFF, press and hold the **POWER** key until “PORTABLE GUITAR/BASS RECORDER” appears on the display.

Connecting to a computer by USB

In addition to charging the battery, connecting the GT-R1 to a computer using the included USB cable allows other functions to be performed including the copying of audio files. Connect the unit whenever you want to use one of these functions.

The following screen appears on the display of the unit when the unit and the computer are ON and you connect them with a USB cable (or when you turn the unit and the computer ON after connecting them with the USB cable).

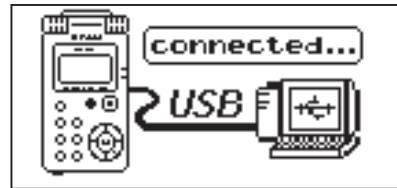


2-Preparation

When connected, the SD card inside the recorder will appear on the computer as an external drive named “GT-R1.” This drive contains folders named MANUAL, MUSIC and UTILITY. MANUAL contains the Owner's Manual as a PDF document.

To end the USB connection, first follow the procedures for your computer to disconnect the GT-R1 and then remove the USB cable.

 
See the computer manual for how to close the connection on the computer.

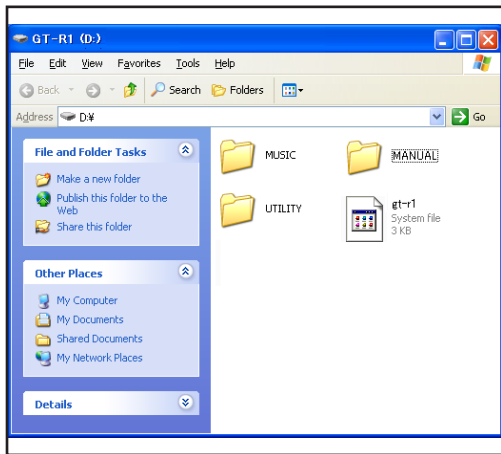

2-Preparation

Preparation for monitoring

Connect headphones or a monitoring system (speakers with built-in amplifiers, stereo system, etc.) to the Ω /LINE OUT jack.

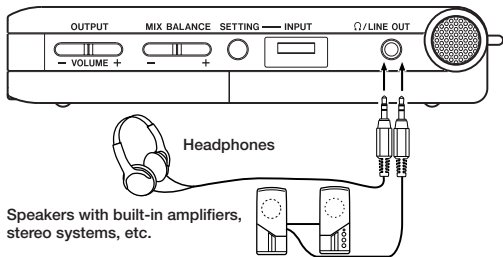


CAUTION

Use headphones to monitor when you are recording with a microphone. If you use speakers to monitor, the sound output from the speakers may also be recorded, causing a poor recording and even feedback.

Resetting the unit

The bottom panel of the unit has a reset hole.

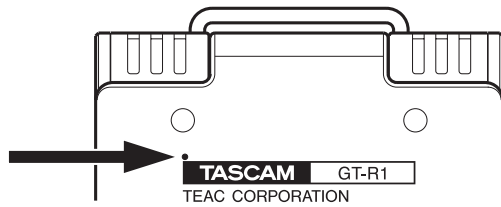

If the GT-R1 is behaving abnormally, push the end of a paperclip or similar item into this hole to press a button inside the unit. This turns the power OFF and resets the GT-R1's system.

CAUTION

Do not press the reset button when the unit is functioning properly.

3-Recording


Recording with the built-in microphone

Follow these procedures to use the built-in stereo microphone to make an ordinary stereo recording. Before beginning, confirm that an SD card is properly set in the unit, the unit is ON, and headphones are connected to the Ω /LINE OUT jack.

NOTE


The default setting for the GT-R1 is "INT/MIC" so steps 1–3 are not necessary when the unit is new.

- 1 Press the **SETTING** key on the right side panel, to open the Input Setting Screen.

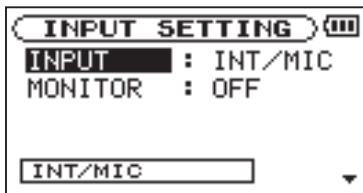

"INPUT" appears highlighted.

- 2 Press the **▶▶** key.

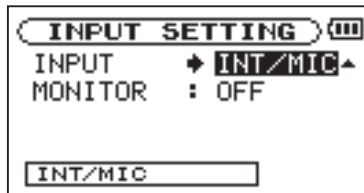

You can now select the input.


- 3 Use the wheel to select **INT/MIC**, setting the built-in microphone as the input source (unless something is connected to the **MIC IN** jack on the end of the unit).

To record a different source (guitar/bass, external microphone or **LINE IN** input), see "Recording with other sources" on page 17.

- 4 Press the **◀◀** key.

3-Recording

- 5 Use the wheel to select **GAIN** and press ►►.

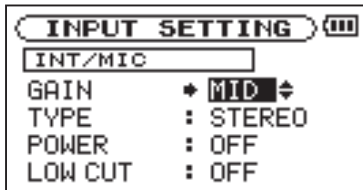

- 6 Use the wheel to set the **GAIN** value.

TIP

When shipped from the factory, GAIN is set to MID. If you are recording a band performance or other loud sound, set it to LOW. If you are recording a meeting or other quiet sound, set it to HIGH.


- 7 Press the **STOP/HOME** key to display the Home Screen.
- 8 Press the **REC/PAUSE** key to enable record standby.

The key flashes red and the display shows the Record Screen.



When set to record standby, you can monitor the input signal in the headphones.

- 9 Use the **INPUT** volume control on the right side panel to adjust the microphone input level.

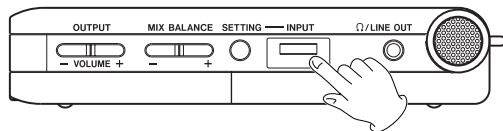

3-Recording



- 10 Use the **OUTPUT VOLUME** (+, -) keys as necessary to adjust the monitor volume.
- 11 Press the **REC/PAUSE** key again to start recording. The key lights red.
- 12 Press the **STOP/HOME** key to stop recording.
The recorded data is saved as a new audio file and the Home Screen reappears on the display.
The playback position is set at the beginning of the recorded audio file.

TIP

*In addition to adjusting the **INPUT** volume, try adjusting the distance between the microphone and the sound source as well as the microphone angle. The distance and angle can also change the sound character. (See "Adjusting the Angle of the Built-in Mic" in the Owner's Manual.)*

CAUTION

- The **PEAK** indicator monitors the maximum input level. If the **PEAK** indicator lights, use the **INPUT** volume control to lower the level.
- The recording level is shown by the **L/R** meter. If a mark remains at the right end of the bar (showing that the input level is too high), use the **INPUT** volume control to lower the input level, or lower the level of the effect that you are using with the **LVL** control on the Effect Screen.

NOTE

- Press the **REC/PAUSE** key to pause recording.
- At the factory default setting, recording is 16-bit WAV files, but the unit can also be set to record mp3 or 24-bit WAV files. Use the **REC SETTING** item on the Menu Screen. (See "Selecting the file type and sampling frequency" in the Recording chapter of the Owner's Manual.)
- Audio files recorded on the GT-R1 are automatically given a file name in the format of "GT" followed by six digits assigned in recording order. A file extension is added to the end of the file name according to the file type (.wav or .mp3). For example, if the first recorded file is WAV type, the file is named "GT000000.wav."

3–Recording

Recording with other sources

Instead of using the built-in microphone, you can record the sound of a guitar or bass or record the output signal from a mixer, audio device or other source.

To record a signal other than the built-in microphone, connect the sound source to the appropriate input jack on this unit. Set the **INPUT** item for that sound source on the Input Setting Screen (refer to steps 1–4 of “Recording with the built-in microphone” above).

All the procedures after making the input setting are the same as steps 5–12 in “Recording with the built-in microphone.”

Recording a guitar or bass

- 1 Connect a guitar or bass to the **GUITAR IN** jack (standard mono phone jack) at the end of the unit.
- 2 Set the **INPUT** item to “**GUITAR**” on the Input Setting Screen.

NOTE

*The mono **GUITAR IN** jack input signal is recorded on both the L and R channels.*

TIP

If you hear distortion when you plug in an active guitar or bass (one that contains an internal battery), turn the volume down on the instrument.

Recording a microphone with a mini-plug connector

- 1 Connect the microphone to the **MIC IN** jack (stereo mini-jack) on the end of the unit.
- 2 Set the **INPUT** item to “**INT/MIC**” on the Input Setting Screen.
- 3 Press the **◀◀** key to select the **INPUT** item, and turn the wheel to the right to show the **MIC** setting sub-menu where you can set stereo/mono, turn plug-in power ON and OFF, etc. See the Owner’s Manual for details.

3-Recording

Recording an external audio device

- 1 Connect the output jack of the external audio device to the **LINE IN** jack (stereo mini-jack) on the end of the unit.
- 2 Set the **INPUT** item to “**LINE**” on the Input Setting Screen.


NOTE

*The level of the signal input at the **LINE IN** jack is fixed so you cannot control the level with the **INPUT** volume. To adjust a line in level use the controls on the connected external device.*

Erasing files


If you want to erase a recorded file for any reason, you can erase unwanted files from the Browse Screen.

- 1 Press the **MENU** key to open the Menu Screen.

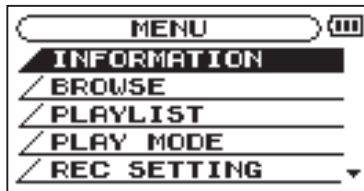

- 2 Use the wheel to select “**BROWSE**” and press the **►/II** key.

The Browse Screen opens.

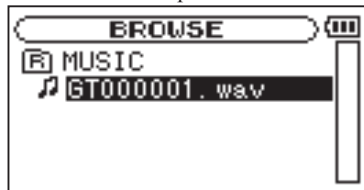

3-Recording

- 3 Use the wheel to select the file you want to erase and press the ►/|| key. The following pop-up appears.



- 4 Use the wheel to select “DELETE” and press the ►/|| key. The following confirmation screen appears.



- 5 Press the ►/|| key to erase the file.
Press the **STOP/HOME** key if you choose not to erase the file.


NOTE

In addition to erasing files, you can manage the folder structure of this unit, for example, to categorize recorded files. See the “Browse Screen” chapter in the Owner’s Manual for instructions on how to make folders, navigate within the screen and conduct other file operations.


4-Playback

Follow these procedures to play recorded files.

- 1 Press the ►/|| key to start playback.

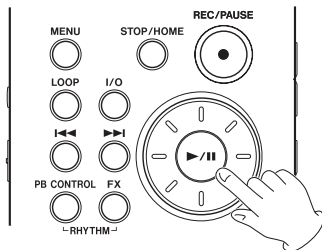


- 2 Use the **OUTPUT VOLUME** (+, -) keys to adjust the monitoring level.

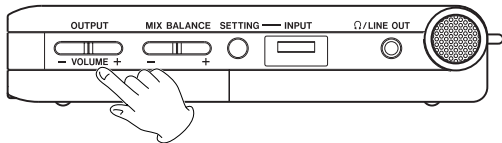

TIP

The playback position display bar on the Home Screen shows the current playback position of the file.

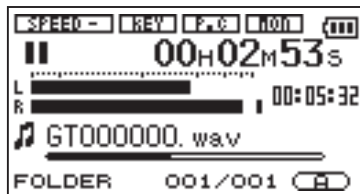


NOTE

After recording is finished, the playback position is automatically set at the start of the recorded file.

4-Playback

The volume position is shown in a bar in the lower part of the display during adjustment using the **OUTPUT VOLUME** keys.

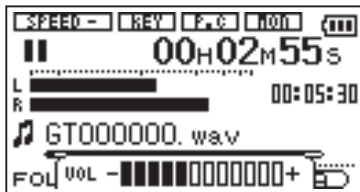

- 3 To stop playback, press either the ►/|| key or the **STOP/HOME** key.

Playback stops at the current position. To return to the beginning of the file, press the ◀◀ key.

NOTE

- When multiple files have been recorded, you can use the ◀◀/▶▶ keys to select a file.
- You can search in reverse by pressing and holding the ◀◀ key or search forward by pressing and holding the ▶▶ key.
- You can also use the wheel to change the playback position.

5–Copying CD Tracks to the Unit

Use the following procedures to transfer tracks from a CD to this unit so that you can use them for overdubbing or as rehearsal tracks for practicing guitar or bass and to use the playback control functions as described in the following sections. Transfer the tracks from CDs to your computer first before copying them to this unit.

NOTE

- *You can also record tracks to the SD card directly from CDs using the **LINE IN** jack.*
- *You can also use **DRM-free wav or mp3 files** that you have purchased online or prepared yourself.*

- 1 Use a computer software application (e.g. iTunes) to copy CD tracks to the computer as MP3 or WAV type files.

See the owner's manual or help files for specific operation procedures and other information related to the application or computer.

- 2 Connect the computer and the unit by USB and turn the power of both ON if necessary. (See “Connecting to a computer by USB” on page 11.)
- 3 Click the “GT-R1” drive that appears on the computer to open it and reveal “UTILITY,” “MUSIC” and “MANUAL” folders.
- 4 Drag-and-drop the files copied to the computer in step 1 to the “MUSIC” folder to copy these files to the SD card in the GT-R1.
- 5 When you have finished copying files, first follow the procedures for your computer to disconnect the GT-R1 and then detach the USB cable.

The Home Screen appears on the GT-R1 again.

6-Playing along with Tracks


You can play along on guitar or bass with a track you have recorded or copied from a computer.

CAUTION

- If you hear distortion when you plug in an active guitar or bass (one that contains an internal battery), turn the volume down on the instrument.
- If the Peak Indicator lights, use the INPUT volume control to lower the level.


Connecting a guitar or bass

- 1 Connect a guitar or bass to the **GUITAR IN** jack (standard mono phone jack) on the front panel.
- 2 Press the **SETTING** key on the right side panel to open the Input Setting Screen.

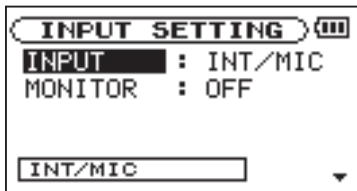

The INPUT item is selected.

- 3 Press the ►► key.
Now you can select input.

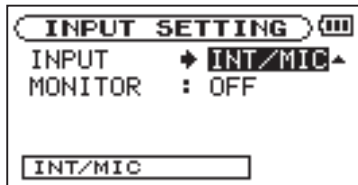

- 4 Use the wheel to select GUITAR.
- 5 Press the ◀◀ key.
- 6 Use the wheel to select the MONITOR item and press the ►► key.
- 7 Use the wheel to select ON, setting the unit to output the input signal constantly.
- 8 Press the **STOP/HOME** key to return to the Home Screen.
- 9 Adjust the input level with the INPUT volume control.

6-Playing along with tracks

Perform along with a playing track

- 1 Use the **◀◀/▶▶** keys to select an audio file for playback.
- 2 Press the **▶/||** key to start track playback.

TIP

By opening the Browse Screen from the Menu Screen, you can select tracks directly.

The mixed signal is output from the **Ω/LINE OUT** jack as you perform along on guitar or bass with the playing track. Use the **MIX BALANCE** keys to adjust the balance between the playback sound and input sound.

Using effects

This recorder has built-in guitar and bass effects. Follow these procedures to use these effects.

- 1 Press and hold the **FX** key to open the Effect Screen.



- 2 Use the wheel to select **SOURCE** and press the **▶▶** key.
- 3 Use the wheel to select **INPUT** and apply the effect to the guitar or bass sound.

NOTE

*If you select **PLAY** instead of **INPUT**, the effect will be applied to the playback sound.*

6-Playing along with tracks

- 4 Press the **◀◀** key to select the **SOURCE** item again. Then, use the wheel to select the **BANK** item.

Press the **▶▶** key and use the wheel to cycle the **BANK** display between **A**, **B**, **C**, **D** and **E**.

- 5 Press the **◀◀** key to select the **BANK** item again. Then, use the wheel to highlight **PRESET** and press the **▶▶** key.
- 6 Use the wheel to select the desired effect preset and press the **◀◀** key.
- 7 Use the wheel to select **LVL** and press the **▶▶** key.
- 8 Use the wheel to adjust the **LVL** (effect output level) and press the **◀◀** key.
- 9 Press the **STOP/HOME** key to return to the Home Screen
- 10 Press the **FX** key briefly. The bank icon will appear highlighted (e.g. **Ⓜ**), indicating that the effects are now **ON**.

TIP

- You can turn the effect **ON** and **OFF** at any time by pressing the **FX** key briefly.
- You can also adjust the effect parameters of the selected effect preset.

NOTE

Please see the "Effect Preset List" in the Owner's Manual for more information about the presets.


7-Playback Control Functions

This unit has playback control functions that are useful when you want to practice playing guitar or bass. By using these functions during playback you can change the speed or pitch of tracks that you have transferred from your computer (from CDs and other sources) or that you have recorded with this unit.

Changing playback speed


You can change the speed of track playback, which is helpful when practicing a difficult phrase, for example. In addition, by turning the VSA function ON, you can change the speed without changing the pitch. The following procedure explains how to change the speed without changing the pitch.

- 1 From the Home Screen, press and hold the **PB CONTROL** key until the Playback Control (PB CONTROL) Screen appears.

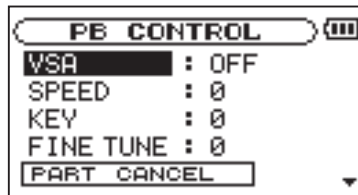


- 2 Use the wheel to select "SPEED" and press the **▶▶** key.

The current **SPEED** setting is highlighted.

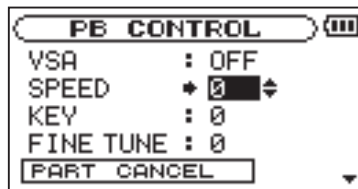


- 3 Use the wheel to set the speed value.
The value shown is a percentage and it can be set between -50% and +16%.
- 4 Press the **◀◀** key and "SPEED" appears highlighted again.

7-Playback Control Functions

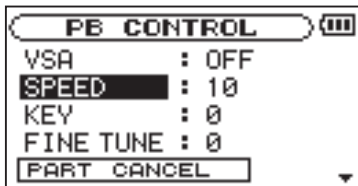


- 5 Use the wheel to select “VSA” and press the ►► key.

The current VSA setting is highlighted.

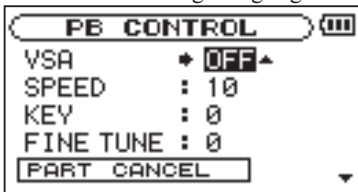

- 6 Use the wheel to select “ON”.
- 7 Press the STOP/HOME key to return to the Home Screen.

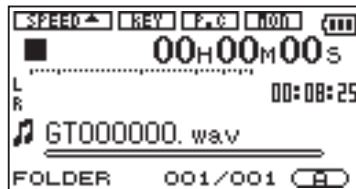

- 8 Press the PB CONTROL key.

The **SPEED▲** icon appears highlighted in inverse in the upper part of the display to show that a speed control function (VSA and/or SPEED function) is active.

TIP

When the Home Screen is open, you can turn the speed control function ON or OFF at any time by briefly pressing the PB CONTROL key.

NOTE

According to the speed control setting, the **SPEED▲** icon shows “▲,” “▼” or “—”.


“▲” appears when the speed value is positive, “▼” when the speed value is negative, and “—” when the speed value is 0.

7-Playback Control Functions


Changing the playback pitch

You can change the pitch of a track being played back, which is convenient for playing along with a song in a key that is easier for you, for example.


- 1 When the Home Screen is displayed, press and hold the **PB CONTROL** key to open the Playback Control Screen.

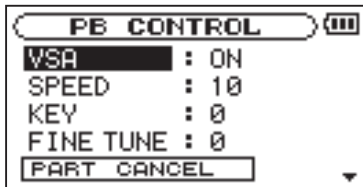

- 2 Use the wheel to select “KEY” and press the ►► key. The current KEY value appears highlighted in inverse.

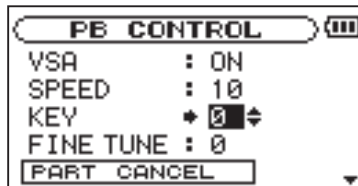

- 3 Use the wheel to change the pitch in semitones. You can raise or lower the pitch up to 6 semitones.
- 4 Press the **STOP/HOME** key to return to the Home Screen.

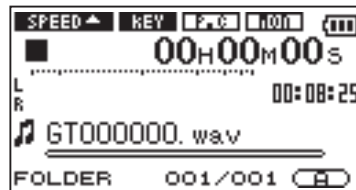

The **KEY** icon appears highlighted in inverse in the upper part of the display to show that the key control function is operative.

7-Playback Control Functions


Reducing recorded part volume

When using most commercially available sound sources (CDs, etc.), you can reduce the guitar and bass sounds using the Part Cancel function.


NOTE

The effectiveness of this function depends on the sound source.


- 1 When the Home Screen is displayed, press and hold the **PB CONTROL** key to open the Playback Control Screen.

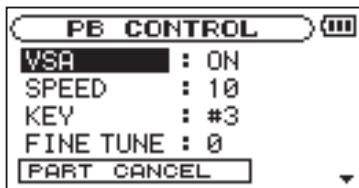

- 2 Use the wheel to highlight the "PART CANCEL" item and press the ►► key.

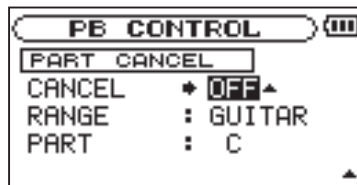


- 3 Use the wheel to select "ON".
To reduce a bass sound, follow steps 4 and 5.
To reduce a guitar sound, skip steps 4 and 5.
- 4 Press the ◀◀ key to return to the **CANCEL** item. Then, use the wheel to select the **RANGE** item and press the ►► key.
- 5 Use the wheel to select **BASS**.

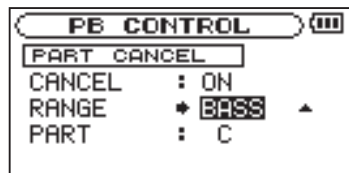

7-Playback Control Functions

- 6 Press the **STOP/HOME** key to return to the Home Screen display.

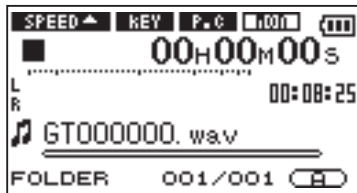

The **P.C.** icon appears highlighted in inverse in the upper part of the display to show that the part cancel function is operative.

TIP

- With the **RANGE** and **PART** items, you can set the pitch range and stereo position that is affected by the Part Cancel function. Changing these settings might increase the effectiveness of this function. For details, see "Reducing the sound of guitar and bass" in the *Special Playback Functions* chapter of the Owner's Manual.
- Turn the **MONITOR** item **ON** when you want to mix input from the **GITAR IN** jack or other source to practice playing guitar or bass while controlling playback. Follow the procedures in "Connecting a guitar or bass" on page 23 in 6-Playing along with tracks.

8–Loop Playback

Using loop playback

You can choose part of a track for the GT-R1 to play repeatedly.

- 1 Press the ►/|| key to start playback.
- 2 Press the I/O key at the point where you want the loop playback interval to start.
- 3 Press the I/O key again at the point where you want the loop playback interval to end. Loop playback starts automatically.

To stop loop playback, press the LOOP key or the I/O key.

- If you press the **LOOP** key, the loop interval setting is saved, and you can press the **LOOP** key again to start loop playback again.
- If you press the **I/O** key, the loop interval setting is erased.

NOTE

You can also repeat playback of a single track or all the tracks in the playback area. (See the Loop, Repeat and Single Playback chapter in the Owner's Manual.)

9–Using the Rhythm Machine

You can play along on a guitar or bass with the built-in rhythm machine.


Connecting an instrument

Follow the procedures in "Connecting a guitar or bass" in "6–Playing along with Tracks" on page 23) to connect a guitar or bass and make the necessary settings on this device.

Setting the rhythm machine

- 1 When the Home Screen is open, press the **PB CONTROL** and **FX** keys at the same time.

The Rhythm Screen appears and the unit enters rhythm mode.

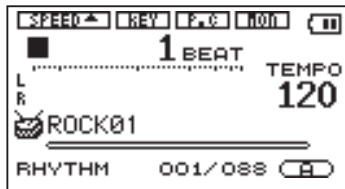

- 2 Press the **▶/||** key. The rhythm machine starts. Pressing the **▶/||** key stops and starts the rhythm machine.

The first time you use the rhythm machine, a rhythm plays according to the factory default pattern and tempo. You can set the pattern and tempo while listening to the rhythm.

- 3 Use the **◀◀/▶▶** key to select a preset pattern.
- 4 Use the wheel to adjust the tempo.

NOTE

*To quit rhythm mode and return to the Home Screen (ordinary mode), press the **PB CONTROL** and **FX** keys at the same time again.*

TIP

Using the Rhythm Screen, you can set the unit to play a count-in before the rhythm starts. (See the "Using the Rhythm Machine" chapter in the Owner's Manual.)

9-Using the rhythm machine

Playing along with the rhythm machine

Follow these steps to play along with the rhythm machine.

- 1 After opening the Rhythm Screen, press the **▶/||** key to start the rhythm machine.

When you play guitar or bass while the rhythm machine is playing, the mixed signal is output from the **Ω/LINE OUT** jack.

- 2 Use the **MIX BALANCE** keys to adjust the balance between the sounds of the rhythm machine and your guitar or bass.


NOTE

You can apply the effects to the sound of either the rhythm machine or your guitar or bass. (See "Using effects" on page 24.)

Recording with the rhythm machine

In addition to playing a guitar or bass along with the rhythm machine, you can record their signals mixed together.

- 1 When the Rhythm Screen is displayed, press the **REC/PAUSE** key. The unit starts record standby and the key blinks red. The display changes to the Recording Screen.

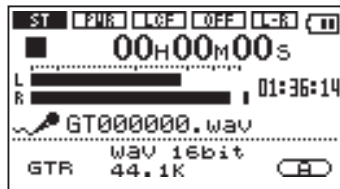

9–Using the rhythm machine

- 2 Press the **REC/PAUSE** key again.

The rhythm machine starts and recording begins at the same time. Play your guitar or bass along with the rhythm machine.

- 3 To stop recording, press the **STOP/HOME** key.

The display returns to the Rhythm Screen and an audio file is created.

NOTE

You cannot play a recorded file when in rhythm mode. To play a file, use the following operation to exit rhythm mode and return to ordinary mode.

- 4 Press the **PB CONTROL** and **FX** keys at the same time to end rhythm mode and return to ordinary mode. The Home Screen opens.

10–Overdubbing

In overdubbing, you can play an audio file saved on the SD card and mix in and record a new sound. For example, you can record playing guitar or bass along to a backing track.

The following procedures explain how to use the **GUITAR IN** jack to overdub guitar and bass parts while monitoring an already saved audio file from its beginning.

NOTE


*This operation example mixes in the sound of a connected guitar or bass, but you can also mix in the sound from the built-in microphone or the **LINE IN** input. See the Owner's Manual for additional information.*

Preparation for overdubbing

After connecting a guitar or bass to the **GUITAR IN** jack (standard mono phone) on the front panel, follow the procedures below to set the input to the **GUITAR IN** jack, turn constant monitoring of the input ON and adjust the input level.

Setting the input

- 1 Press the **SETTING** key on the right side panel to open the Input Setting Screen.

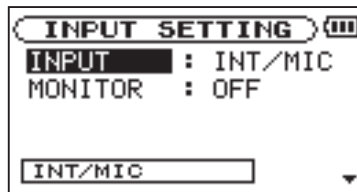

INPUT is selected.

- 2 Press the **▶▶** key to enable selection of the input source.
- 3 Use the wheel to select **GUITAR**.

10–Overdubbing

When preparing to overdub, use the following procedures to turn the **MONITOR** item **ON**. When **MONITOR** is **ON**, the input signal is always output through the **Ω/LINE OUT** jack.

- 4 Press the **◀◀** key.
- 5 Use the wheel to select the **MONITOR** item and press the **▶▶** key.
- 6 Use the wheel to select **ON**.
- 7 Press the **STOP/HOME** key to open the Home Screen.

Set this way, the mixed input and playback signals are output from the **Ω/LINE OUT** jack.


Overdubbing

- 1 Use the **◀◀** and **▶▶** keys to select the audio file for playback.

NOTE

If you want to mix the sound of the most recently recorded audio file, it is already selected, so the above operation is unnecessary.

The selected file name appears on the screen.

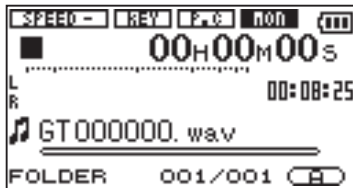

- 2 Press the **▶/||** key to start playback, and check the volume balance with the connected guitar or bass sound.


NOTE

*Use the **INPUT** volume control on the right side panel to adjust the input level of the guitar or bass. If the peak indicator lights, lower the input level.*

*If a bar appears at the right end of the **L/R** meter, use the **INPUT** volume control to lower the input level and/or lower the output level (**LVL**) on the Effect Screen if you are using an effect.*

10–Overdubbing

- 3 Use the **MIX BALANCE** keys to adjust playback volume as necessary.

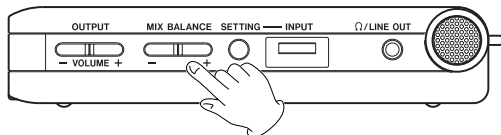

The volume position is shown in a bar in the lower part of the display during adjustment using the **MIX BALANCE** keys.

NOTE


*If a bar appears at the right end of the L/R meter during playback, lower the input level or use the **MIX BALANCE** keys to lower the playback level.*

- 4 Use the **◀◀** key to return to the beginning of the playing audio file.


NOTE

You can start overdubbing from the middle of a track that you want to mix with your input sound. Search to the desired position and start playback.

- 5 Press the **REC/PAUSE** key to put the unit in record standby. The key flashes red and an **OVERDUB** pop-up appears on the screen.

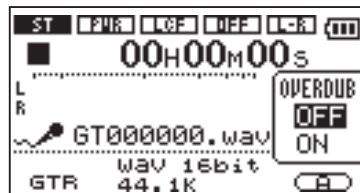

- 6 Use the wheel to select **ON** (highlighted in inverse).

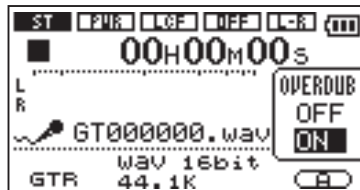

10–Overdubbing

- 7 Press the **REC/PAUSE** key again. Playback of the file selected in step 1 and recording of a new file start at the same time, so you can begin playing along with the prerecorded music immediately.
- 8 Press the **STOP/HOME** key to stop recording.

NOTE

- *The mixed signal is recorded as a new file. The original playback file is not erased.*
- *By recording repeatedly in OVERDUB mode, you can use the unit to overdub multiple parts.*
- *If you reduced the playback sound balance in step 3 above before overdubbing, when you play back the newly created audio file, its volume will be relatively quiet compared to when monitoring during recording. In this case, use the MIX BALANCE + key to maximize the playback level.*



GT-R1

TEAC CORPORATION

Phone: +81-42-356-9143
1-47 Ochiai, Tama-shi, Tokyo 206-8530 Japan

www.tascam.com

TEAC AMERICA, INC.

Phone: +1-323-726-0303
7733 Telegraph Road, Montebello, California 90640 U.S.A.

www.tascam.com

TEAC CANADA LTD.

Phone: +1905-890-8008 Facsimile: +1905-890-9888
5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada

www.tascam.com

TEAC MEXICO, S.A. De C.V.

Phone: +52-55-5010-6000
Río Churubusco 364, Colonia Del Carmen, Delegación Coyoacán, CP 04100, México DF, México

www.tascam.com

TEAC UK LIMITED

Phone: +44-8451-302511
Suites 19 & 20, Building 6, Croxley Green Business Park, Hatters Lane, Watford, Hertfordshire. WD18 8TE, U.K.

www.tascam.co.uk

TEAC EUROPE GmbH

Phone: +49-611-71580
Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany

www.tascam.de

Printed in China