

TASCAM

FR-AV2

LINEAR PCM RECORDER

D01431600B

Safety guide

Items included with this product

This product includes the following items.
Take care when opening the package to avoid damaging the items.
Keep the packing materials for transportation in the future.
Please contact the store where you purchased this unit if any of these items are missing or have been damaged during transportation.

- Main unit × 1
- Safety guide (this document) including warranty × 1
- TASCAM ID registration guide × 1

Accessories sold separately

The following items are necessary to use (record with) this product. Please purchase them separately.

- microSD card*
- 3 AA batteries

*The term "microSD/microSDHC/microSDXC memory card" is abbreviated as "microSD card". A list of microSD cards that have been confirmed for use with this unit can be found on the TASCAM website. You can also contact TASCAM customer support for information.

IMPORTANT SAFETY INSTRUCTIONS

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

1. Read these instructions.
 2. Keep these instructions.
 3. Heed all warnings.
 4. Follow all instructions.
 5. Do not use this apparatus near water.
 6. Clean only with dry cloth.
 7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 9. Only use attachments/accessories specified by the manufacturer.
 10. Unplug this apparatus during lightning storms or when unused for long periods of time.
 11. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
 - If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

WARNING

To prevent possible hearing damage, do not listen at high volume levels for long periods.



CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

CAUTION

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.
- Installed battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas.

For U.S.A.

Supplier's Declaration of Conformity

Model Number: FR-AV2
Trade Name: TASCAM
Responsible party: TEAC AMERICA, INC.



Address: 14525 Valley View Ave., Suite I, Santa Fe Springs, California 90670, U.S.A.
Telephone number: 1-323-726-0303

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- a) Reorient or relocate the receiving antenna.
- b) Increase the separation between the equipment and receiver.
- c) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- d) Consult the dealer or an experienced radio/TV technician for help.

For Canada

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

This product complies with the European Directives request and the other Commission Regulations.

This product complies with applicable UK regulations.

CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (+/-) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose batteries, isolate their terminals with insulation tape or something like that to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.
- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.
- The unit power should be off when you install and replace batteries.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.
- Do not disassemble a battery. The acid inside the battery could harm skin or clothing.

For European Customers

Disposal of electrical and electronic equipment and batteries and/or accumulators

- (a) All electrical/electronic equipment and waste batteries/accumulators should be disposed of separately from the municipal waste stream via collection facilities designated by the government or local authorities.
- (b) By disposing of electrical/electronic equipment and waste batteries/accumulators correctly, you will help save valuable resources and prevent any potential negative effects on human health and the environment.
- (c) Improper disposal of waste electrical/electronic equipment and batteries/accumulators can have serious effects on the environment and human health because of the presence of hazardous substances in the equipment.
- (d) The Waste Electrical and Electronic Equipment (WEEE) symbols, which show wheeled bins that have been crossed out, indicate that electrical/electronic equipment and batteries/accumulators must be collected and disposed of separately from household waste. If a battery or accumulator contains more than the specified values of lead (Pb) and/or cadmium (Cd) as defined in the Battery Regulation (EU) 2023/1542, then the chemical symbols for those elements will be indicated beneath the WEEE symbol.
- (e) Return and collection systems are available to end users. For more detailed information about the disposal of old electrical/electronic equipment and waste batteries/accumulators, please contact your city office, waste disposal service or the shop where you purchased the equipment.



セーフティガイド

本製品の構成

本製品の構成は、以下の通りです。
梱箱は本体に損傷を与えないよう慎重に行ってください。
梱装箱と梱装箱材は、後日輸送するときのために保管しておいてください。

付属品が不足している場合や輸送中の損傷が見られる場合は、お買い上げの販売店にお問い合わせください。

- 本体 × 1
- セーフティガイド（本書、保証書付き）× 1
- TASCAM ID 登録ガイド × 1

別売品

本製品を使用（録音）するためには以下の品目が必要です。別途お買い求めください。

- microSD カード*
- 単 3 形電池 × 3 本

*「microSD / microSDHC / microSDXC メモリーカード」のことを「microSD カード」と表記します。本機にて動作が確認された microSD カードのリストが、TASCAM のウェブサイトに掲載されています。もしくは、TASCAM カスタマーサポートまでお問い合わせください。ご使用に際しては動作確認済みの microSD カードの使用を強く推奨します。

安全にお使いいただくために

製品を安全に正しくお使いいただき、あなたや他の人々への危害や財産への損害を未然に防止するために、以下の注意事項を必ずお読みください。

	警告	以下の内容が無視して誤った取り扱いをする、人が死亡または重傷を負う可能性が想定される内容を示しています。
	注意	万一、異常が起きたら 煙が出たり、変なにおいや音がするときは 機器の内部に異物や水などが入ったときは この機器を落としたり、カバーを破損したときは 異常状態のまま使用すると、火災・感電の原因となります。 販売店またはティアック修理センター（本書に記載）に修理をご依頼ください。 この機器の隙間などから内部に金属類や燃えやすい物などを差し込みたり、落としたりしない 火災・感電の原因となります。 航空機の離着陸時には使用しない 航空機の運航の安全に支障を及ぼす恐れがあるため、離着陸時の使用は航空法令により制限されていますので、離着陸時は本機の電源をお切りください。 この機器のカバーは絶対に外さない カバーを外すと、または改造すると、火災・感電の原因となります。 内部の点検・修理は販売店またはティアック修理センター（本書に記載）にご依頼ください。 この機器を改造しない 火災・感電の原因となります。 イヤホンやヘッドホンからの過度の音圧は、聴覚障害の原因となります。聴覚障害の可能性を防ぐために、長時間、大音量で聴かないでください。
	注意	以下の内容が無視して誤った取り扱いをする、人が重傷を負う可能性が想定される内容および物的損害のみが発生が想定される内容を示しています。
	指示	オーディオ機器を接続する場合は、各々の機器の取扱説明書をよく読み、電源を切り、説明にしたがって接続する また、接続は指定のコードを使用する 電源を入れる前には、音量を最小にする 突然大きな音が出て、聴力障害などの原因となることがあります。また、モニター機器などを破損する原因となることがあります。
	禁止	ぐらいついた台の上や傾いた所など不安定な場所に置かない 湿気やほこりの多い場所に置かない。風呂、シャワー室では使用しない 調理台や加湿器のそばなど油煙や湿気が当たる場所に置かない 火災・感電やけがの原因となることがあります。
	禁止	濡れた手でコネクターの抜き差しをしない 感電の原因となることがあります。
	注意	5 年に 1 度は、機器内部の掃除を取売店またはティアック修理センター（本書に記載）にご相談ください。 内部にはこりがたまったまま、長い間掃除をしないと火災や故障の原因となることがあります。特に、湿気の多くなる梅雨期の前に行うと、より効果的です。なお、掃除費用については、ご相談ください。

設置上の注意

- 本機の動作保証温度は、摂氏 0 度～ 40 度です。
- 次のような場所に設置しないでください。音質低下の原因、または故障の原因となります。
 - 振動の多い場所
 - 窓際などの直射日光が当たる場所
 - 暖房器具のそばなど極端に温度が高い場所
 - 極端に温度が低い場所
 - 湿気の多い場所や風通しが悪い場所
 - ほこりの多い場所
 - 直接雨などの水が当たる場所
- パワーアップなど熱を発生する機器の上に本製品を置かないでください。

製品のお手入れ

製品の汚れは、柔らかい布でからぶきしてください。化学そうじ、ベンジン、シンナー、アルコールなどで拭かないでください。表面を傷める、または色落ちさせる原因となります。

結露について

本製品を寒い場所から暖かい場所へ移動したときや、寒い部屋を暖めた直後など、気温が急激に変化すると結露を生じることがあります。結露したときは、約 1～2 時間放置した後、電源を入れてお使いください。

電池の取り扱いについて

本機は、電池を使用しています。誤って使用すると、発熱、発火、液漏れなどを避けるため、以下の注意事項を必ず守ってください。

	警告	電池に関する警告
	禁止	乾電池は絶対に充電しない 破裂、液漏れにより、火災・けがの原因となります。
	強制	電池を入れるときは、極性表示（プラスとマイナスの向き）に注意し、電池ケースに表示されている通りに正しく入れる
	強制	間違えると電池の破裂、液漏れにより、火災・けがや周囲を汚損する原因となることがあります。
	強制	長時間使用しないときは電池を取り出しておく 液が漏れて火災・けが、周囲を汚損する原因となる場合があります。もし液が漏れた場合は、電池ケースに付いた液をよく拭き取ってから新しい電池を入れてください。また、万一漏れた液が身体に付いたときは、水でよく洗い流してください。
	禁止	指定以外の電池は使用しない 新しい電池と古い電池、または種類の違う電池を混ぜて使用しない
	禁止	破裂・液漏れにより、火災・けがや周囲を汚損することがあります。
	禁止	炎天下の車内や暖房器具のそばなど、温度が高くなる場所で保管しない 本体の変形によるショートや発火、故障、電池の劣化の原因となります。
	注意	電池に関する注意
	禁止	金属製の小物類と一緒に携帯、保管しない ショートを液漏れや破裂などの原因となることがあります。
	分解禁止	分解しない 電池内の酸性物質により、皮膚や衣服を損傷する恐れがあります。
	注意	保管や廃棄をする場合は、他の電池や金属の物と接触しないようにテープなどで端子を絶縁してください。 使い終わった電池は、電池に記載された廃棄方法、もしくは各市町村の廃棄方法にしたがって捨ててください。

WARRANTY/ 保証書

< In the United States >

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This warranty is only valid within the United States when product is purchased within the United States.

WHAT IS COVERED AND WHAT IS NOT COVERED

Except as specified below, this warranty covers all defects in material and workmanship in the product. The following are not covered by the warranty:

1. Damage to or deterioration of the external cabinet or surface.
2. Damage resulting from accident, misuse, abuse, or neglect.
3. Damage resulting from failure to perform basic daily maintenance and/or calibration, or otherwise resulting from failure to follow instructions contained in the product owner's manual.
4. Damage occurring during shipment of the product (claims must be presented to the carrier).
5. The use of non-TEAC parts and services, unauthorized service technicians and do-it-yourself repairs are not eligible for warranty reimbursement.
6. Damage resulting from causes other than product defects, including lack of technical skill, competence, or experience of the user.
7. Damage to any unit which has been altered or on which the serial number has been defaced, modified, or removed.
8. Warning: For TEAC products that are FDA and/or FAA certified the use of non-TEAC parts, unauthorized service technicians and do-it-yourself repairs could de-certify the unit.
9. Products not purchased from an authorized TASCAM dealer in the United States.

WHO MAY ENFORCE THE WARRANTY

This warranty may be enforced only by the original purchaser.

LENGTH OF WARRANTY

One (1) year including parts and labor from the date of original purchase.

WHAT WE WILL PAY FOR

We will pay all labor and material expenses for items covered by the warranty. Payment of shipping charges is discussed in the next section of this warranty.

HOW YOU CAN GET WARRANTY SERVICE

Your unit must be received by an authorized TASCAM service station in the United States. (This warranty is not enforceable outside the US.) If you are unable to locate an authorized TASCAM service station in your area, please contact us. We either will refer you to an authorized service station or instruct you to return the unit to the factory. Whenever warranty service is required, you must present both the original dated sales receipt and this warranty statement as proof of warranty coverage. You must pay any shipping charges if it is necessary to ship the product for service. However, if the necessary repairs are covered by the warranty, we will pay return surface shipping charges to any destination within the United States.

LIMITATION OF IMPLIED WARRANTIES

Any implied warranties, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, are limited in duration to the length of this warranty.

EXCLUSION OF DAMAGES

TEAC's liability for any defective product is limited to repair or replacement of the product, at TEAC's option. TEAC shall not be liable for:

1. Damages based upon inconvenience, loss of use of the product, loss of time, interrupted operation or commercial loss; or
2. Any other damages, whether incidental, consequential or otherwise. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitations of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

To Locate an Authorized Service Center in Your Area:

Online:
https://tascam.com/us/support/service_center
Email product support:
<https://tascam.com/us/support/contact>
Telephone:
(323) 726-0303 (hours of operation 8:30 AM until 5:00 PM pacific time)
Via US mail:
TASCAM Professional Division
TEAC America, Inc.
14525 Valley View Ave., Suite I, Santa Fe Springs, California 90670
Voice: (323) 726-0303
Fax: (323) 978-5192
Web: <https://tascam.com/us/>

Model/Modèle/ Modell/
Modello/Modelo/型号/型名

FR-AV2

Serial No./N° de série/Seriennummer/
Numero di serie/Número de serie/序列号/機番

Date of purchase/Date de l' achat/Datum des Kaufs/
Data dell' acquisto/Fecha de compra/购买日期/お買い上げ日

Owner's name/Nom du propriétaire/Name des Eigentümers/
Nome del proprietario/Nombre del propietario/顧客姓名/お名前

Address/Adresse/Adresse/
Indirizzo/Dirección/顧客地址/ご住所

Dealer's name/Nom du revendeur/Name des Händlers/
Nome del rivenditore/Nombre del propietario/顧客姓名/販売店名

Dealer's Address/Adresse de l'enseigne du détaillant/
Indirizzo del commercialista/Dirección del establecimiento/販売店住所/販売店名

Memo/修理メモ

お客様にご記入いただいた保証書の控えは、保証期間内のサービス活動およびその後の安全点検活動のために記載内容を利用させていただきます場合がありますので、ご了承ください。

TASCAM
<https://tascam.jp/int/>

ティアック株式会社
〒206-8530 東京都多摩市落合1-47

