

TASCAM[®]

TEAC PROFESSIONAL



D01089720B

SS-R1

SS-R05

Solid State Stereo Audio Recorder

OWNER'S MANUAL

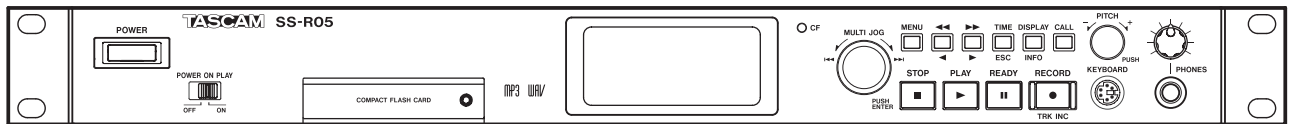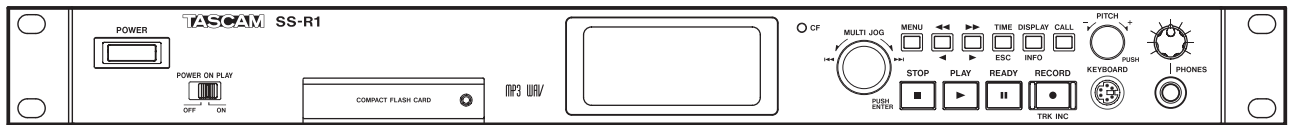

IMPORTANT SAFETY PRECAUTIONS



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number _____

Serial number _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

For U.S.A.

TO THE USER

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CAUTION

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.

CE Marking Information

- a) Applicable electromagnetic environment: E4
- b) Peak inrush current: 17 A

In North America use only on 120V supply.

产品有毒有害物质或元素的名称及含量

机种: SS-R1/SS-R05		有毒有害物质或元素					
	品名	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
1	CHASSIS部份	○	○	○	○	○	○
2	PCB Assy部份	×	○	○	○	○	○
3	线材部份	○	○	○	○	○	○
4	附属品部份	×	○	○	○	○	○
5	电源部份	×	○	○	○	○	○
6	LABEL部份	○	○	○	○	○	○
7	包装部份	○	○	○	○	○	○

○: 表示该有毒有害物质在该部件所有均质材料中的含有量均在 SJ/T11363-2006 标准规定的限量要求以下。

×: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

(针对现在代替技术困难的电子部品及合金中的铅)

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
- 2 Keep these instructions.
- 3 Heed all warnings.
- 4 Follow all instructions.
- 5 Do not use this apparatus near water.
- 6 Clean only with dry cloth.
- 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11 Only use attachments/accessories specified by the manufacturer.
- 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

- Do not expose this apparatus to drips or splashes.
- Do not place any objects filled with liquids, such as vases, on the apparatus.
- Do not install this apparatus in a confined space such as a book case or similar unit.
- The apparatus draws nominal non-operating power from the AC outlet with its POWER or STANDBY/ON switch not in the ON position.
- The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
- The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
- Products with Class I construction are equipped with a power supply cord that has a 3-prong grounding plug. The cord of such a product must be plugged into an AC outlet that has a protective grounding connection.
- If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
- CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.
- Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.
- If you are experiencing problems with this product, contact TEAC for a service referral. Do not use the product until it has been repaired.

For the customers in Europe

WARNING

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Pour les utilisateurs en Europe

AVERTISSEMENT

Il s'agit d'un produit de Classe A. Dans un environnement domestique, cet appareil peut provoquer des interférences radio, dans ce cas l'utilisateur peut être amené à prendre des mesures appropriées.

Für Kunden in Europa

Warnung

Dies ist eine Einrichtung, welche die Funk-Entstörung nach Klasse A besitzt. Diese Einrichtung kann im Wohnbereich Funkstörungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen durchzuführen und dafür aufzukommen.

Contents

1 – Introduction	6	A-B Repeat playback.....	26
Features of the SS-R1/SS-R05	6	Pitch Control playback.....	26
Supplied accessories	6	Specifying the Pitch Step.....	27
Rack-mounting the unit	6	Key Control playback.....	27
About this manual	6	Using the remote's dedicated key to turn	
Media considerations	7	Key Control on/off.....	28
Environmental considerations	7	Auto Cue function	28
Beware of condensation	7	Using the remote's dedicated key to turn	
Connections.....	7	Auto Cue on/off.....	29
Control connections (SS-R1 only).....	8	Auto Ready function	29
2 – Controls and connectors	9	Turning the Auto Ready function on/off	
Front panel	9	from the front panel	29
Rear panel	10	Call function.....	30
Remote control unit (RC-SS1)	11	Incremental Playback.....	30
The home screen.....	13	Using the remote's dedicated key	30
Various indicators	14	Using the menu to make settings.....	31
3 – Menu screens	15	Playing back in monaural	31
Menu structure	15	Resume Playback.....	32
Operations in the menu screens.....	16	Flash Start function	32
4 – Preparations	17	End of disc/track message (EOM)	
Connections.....	17	(SS-R1 only)	33
Turning the power on.....	18	Specifying an EOM tally output trigger	33
Setting the date and time	18	Example of actual use	33
Adjusting the display	19	6 – Recording	34
Adjusting the contrast.....	19	Unexpected power interruptions	34
Adjusting the brightness.....	19	Selecting the input source	34
Inserting a CompactFlash card.....	20	Using the dedicated remote key to	
About the door lock	20	select the source	34
Removing the card.....	20	Using the menu to select the source	34
5 – Playback.....	21	Input source indicator	35
Files that can be played.....	21	Specifying the recording file format.....	35
Tracks and files.....	21	Using the sampling rate converter	36
Play area	21	Monitoring the input signal.....	36
Selecting the type of play area.....	21	Adjusting the input signal level and	
Selecting the current folder or current		balance	37
playlist.....	22	Basic recording operation	37
Basic playback operations	22	Switching the recording time display	
Playback.....	22	mode.....	38
Selecting a track.....	22	Sync recording.....	39
Skipping to the previous or next track.....	22	Making settings	39
Specifying a track number	23	Sync Record operation.....	40
Fast-forward/rewind search	23	Auto Track function.....	41
Time search	23	Using the menu.....	41
Time searching from an incomplete entry..	23	Using the remote's dedicated key to	
Time skip	24	switch modes.....	42
Playback modes.....	24	Assigning a new track number manually....	42
Specifying the playback mode.....	24	Applying the compressor while recording..	43
Program playback	25	Specifying the name of the recording file ..	44
Switching the playback time display mode.	25	7 – Using the folder finder	45
Power-on play	25	Overview	45
Repeat playback.....	26	Opening the folder finder screen.....	45
Conventional repeat playback	26	Navigating in the folder finder screen.....	45
		Operations when a folder is highlighted....	45
		Operations when a file is highlighted.....	46

Operations in the folder menu screen	47
Renaming a folder	47
Deleting a folder.....	47
Undeleting a deleted folder (UNDO)	48
Making a folder the current folder	48
Creating a new folder	48
Adding an entire folder to a playlist	49
Undoing a folder menu operation (UNDO)	49
Operations in the file menu screen	50
Editing the file name	50
Deleting a file.....	50
Adding files to a playlist.....	51
Dividing a file (DIVIDE).....	51
Combining files (COMBINE)	52
Undoing a file menu operation (UNDO).....	53
Moving or copying a file	53
Moving a file within a folder	53
Moving or copying a file between folders..	54
8 – Using the playlist finder	55
Overview	55
Opening the playlist finder screen	55
Navigating in the playlist finder screen	55
Operations in the playlist menu screen.....	56
Adding a file/folder to a playlist.....	57
Deleting a file/all files from a playlist	57
Moving a file	58
9 – Other settings	59
Restoring the factory settings	59
Formatting a CompactFlash card	59
Checking the capacity of the card	59
10 – Operation using a computer keyboard	60
Specifying the keyboard type	60
Using the keyboard to enter names	60
List of keyboard operations	61
Keyboard operations	61
11 – Using the RS-232C connector (SS-R1)	63
12 – Messages	64
13 – Troubleshooting	65
14 – Specifications	66
Backup memory	67
Dimensional diagram.....	67

INTELLECTUAL PROPERTY RIGHTS

- TASCAM is a registered trademark of TEAC Corporation.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.
- Supply of this product does not convey a license nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.
- CompactFlash is a US registered trademark of SanDisk Corporation.
- This product contains PrFILE[®] 2 FAT file system and PrFILE2 Unicode Interface of eSOL Co., Ltd.
Copyright © 2008 eSOL Co., Ltd.
- PrFILE[®] is a registered trademark of eSOL Co., Ltd. in Japan.
- Other company names, product names and logos in this document are the trademarks or registered trademarks of their respective owners.

Any data, including, but not limited to information, described herein are intended only as illustrations of such data and/or information and not as the specifications for such data and/or information. TEAC Corporation disclaims any warranty that any use of such data and/or information shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such data and/or information.

1 – Introduction

Thank you for your purchase of the TASCAM SS-R1/SS-R05 Solid State Stereo Audio Recorder.

Before connecting and using the unit, please take time to read this manual thoroughly to ensure you understand how to properly set up and connect the SS-R1/SS-R05, as well as the operation of its many useful and convenient functions. After you have finished reading this manual, please keep it in a safe place for future reference.

NOTE

This product is designed to help you record and reproduce sound works to which you own the copyright, or

where you have obtained permission from the copyright holder or the rightful licensor. Unless you own the copyright, or have obtained the appropriate permission from the copyright holder or the rightful licensor, your unauthorized recording, reproduction or distribution thereof may result in severe criminal penalties under copyright laws and international copyright treaties. If you are uncertain about your rights, contact your legal advisor. Under no circumstances will TEAC Corporation be responsible for the consequences of any illegal copying performed using the SS-R1/SS-R05.

Features of the SS-R1/SS-R05

- A two-channel audio recorder that uses CompactFlash cards.
- Can be mounted in a single rack space.
- Allows recording and playback of 16-bit linear PCM audio or MP3 audio, at sampling frequencies of 44.1 kHz or 48 kHz.
- Provides parallel and serial control ports to allow control from outside (SS-R1 only).
- Flash Start function allows playback to begin instantly.
- Playback control functionality such as Pitch Control and Key Control.
- Play lists and folders can be used to freely specify the range of playback.
- Track editing functionality is provided (for linear PCM audio only).
- An internal clock is provided for time stamping.
- Balanced (SS-R1 only) and unbalanced analog audio inputs and outputs as well as coaxial digital audio input and output are provided.
- Wired remote control for reliable operation is provided.
- A PS/2 keyboard can be connected to control the unit or to enter text.

Supplied accessories

In addition to this manual, the SS-R1/SS-R05 has been packed with the following:


- RC-SS1 remote control unit (with 5m cable) 1
- AC power cable..... 1
- A rack-mounting screw kit (screws and washers) 1
- Security Screw..... 2
- A warranty card..... 1

Contact your TASCAM supplier if any of these items are missing.

Rack-mounting the unit

If you are mounting the unit in a rack, leave 1U of space above it and 4 inch (10 cm) or more of space at the rear.

Use the rack-mounting kit to mount the unit in a standard 19-inch equipment rack, as shown in this section. Remove the feet of the unit before mounting.

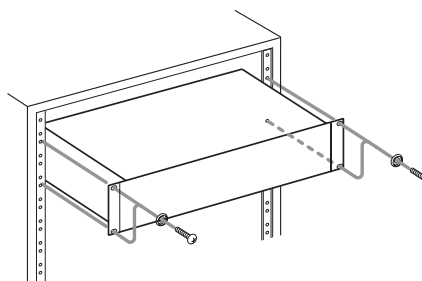

About this manual

In this manual, we use the following conventions:

- The names of keys and controls are given in the following typeface: **MENU**.
- If a preset indicator in the display (i.e. one which cannot change, but is either on or off) is shown, this is shown as follows: **A_TRACK**.
- When the alphanumeric portion of the display shows a message (inc. pop-up), selectable value (i.e. values of DB), or ON/OFF selection (i.e. SRC ON), this is shown in the following typeface: **MOVE**

Media considerations

The capacities and performance of your SS-R1/SS-R05 will vary based on the speed and abilities of the Compact Flash (CF) media used. Older and some cheaper Compact Flash (CF) cards use slower memory components and little internal buffering which results in poor recording performance. Newer CF cards, not only perform reading and writing faster, but also come in larger storage size.

NOTE

A card more than 512 MB should be used on the SS-R1/SS-R05.

The SS-R1/SS-R05 supports only Type I Compact Flash media. Type I cards are typically FLASH-ROM based and provide higher performance and durability than hard disk cards.

A list of CF cards that we have confirmed to work with this

unit is provided on our website (<http://www.tascam.com>).

CompactFlash cards are precision devices. To prevent damage to the card or the slot, please observe the following cautions.

- Do not leave a CF card in an extremely hot or cold location.
- Do not leave a CF card in an extremely damp location.
- Do not allow a CF card to become wet.
- Do not place any object on top of a CF card, or twist or bend it.
- Do not subject a CF card to strong impact.

Environmental considerations

The SS-R1/SS-R05 may be used in most areas, but to maintain top performance, and prolong operating life, observe the following environmental conditions:

- The nominal temperature should be between 5°C and 35°C (41°F and 95°F).
- Relative humidity should be 30 to 90 percent.
- As the unit may become hot during operation, always leave sufficient space above the unit for ventilation. Do not install this unit in a confined space such as a bookcase, and do not put anything on top of the unit.
- Avoid installing this unit on top of any heat-generating electrical device such as a power amplifier.

- Make sure that the unit is mounted in a level position for correct operation.
- Do not use any benzene, paint thinner, ethyl alcohol or other chemical agents to clean the unit as it could damage the surface. To clean the unit, wipe gently with a soft dry cloth.

NOTE

The voltage supplied to the unit should match the voltage as printed on the rear panel. If you are in any doubt regarding this matter, consult an electrician.

Beware of condensation

If the unit is moved from a cold to a warm place, or used after a sudden temperature change, there is a danger of condensation; vapor in the air could condense on the internal mechanism, making correct operation impossible.

To prevent this, or if this occurs, let the recorder sit for one or two hours at the new room temperature before using.

Connections

The following should be noted when you connect the unit to other equipment.

It is possible to connect the unit's **DIGITAL COAXIAL IN**, and balanced or unbalanced **ANALOG INs (L, R)** to other equipment at the same time. However, the unit can receive signals from only one input at a time. Currently selected input jack is shown on the display.

Audio signals output from the unit are output from the

balanced or unbalanced **ANALOG OUT** jacks, as well as from the **DIGITAL COAXIAL OUT** connector simultaneously (but not from the digital output in stop mode).

1 – Introduction

Control connections (SS-R1 only)

The pinouts of the **CONTROL I/O (PARALLEL)** terminal on the rear panel (see “Rear panel” on page 10) are:

Pin	Function	IN/OUT
1	GND	—
2	Play/Flash 1	In
3	Stop/Flash 2	In
4	Record/Flash 3	In
5	▶▶ (Next)/Flash 4	In
6	◀◀ (Previous)/Flash 5	In
7	Flash Load	In
8	Fader Start	In
9	Flash Tally	Out
10	Ready Tally	Out
11	Record Tally	Out
12	Stop Tally	Out
13	Play Tally	Out
14	Remote Select*2	In
15	Ready/Flash 6	In
16	Call/Flash 7	In
17	Auto Cue/Flash 8	In
18	Auto Ready/Flash 9	In
19	Pitch/Flash 10	In
20	Flash Page*3	In
21	EOM Tally	Out
22	CF Tally	Out
23	—	—
24	—	—
25	+5V*1	—

In: External command reception active flow
(operates at 30 ms or longer of ground)

Out: transport status by open drain
Indication signal (maximum voltage 50 V, maximum current 50 mA)

*1 Maximum supplied current is 50 mA.

*2 Pin 14 (Remote Select)
When this pin is high, the input pins for which the above table lists two commands separated by a “/” (pins 2–6 and 15–19) will perform the first-listed function, and can be used as conventional parallel controllers.
When this pin is low, the above-listed input pins will function as flash start keys.


*3 Pin 20 (Flash Page)
When pin 14 (Remote Select) is low, the assigned tracks will be as follows according to the high/low state of pin 20.

#14	#20	Flash-start status
Low	High	1–10
Low	Low	11–20

Tally signals are open collector, with a maximum current of 50 mA. Input signals are active when low (ground) for ≥ 30 ms.


A fader start/stop control should be wired according to the

following schematic:

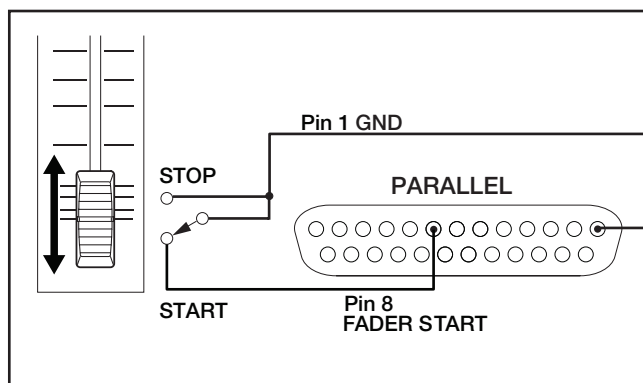

2 – Controls and connectors

Front panel

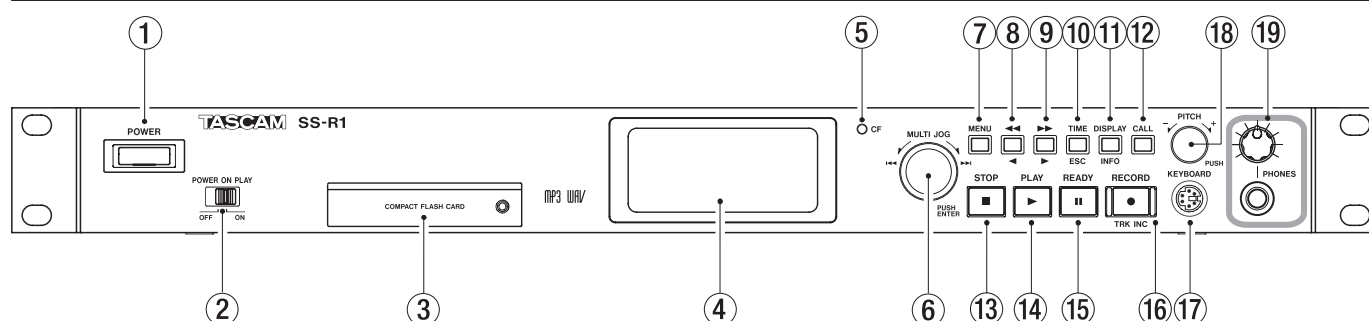

(This illustration is of an SS-R1. The front panel of the SS-R05 unit is the same.)

- ① **POWER switch** Turns the power on/off.
- ② **POWER ON PLAY switch** Turns the Power-on Play function (which causes playback to start when the unit is powered-on) on or off (see “Power-on Play” on page 25).
- ③ **CompactFlash card slot** Insert a CompactFlash card here (see “Inserting a CompactFlash card” on page 20).
- ④ **LCD display** This shows the home screen, various menu screens, the finder screen, and warning messages.
- ⑤ **CF indicator** This will blink while data is being written to the CompactFlash card. At other times it will remain lit.
- ⑥ **MULTI JOG dial** You can use this dial both by turning it as a wheel and by pressing it as a key.
[Wheel functions]
 When the home screen is displayed, use the wheel to select tracks.
 When entering a program, use the wheel to select a track to register.
 When in menu mode, use the wheel to select a menu item or to select a value.
 When editing a name, use the wheel to select characters.
 By holding down the **DISPLAY (INFO)** key and turning the **MULTI JOG** dial, you can adjust the display contrast.
[Key functions]
 Press to select or enter a setting (**ENTER** key function).
 While the finder screen is displayed, hold down this key to move/copy the highlighted file (see “Moving or copying a file” on page 53).
- ⑦ **MENU key** While the home screen is displayed, pressing this key will enter menu mode. The MENU screen will appear.
 By holding down this key while stopped or paused, you can access the folder finder screen or the play list finder screen, according to the play area setting.
- ⑧ **◀◀ (◀) key** While playing or paused, holding down this key will rewind while outputting audio (Review function).
 While playing or paused, momentarily pressing this key will perform the Time Skip function (see “Time skip” on page 24).
- ⑨ **▶▶ (▶) key** While playing or paused, holding down this key will fast-forward while outputting audio (Cue function).
 In menu mode, this key returns to the previous level.
 If the play area is FOLDER, you can select the current folder by pressing this key while stopped.
 If the play area is PLAYLIST, you can select the current playlist by pressing this key while stopped.
 When entering a name, this key moves the cursor toward the beginning.
 While playing or paused, momentarily pressing this key will perform the Time Skip function (see “Time skip” on page 24).
- ⑩ **TIME (ESC) key** When in a menu, the folder finder, or play list finder, pressing this key will return the display to the home screen.
 When in the home screen, pressing this key will switch the time display mode of the recorder (see “Switching the playback time display mode” on page 25, “Switching the recording time display mode” on page 38).
 When editing a file or folder name, pressing this key deletes a highlighted character. Also, pressing and holding this key deletes all characters following the highlighted position.
- ⑪ **DISPLAY (INFO) key** When in the home screen, pressing this key will cycle the indication in the lower left of the screen between “file name → folder/playlist name → file information”.
 When the finder menu is displayed, pressing this key will display property information for the selected folder or track.
 When a file or folder name is highlighted, pressing and holding this key scrolls the name on the screen to show the whole name.
 When a MP3 file that was not created by this unit is selected, and the file contains title information in a ID3 tag, pressing this key shows the title instead of the file

2 – Controls and connectors

name in the home screen.

When editing a name, this key switches the type of character (uppercase/lowercase).

You can adjust the display contrast by holding down this key and turning the **MULTI JOG** dial.

- ⑫ **CALL key** When you press this key, the SS-R1/SS-R05 will search for the call point (the point at which playback was most recently started from the pause condition), and will enter pause mode (see “Call function” on page 30).

When editing a name, this key inserts a space.

- ⑬ **STOP key** When you press this key while playing back or recording, playback or recording will stop. Pressing this key while stopped or while selecting a track will cancel the track selection. Pressing this key while stopped in program mode will clear all programs. Pressing this key while editing will cancel the editing operation.

- ⑭ **PLAY key** While stopped or paused, press this key to start playback. While in the record-ready condition, press this key to start recording. The key will light during playback or recording.

- ⑮ **READY key** While stopped or playing back, press this key to enter the pause condition.

While recording, press this key to enter record-ready mode.

- ⑯ **RECORD (TRK INC) key** While stopped, press this key to enter record-ready mode.

While recording, press this key to increment the track number.

The key will light when in recording mode.


If you press this key when a CompactFlash card is not inserted, the input monitor will be activated, and the selected input signal will be output. The key will blink while input monitor is active.

- ⑰ **KEYBOARD connector** You can connect a PS/2 keyboard here. Set the UTILITY menu KEYBOARD setting appropriately for the type of keyboard you’ve connected (see “Specifying the keyboard type” on page 60).

- ⑱ **PITCH knob** Turn this knob to adjust the pitch (playback speed). (See “Pitch control play” on page 26.) You can press this knob to turn pitch control on/off. By holding down this knob you can access pitch step switch mode.

- ⑲ **PHONES knob, PHONES jack** You can connect stereo headphones to the **PHONES** jack. Use the **PHONES** knob to adjust the headphone volume.

Rear panel

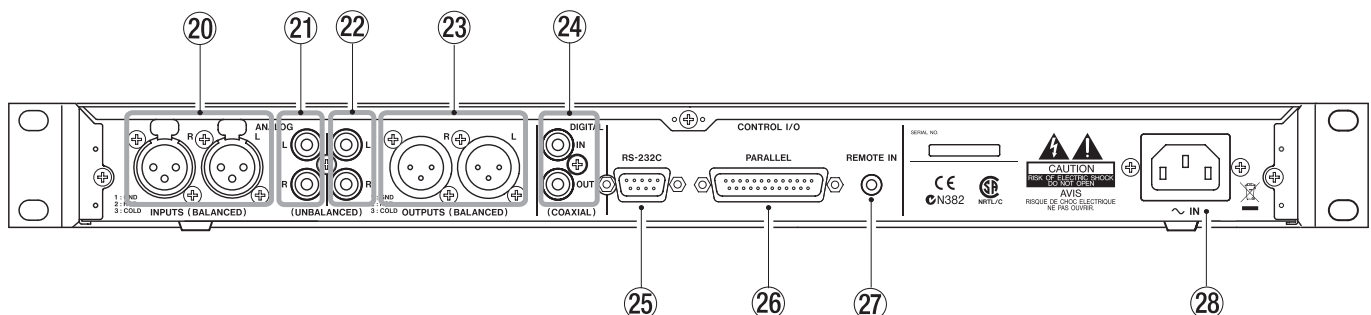

- ⑳ **ANALOG INPUTS L/R (BALANCED) jacks (SS-R1 only)** These are analog input jacks (XLR balanced). The nominal input level is +4 dBu. (1: GND 2: HOT 3: COLD)

- ㉑ **ANALOG INPUTS L/R (UNBALANCED) jacks** These are analog input jacks (RCA pin jacks). The nominal input level is -10 dBV.

- ㉒ **ANALOG OUTPUTS L/R (UNBALANCED) jacks** These are analog output jacks (RCA pin jacks). The nominal output level is -10 dBV.

- ㉓ **ANALOG OUTPUTS L/R (BALANCED) jacks (SS-R1 only)** These are analog output jacks (XLR balanced). The nominal output level is +4 dBu. (1: GND 2: HOT 3: COLD)

- ㉔ **DIGITAL IN/OUT (COAXIAL) jacks** These are digital input/output jacks compatible with IEC60958-3 (S/PDIF).

- ㉕ **CONTROL I/O (RS-232C) connector (SS-R1 only)** This is a D-sub 9-pin RS-232C connector for control I/O. You can connect it to an external computer or other device (see “Using the RS-232C connector” on page 63).


- ㉖ **CONTROL I/O (PARALLEL) connector (SS-R1 only)** This is a D-sub 25-pin parallel connector for control I/O. You can connect it to an external controller such as the RC-SS20 (optional). For the pin wiring, refer to “Control connection” on page 8.

- ㉗ **REMOTE IN connector** Connect the RC-SS1 dedicated remote here.

- ㉘ **AC IN connector** Connect the included power cable here.

2 – Controls and connectors

Remote control unit (RC-SS1)

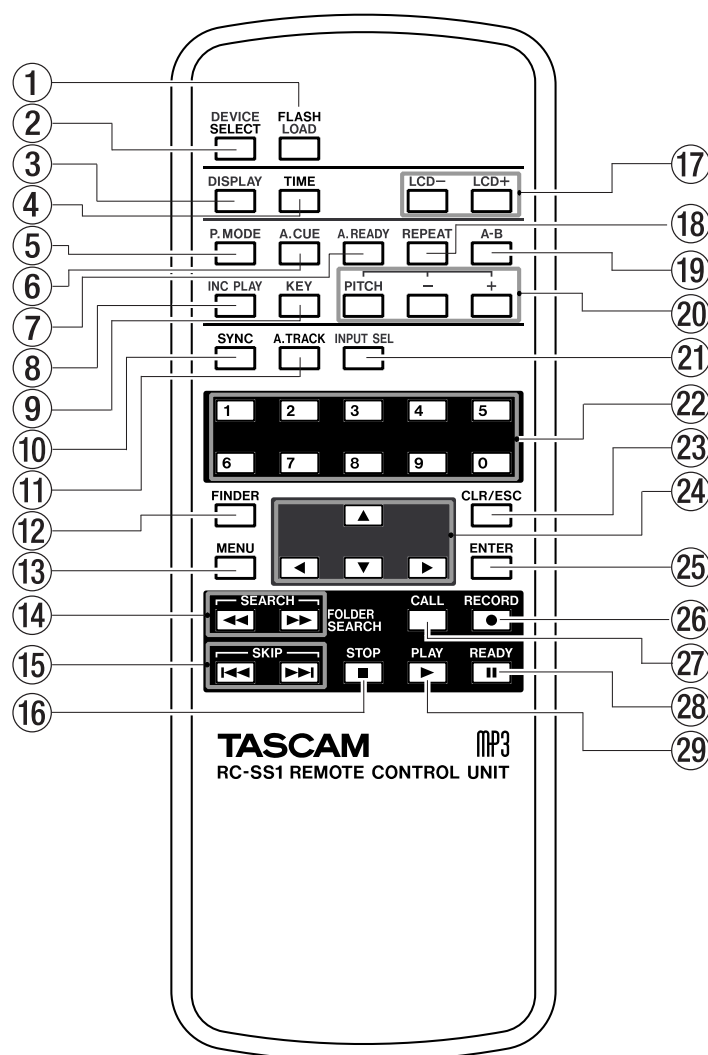

- ① **FLASH LOAD key** This loads the registered tracks in preparation for Flash Start. When the tracks have been loaded, the display will indicate **FLASH** (see “Flash Start function” on page 32).
- ② **DEVICE SELECT key** This key is not used for this unit.
- ③ **DISPLAY key** This has the same function as the front panel **DISPLAY (INFO)** key.
- ④ **TIME key** If you press this key while in a menu setting screen, you will return to the **MENU** screen.
If you press this key while in a **MENU** screen, you will exit menu mode and return to the home screen.
If you press this key while in the home screen, the time display mode of the recorder will change (see “Switching the playback time display mode” on page 25, “Switching the recording time display mode” on page 38).
- ⑤ **P.MODE key** This switches the playback mode between **CONTINUE** (normal consecutive playback), **SINGLE** (play one song), **PROGRAM** (program playback), and **RANDOM** (random playback) (see “Play modes” on page 24).
- ⑥ **A. CUE key** This turns the Auto Cue function on/off (see “Auto Cue function” on page 28).
- ⑦ **A. READY key** This turns the Auto Ready function on/off (see “Auto Ready function” on page 29).
- ⑧ **INC PLAY key** This turns the Incremental Play function on/off (see “Incremental Playback” on page 30).
- ⑨ **KEY key** This turns the Key Control Play function on/off (see “Key Control play” on page 27).
- ⑩ **SYNC key** This turns Sync Recording on/off (see “Sync recording” on page 39).
- ⑪ **A. TRACK key** This switches the Auto Track mode between **OFF**, **LEVEL**, **DD**, and **TIME** (see “Auto Track function” on page 41).
- ⑫ **FINDER key** This accesses the folder finder screen or the play list finder screen, according to the play area setting (see “Opening the folder finder screen” on page 45, “Opening the playlist finder screen” on page 55).

2 – Controls and connectors


- ⑬ **MENU key** This has the same function as the front panel **MENU** key. However, holding down this key will not access the folder finder screen or playlist finder screen.
 - ⑭ **SEARCH (◀◀, ▶▶) keys** These have the same function as the front panel ◀◀, ▶▶ keys. However, they will not operate in menu mode.
 - ⑮ **SKIP (◀◀◀, ▶▶▶) keys** These have the same function as turning the front panel **MULTI JOG** dial.
 - ⑯ **STOP key** This has the same function as the front panel **STOP** key.
 - ⑰ **LCD- , LCD+ keys** These adjust the contrast of the LCD display (see “Adjusting the contrast” on page 19).
 - ⑱ **REPEAT key** This turns the Repeat Play function on/off (see “Conventional repeat play” on page 26).
 - ⑲ **A-B key** Use this key for A-B Repeat playback operations (see “A-B Repeat play” on page 26).
 - ⑳ **PITCH key** This has the same function as pressing the front panel **PITCH** knob (see “Pitch Control play” on page 26).
+, - keys These have the same function as turning the front panel **PITCH** knob (see “Pitch Control play” on page 26).
 - ㉑ **INPUT SEL key** This selects the recording input source. You can choose ANALOG (RCA), ANALOG (XLR), or COAXIAL (see “Selecting the input source” on page 34).
 - ㉒ **READY key** This has the same function as the front panel **READY** key.
 - ㉓ **PLAY key** This has the same function as the front panel **PLAY** key.
- NOTE**
On SS-R05 models, ANALOG (XLR) cannot be selected.
- ㉔ **Numeric keys (0–9)** Use these to select tracks (see “Specifying a track number” on page 23).
 - ㉕ **CLR/ESC key** If you press this while entering a track number, the track number entry will return to the initial condition.
If you press this while entering a program or while registering a track number, the track number will be cancelled. Otherwise, the last-registered program will be deleted (see “Program playback” on page 25).
If you press this while performing a menu operation, a folder finder operation, or a playlist finder operation, the display will return to the home screen.
 - ㉖ **▲, ▼, ◀, ▶ (cursor) keys** Use these keys for menu operations. Use the ▲, ▼ keys to select items or values vertically. Use the ◀ key to return upward through a menu structure, and use the ▶ key to proceed into a menu structure.
 - ㉗ **ENTER key** This has the same function as pressing the front panel **MULTI JOG** dial.
 - ㉘ **RECORD key** This has the same function as the front panel **RECORD** key.
 - ㉙ **CALL key** This has the same function as the front panel **CALL** key (see “Call function” on page 30).

2 – Controls and connectors

The home screen

The basic screen shown in the display is called the “home screen”.

If any screen other than the home screen is shown, pressing the **TIME (ESC)** key (or the remote **CLR/ESC** key) will take you back to the home screen.

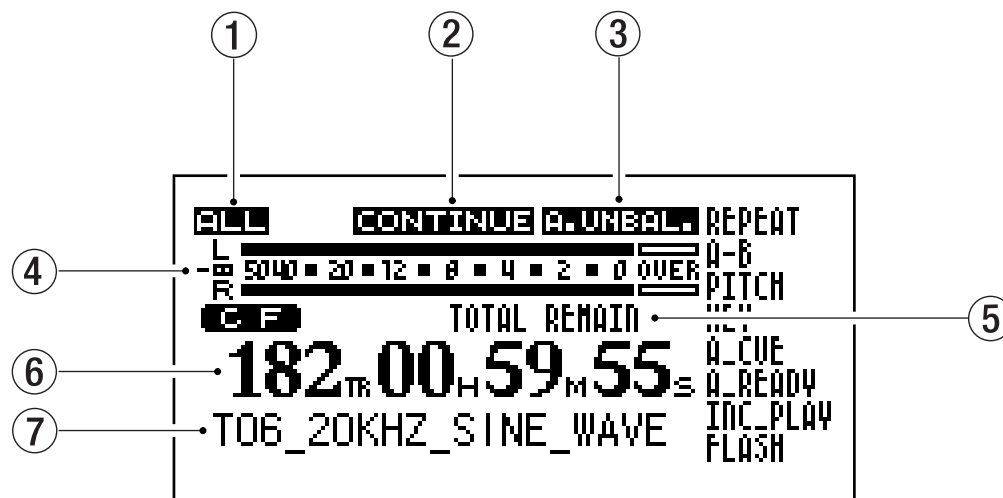


The home screen shows the following information.

- ① **Play area** This shows the currently specified play area.
- ② **Playback mode** This shows the currently specified playback mode.
- ③ **Input source indicator** This shows the currently selected input source.
- ④ **Level meter** During playback this shows the playback level, and during recording or in record-ready mode it shows the recording level.
- ⑤ **Time display mode indicator** This shows the selected time display mode.
- ⑥ **Counter** This shows the track number and time. The time is shown as the currently selected time mode.
- ⑦ **Information** This shows information such as the file name.

2 – Controls and connectors


Various indicators

The content shown here will depend on whether the unit is in playback/stop, or recording/record-ready modes.

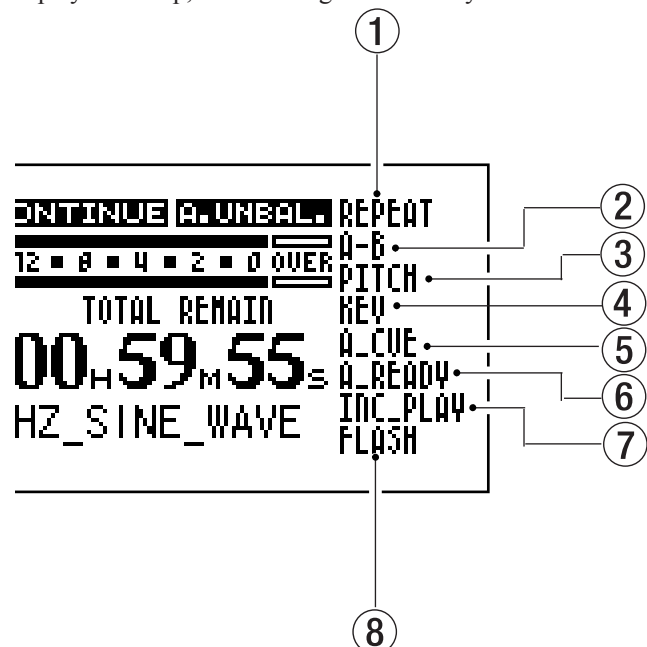

While playing or stopped

- ① **REPEAT**
This will be lit in Repeat Mode.
- ② **A-B**
This will be lit in A-B Repeat mode.
- ③ **PITCH**
This will be lit if the Pitch Control function is active.
- ④ **KEY**
This will be lit if the Key Control function is active.
- ⑤ **A_CUE**
This will be lit if the Auto Cue function is active.
- ⑥ **A_READY**
This will be lit if the Auto Ready function is active.
- ⑦ **INC_PLAY**
This will be lit if the Incremental Play function is active.
- ⑧ **FLASH**
This will be lit if Flash Load has been completed.

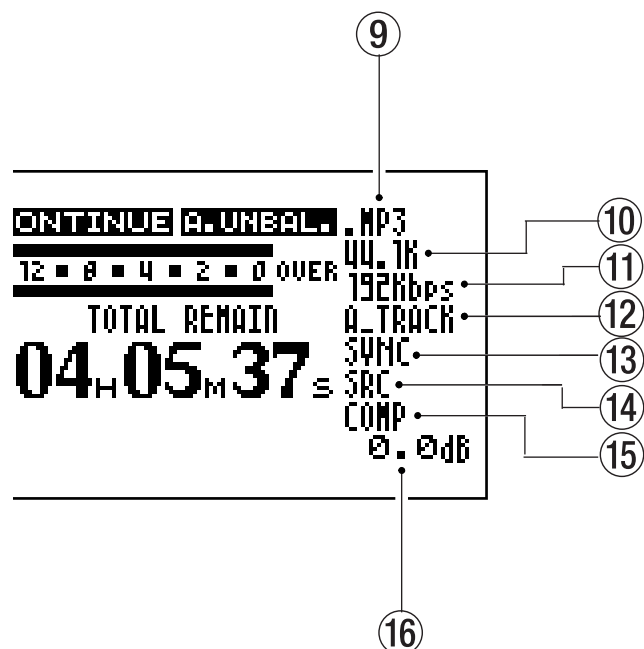


While recording or record-ready

- ⑨ **FILE**
This indicates whether the recording file format is WAV or MP3.
- ⑩ **FS**
This indicates the sampling rate of the recording file.
- ⑪ **BIT**
This indicates the bit rate of the recording file.
- ⑫ **A_TRACK**
This will be lit if the Auto Track function is on.
- ⑬ **SYNC**
This will be lit if Sync Recording is on.
- ⑭ **SRC**
This will light if the Sampling Rate Converter function is on.
- ⑮ **COMP**
This will be lit if the compressor is on.
- ⑯ **VOLUME**
This indicates the recording volume.

3 – Menu screens

The SS-R1/SS-R05 has a menu system with various settings.

When you press the **MENU** key, the main menu list screen will appear.

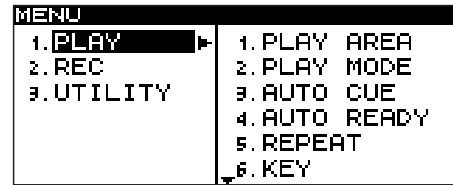

Menu structure

There are three main menus, as follows.

PLAY menu: Contains playback-related menu items.

REC menu: Contains recording-related menu items.

UTILITY menu: Contains system settings for the SS-R1/SS-R05.

The following table summarizes the items in each menu.

Menu option	Sub-Menu option	Function	Reference page
PLAY	PLAY AREA	Play area setting	Page 21
	PLAY MODE	Play mode setting	Page 24
	AUTO CUE	Auto Cue on/off and setting	Page 28
	AUTO READY	Auto Ready on/off	Page 29
	REPEAT	Repeat Play on/off	Page 26
	KEY	Key Control on/of and setting	Page 27
	PREFERENCE	Various playback preferences	Page 31
REC	INPUT SELECT	Input source selection	Page 34
	INPUT VOLUME	Input volume setting	Page 37
	REC FORMAT	Recording file format setting	Page 35
	SYNC	Sync Recording setting	Page 39
	AUTO TRACK	Auto Track Increment setting	Page 41
	PREFERENCE	Various recording preferences	Page 43
UTILTIY	MEMORY FORMAT	Format a CompactFlash card	Page 59
	LCD BRIGHTNESS	Display brightness setting	Page 19
	KEYBOARD	PS/2 keyboard type setting	Page 60
	CLOCK ADJUST	Internal clock time setting	Page 18
	RS-232C (SS-R1 only)	RS-232C communication setting	Page 63
	INFORMATION	View the media information	Page 59
	FACTORY PRESET	Restore the factory settings	Page 59

3 – Menu screens

Operations in the menu screens

You can perform operations in the menu screens as follows.

- **To select an item (vertically in the screen):**
Turn the **MULTI JOG** dial of the SS-R1/SS-R05.
Use the cursor ▲, ▼ keys of the remote.
- **To confirm the highlighted item:**
Press the **MULTI JOG** dial of the SS-R1/SS-R05.
Press the **ENTER** key of the remote.
- **To move the cursor left/right:**
Use the ◀, ▶ keys of the SS-R1/SS-R05.
Use the cursor ◀, ▶ keys of the remote.
- **To select a sub-screen not currently shown in the screen (a ▶ is shown at the right):**
Press the ▶ key of the SS-R1/SS-R05.
Press the cursor ▶ key of the remote.
- **To return to the previous menu level:**
Press the ◀◀ key of the SS-R1/SS-R05. Press the cursor ◀ key of the remote.
- **To return directly to the home screen from menu mode:**
Press the **TIME (ESC)** key of the SS-R1/SS-R05.
Press the **CLR/ESC** key of the remote.

NOTE

- If there is an item above (or below) the currently displayed list, a ▲ or ▼ symbol will be shown at the top or bottom of the list.

As a specific example, we'll explain how to turn the PLAY menu item AUTO CUE "on", and then change the auto cue level.

- 1 Press the **MENU** key to access the main menu list screen.

- 2 Open the **PLAY** menu.

From the SS-R1/SS-R05:

Turn the **MULTI JOG** dial to highlight **PLAY**, and then press the **MULTI JOG** dial or the ▶ key.

From the remote:

Use the cursor ▲, ▼ keys to highlight **PLAY**, and press the **ENTER** key or the cursor ▶ key.

MENU	
1. PLAY ▶	1. PLAY AREA
2. REC	2. PLAY MODE
3. UTILITY	3. AUTO CUE
	4. AUTO READY
	5. REPEAT
	6. KEY

- 3 Select the **AUTO CUE** item.

From the SS-R1/SS-R05:

Turn the **MULTI JOG** dial to highlight **AUTO CUE**, and then press the **MULTI JOG** dial (or the ▶ key).

From the remote:

Use the cursor ▲, ▼ keys to highlight **AUTO CUE**, and then press the **ENTER** key (or the cursor ▶ key).

MENU	
1. PLAY AREA	ALL
2. PLAY MODE	CONTINUE
3. AUTO CUE ▶	OFF
4. AUTO READY	OFF
5. REPEAT	OFF
6. KEY	OFF

- 4 Turn the **AUTO CUE** item **ON**.

From the SS-R1/SS-R05:

Turn the **MULTI JOG** dial to highlight **ON**.

From the remote:

Use the cursor ▲, ▼ keys to highlight **ON**.

MENU	
1. PLAY AREA	ALL
2. PLAY MODE	CONTINUE
3. AUTO CUE ▶	ON
4. AUTO READY	OFF
5. REPEAT	OFF
6. KEY	OFF

- 5 Proceed to the **AUTO CUE** sub-screen.

From the SS-R1/SS-R05:

Press the ▶ key.

From the remote:

Press the cursor ▶ key.

MENU	
--AUTO CUE--	
1. LEVEL ▶	54 dB

- 6 Set **AUTO CUE LEVEL** to the desired level.

From the SS-R1/SS-R05:

Turn the **MULTI JOG** dial to select a value.

From the remote:

Use the cursor ▲, ▼ keys to select a value.

- 7 To return to the home screen.

From the SS-R1/SS-R05:


Press the **TIME (ESC)** key.

From the remote:

Press the **CLR/ESC** key.

4 – Preparations

Connections

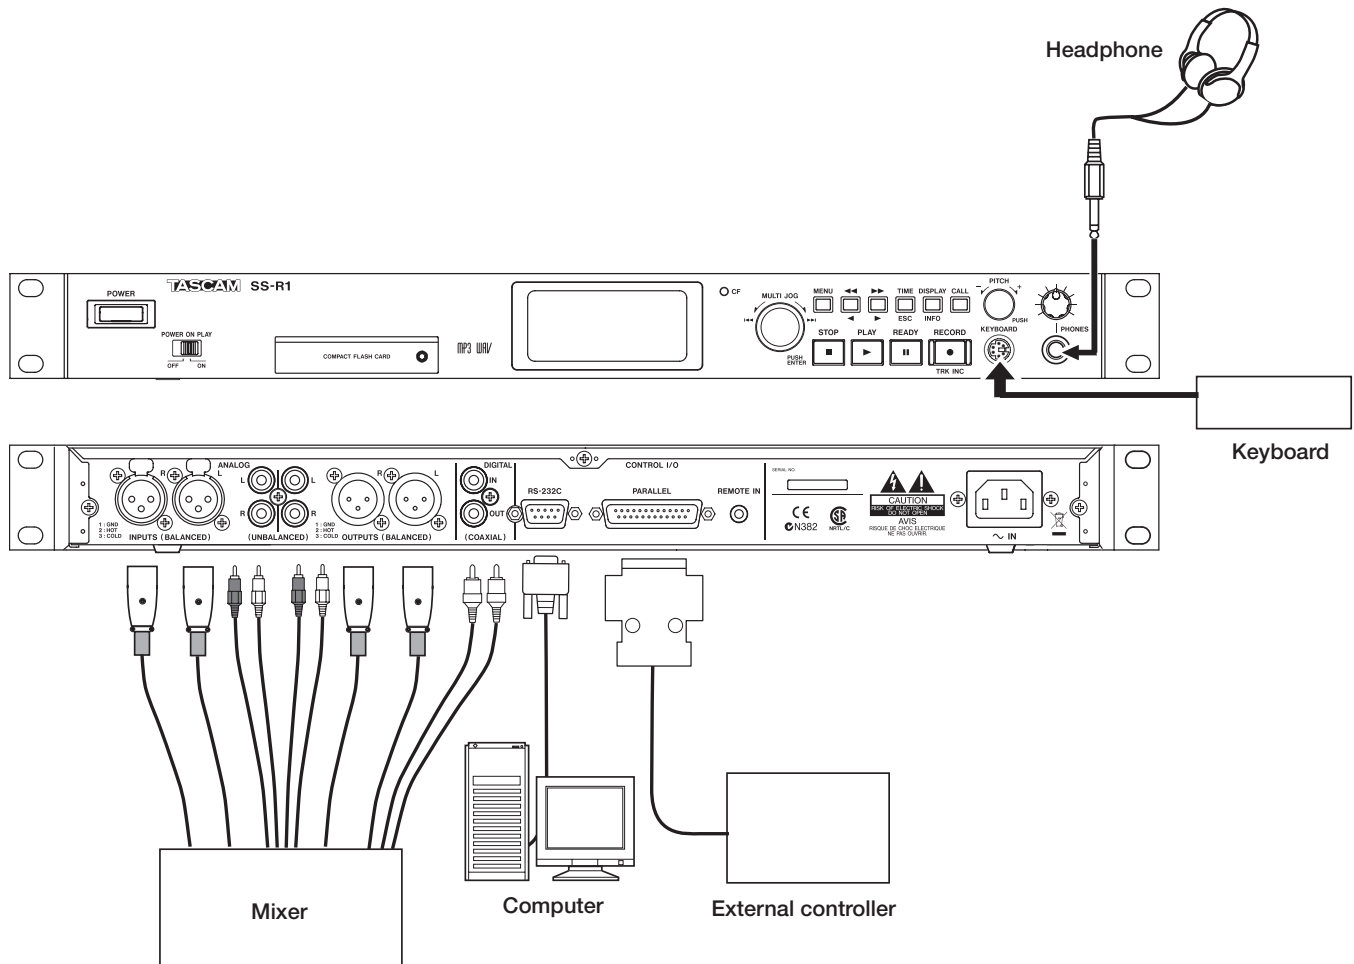

This example shows connections with an SS-R1 unit.

Connecting headphones

Connect your stereo headphones to the **PHONES** jack. Use the **PHONES** knob located above the **PHONES** jack to adjust the volume.

Connecting a PS/2 keyboard

You can use a keyboard to enter file (track) names and folder names, and also use it to control the SS-R1/SS-R05 (see “Operation using a computer keyboard” on page 60).

Connecting audio devices (inputs)

Connect an external audio source (e.g., CD player, mixer) to the recorder’s **ANALOG INPUTS (BALANCED, SS-R1 only)** jacks, **ANALOG INPUTS (UNBALANCED)** jacks, or **DIGITAL IN** jack. To select the input source, use the REC menu item **INPUT SELECT**. To adjust the input volume, use the REC menu item **INPUT VOLUME**.

Connecting audio devices (outputs)

Connect an external monitor system or mixer to the recorder’s **ANALOG OUTPUTS (BALANCED, SS-R1 only)** jacks, **ANALOG OUTPUTS (UNBALANCED)** jacks, or **DIGITAL OUT** jack.

Computer (SS-R1 only)

If you connect the SS-R1’s RS-232C connector to your computer’s RS-232C connector, you’ll be able to control the SS-R1 from your computer via a serial connection. After making connections, you’ll need to make the correct settings on your computer (see “Using the RS-232C connector” on page 63).

Control via a parallel connection (SS-R1 only)

If you want to control the SS-R1 via a parallel connection from an external controller such as the RC-SS20 (optional), use the **PARALLEL** connector (25-pin D-sub connector). For details on the pin configuration of the **PARALLEL** connector, refer to “Control connections” (page 8).

NOTE

The illustration above shows examples of connections with an SS-R1. SS-R05 units do not have balanced XLR input and output jacks, or RS-232C and parallel control connectors.

4 – Preparations

Turning the power on

Press the **POWER** switch to turn the power on.



The SS-R1/SS-R05 will start up, and the startup screen will appear (The example screen is from an SS-R1 unit.).

If no CompactFlash card is inserted, the display will indicate **NO MEDIA**.

If a CompactFlash card is inserted, the display will indicate **MEDIA READING**, and the card will be read. When reading is completed, the home screen will appear.

To turn the power off:

No special shutdown operation is required. Simply press the **POWER** switch to turn the power off.

CAUTION

Do not turn the power off while the CF indicator is blinking (indicating that data is being written).

Setting the date and time


Here's how to set the date and time of the internal clock. When you record, the date and time are recorded in the audio file.

- 1 Press the **MENU** key to access the menu list screen.



- 2 Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to highlight the **UTILITY** item, and press the **MULTI JOG** dial (or the remote's **ENTER** key).

The **UTILITY** menu selection screen will appear.

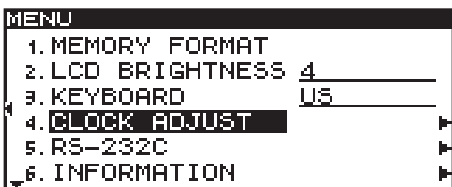


NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the "5. RS-232C item."

- 3 Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to highlight the **CLOCK ADJUST** item, and press the front panel **▶▶** key (or the remote's cursor **▶** key).

The clock setting screen will appear.

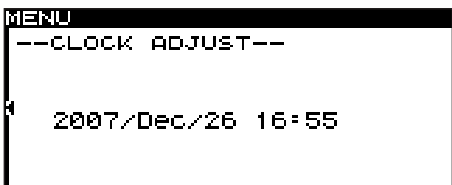

- 4 Press the front panel **MULTI JOG** dial (or the remote's **ENTER** key).

07 will be highlighted.

- 5 Set the date and time as follows.

- Use the front panel **◀◀**, **▶▶** keys (or the remote's cursor **◀**, **▶** keys) to move the highlighted area to edit.
- Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to change the value highlighted.

- 6 When you've finished making settings, press the front panel **MULTI JOG** dial (or the remote's **ENTER** key) to finalize the date and time settings.



4 – Preparations

Adjusting the display

If necessary, you can adjust the display contrast and brightness.

Adjusting the contrast


While holding down the **DISPLAY (INFO)** key, turn the **MULTI JOG** dial (or use the remote's **LCD +/-** keys) to adjust the contrast of the SS-R1/SS-R05's display.

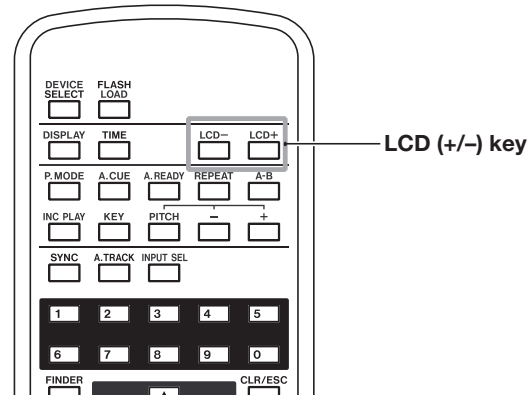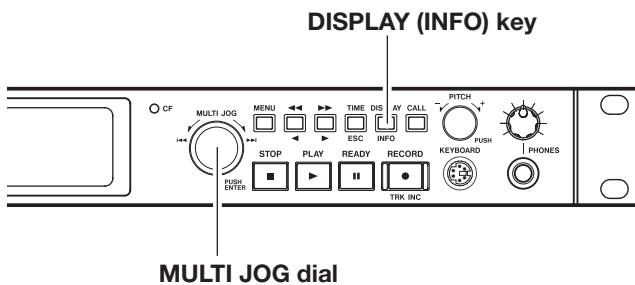

Adjusting the brightness

You can use the **UTILITY** menu item **LCD BRIGHTNESS** to adjust the brightness of the backlight.


- 1 Press the **MENU** key to access the main menu list.
- 2 Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to highlight the **UTILITY** item, and press the front panel **MULTI JOG** dial or **▶▶** key (or the remote's **ENTER** key or cursor **▶** key).

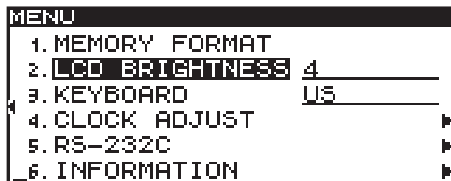

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the "5. RS-232C item."

- 3 Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to highlight the **LCD BRIGHTNESS** item, and press the front panel **MULTI JOG** dial or **▶▶** key (or the remote's **ENTER** key or cursor **▶** key).

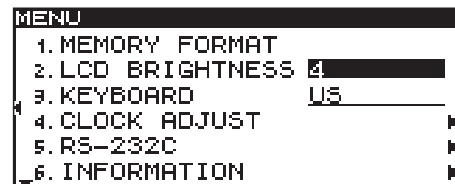

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the "5. RS-232C item."

- 4 Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to adjust the brightness.

4 – Preparations


Inserting a CompactFlash card

In order to record or play back on the SS-R1/SS-R05, a CompactFlash card must be inserted in the front panel CompactFlash card slot.

TIP


You can insert a card whether the power is on or off.

1 Open the door of the CompactFlash card slot.

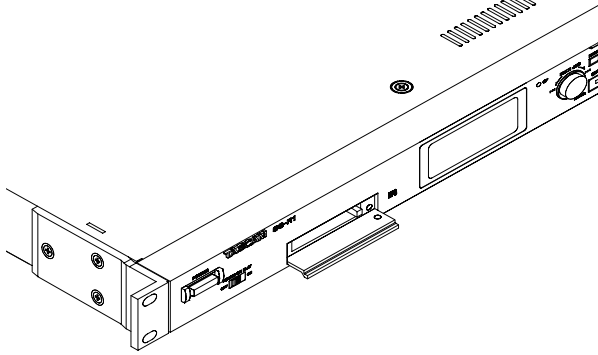

2 Insert a CompactFlash card in the correct orientation.

Insert the card with its label facing up and its contacts facing in.

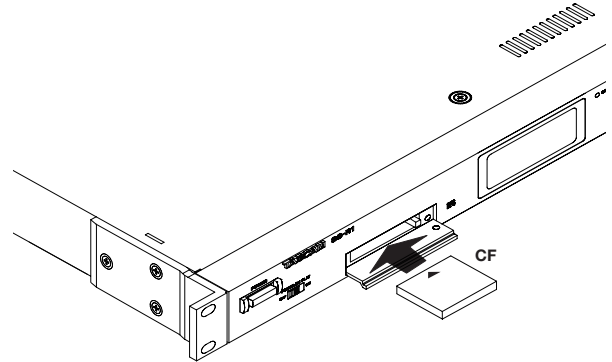

3 Close the door.

NOTE

If the slot door will not close, remove the card, press the square button located at the right of the slot, and then insert the card once again.


If you insert a card while the power is on, the display will indicate MEDIA READING.

If you insert a card while the power is off, and then turn the power on, the startup screen will appear and then the display will indicate MEDIA READING.

About the door lock

You can use the included Security Screw to lock the CompactFlash card slot door.


Use a screwdriver to install or remove the Security Screw.

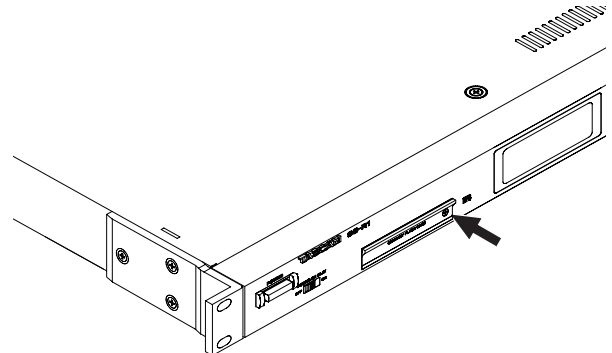

Removing the card

Before you remove the card, turn the power off or stop the SS-R1/SS-R05's operation. Never remove the card while recording is in progress (while the CF indicator is blinking).

- 1 If the door is locked, use a screwdriver to remove the door lock screw.
- 2 Open the CompactFlash card slot door.
- 3 Press the square button located at the right of the card slot; the button will protrude.

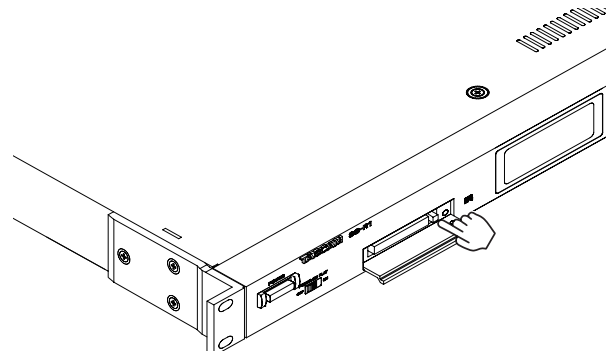

- 4 Push the protruding square button, and the card will be partially ejected.
- 5 Grasp the card and pull it out.

This chapter explains how to play back audio files (WAV or MP3) stored on a CompactFlash card.

The explanations that follow will assume that a CompactFlash card containing audio files is inserted in the SS-R1/SS-R05, and that the SS-R1/SS-R05 is powered-on.

Files that can be played

The SS-R1/SS-R05 is able to play files of the following format.

- **WAV files**
Stereo or monaural WAV files at a sampling rate of 44.1 kHz or 48 kHz can be played.
- **MP3 files**
Stereo or monaural MP3 files at a sampling rate of 44.1 kHz or 48 kHz and a bit rate of 64 kbps–320 kbps can be played.

TIP
As long as they meet the above requirements, the SS-R1/SS-R05 can play files that were recorded on another device. For example you can use your computer or other

audio device to write files complying with the above requirements to a CompactFlash card, and then insert this card into the SS-R1/SS-R05 and play the files. This allows you to work efficiently when preparing playback material for the SS-R1/SS-R05.

NOTE
Because of the nature of their format, VBR (Variable Bit Rate) MP3 files do not allow a precise location to be found. Thus, when performing functions that require a point to be specified within the track, such as Time Skip, Call, or the point A setting for A-B Repeat, there may be a slight discrepancy between the point you specified and the point at which playback actually begins.

Tracks and files

The audio data on a CompactFlash card is saved as “audio files”. These files are handled as “tracks” by the SS-R1/SS-R05’s recorder.

For this reason, this manual will refer to audio files as “tracks” (or in some cases, as “songs”) in the context of

explaining the SS-R1/SS-R05’s recorder functionality, while using the term “files” in the context of explaining card data management. Please be aware that these different terms refer to the same thing.

Play area

You can specify the range of playback tracks that can be selected in the home screen; this range is called the “play area”.


If numerous files are stored on the card, limiting the range of selection in this way will make it easier for you to select the desired tracks.

You can specify the type of play area; it can be all files on the card (the default setting), a folder, or a playlist.

Selecting the type of play area

You can use the menu to specify the desired type of play area (for details on how to perform menu operations, refer to “Operations in menu screens” on page 16).

- 1 While stopped, or with no CompactFlash card inserted, press the MENU key to access the main menu list screen.
- 2 Open the PLAY menu.
- 3 Select the PLAY AREA item.

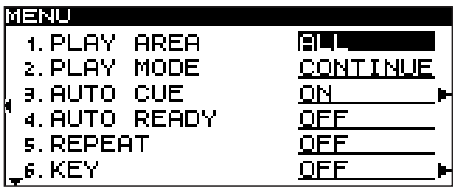

- 4 Specify the desired type of play area.
Choose ALL, FOLDER, or PLAYLIST.
- 5 When you’ve made your choice, press the front panel TIME (ESC) key (or the remote’s CLR/ESC key) to return to the home screen.
The play area type is shown in the upper left of the home screen.

NOTE
The play area setting is preserved even when the power is turned off.

5 – Playback

Selecting the current folder or current playlist

If you've specified that the play area will be a folder or playlist, you can select the applicable folder or play list by using the front panel ◀◀, ▶▶ keys (or the remote's **SEARCH** ◀◀, ▶▶ keys) while the home screen is displayed and the recorder is stopped. This folder or playlist will be called the "current folder" or "current playlist".

NOTE

- You can also select the "current folder" or "current playlist" from the folder finder screen or playlist finder screen (see "Using the folder finder" on page 45, "Using the playlist finder" on page 50).
- A maximum of 999 tracks can be played back by the SS-R1/SS-R05. Even if a CompactFlash card containing more than 999 tracks is inserted in the SS-R1/SS-R05, only the 999 tracks selected according to the SS-R1/SS-R05 system's rules can be played back. Other tracks cannot be played back or edited.

Basic playback operations

Here we'll explain basic operations such as play, pause, and stop.

The following explanations assume that you've completed the necessary connections, that the SS-R1/SS-R05 is

powered-on, that a CompactFlash card containing audio files is inserted, and that the display is showing the home screen.

Playback

Press the **PLAY** key to begin playback.

NOTE

If the CompactFlash card, or specified folder or playlist does not contain any audio files that the SS-R1/SS-R05 is able to play, the counter display area (track number and time display) will show all zeros.

- **To stop playback**
Press the **STOP** key.
- **To pause playback**
Press the **READY** key.

In this manual, we'll assume that the play mode is set to **CONTINUE** (continuous playback mode) unless otherwise specified.

Selecting a track

Here's how to select the track for playback if more than one track exists in the play area. You can select a track either by moving to the previous or next track ("skip"), or by specifying a track number directly.

Skipping to the previous or next track

Turn the front panel **MULTI JOG** dial (or use the remote's **SKIP** keys) to skip to the previous or next track.

- If using the **MULTI JOG** dial, turn it to the right to skip to the next track, or to the left to skip to the previous track.
- If using the **SKIP** keys, press the ▶▶ key to skip to the next track, or the ◀◀ key to skip to the previous track.

After selecting a track, press **PLAY** key on the front panel or the remote to begin playing the track.

Alternatively, you can press the **READY** key of the front panel or the remote to pause at the beginning of the selected track.

Specifying a track number

You can use the remote's numeric keys (0–9) to directly specify the number of the track you want to play.

1 Use the remote's numeric keys (0–9) to enter a track number (maximum of three digits).

Enter the track number starting with the highest digit.

- **To specify track 1**
Press the **1** key once.
- **To specify track 12**
Press the **1** key → **2** key.
- **To specify track 103**
Press the **1** key → **0** key → **3** key.

2 Press the **PLAY** key.

The selected track will begin playing.

Alternatively, you can use this procedure but press the remote's **READY** key instead of the **PLAY** key to pause at the beginning of the selected track.

NOTE

- As an alternative to press the **PLAY** key, you can press the **MULTI JOG** dial to playback the file selected (or the remote's **ENTER** key).
- You can't use the numeric keys to specify the track while in program or random mode.

Fast-forward/rewind search

You can rapidly search forward or backward while listening to the audio of a track.

1 Play or pause the desired track.

2 Hold down the **▶▶** or **◀◀** key.

Fast-forward or rewind search will begin.

3 To stop searching, release the key you were holding.

You will return to the state (either playing or paused) in which you were prior to searching.

Time search

While the unit is stopped, playing, or paused, you can locate to a specified time in the specified track.

NOTE

You can't use time search when the play mode is program mode or random mode.

1 Use the remote's numeric keys (0–9) to enter nine digits in the following order.

- Track number: three digits
- Elapsed time from the beginning of the track (XX hours / XX minutes / XX seconds): two digits each

For example if you want to locate to 1 minute 30 seconds from the beginning of track 2, you would press the keys in the following order.

0 → 0 → 2 → 0 → 0 → 0 → 0 → 1 → 3 → 0

When you finish entering the nine digits, the SS-R1/SS-R05 will automatically locate to the specified position.

If the unit is stopped or playing back prior to the locate operation, playback will begin after the locate operation. If the unit is paused prior to the locate operation, it will pause after the locate operation.

NOTE

If you specify a track number that does not exist in the current play area, or a time that does not exist in the track, the operation will be cancelled at that point.

Time searching from an incomplete entry

If you press the remote's **ENTER** key (or the **PLAY** or **READY** key) before you finish entering all nine digits (to the seconds place), the unit will locate to the position you've specified so far. For example if you enter "0 → 0 → 2 → 0 → 0 → 1 → 2" and press the **ENTER** key, the recorder will locate to a position 12 minutes from the beginning of track 2.

After the locate operation, the unit will either play or pause, depending on the status prior to pressing the **ENTER** key. If you press the **PLAY** key, playback will begin. If you press the **READY** key, the recorder will pause.

NOTE

- This method allows you to omit the leading 0 of the last place you enter (track, hour, minute, second), even the leading 00 of the track number. For example if you want to locate to minute 2 of track 2, press "0 → 0 → 2 → 0 → 0 → 0 → 2" and press the **ENTER** key.
- If you enter only the track number and press the **ENTER** key (or the **PLAY** key or **READY** key), the result is the same as "Specifying the track number" (page 23).

5 – Playback

Time skip

While playing or paused, you can skip backward or forward in one-minute steps.

1 While playing or paused, press the ◀◀ or ▶▶ keys.

You will locate to a position one minute before or after the current location. Following the locate, the playback or pause condition will continue as it had been prior to the operation.

NOTE

- If you press the ◀◀ key at a point less than one minute after the beginning of the track, you will locate to the beginning of the current track.
- If you press the ◀◀ key at a point less than one second after the beginning of the track, you will locate to

a point one minute before the end of the preceding track. However if the track is the first track in the card or the program, you will pause at the beginning of the current track. (Even when using random play, pressing the ◀◀ key at a point less than one second from the beginning of the track will locate to the beginning of the track).

- If you press the ▶▶ key at a point that is less than one minute from the end of the track, you will locate to the beginning of the next track. However if the track is the last track in the card or the program, you will pause at the end of the current track.

Playback modes

The tracks in the play area can be played using one of the following four types (modes) of playback.

Continuous playback (default setting)

The tracks in the play area will play back in order of their track numbers.

Single playback

Only the currently selected track will play back, and then playback will stop.

Program playback

The tracks will be played back in the order you programmed (see “Program playback” on page 25).

Random playback

All tracks in the play area will play back in a random order without regard to their track number. When all tracks have been played back, playback will stop.

Specifying the playback mode

You can easily select the playback mode by using a dedicated key on the remote. To select the playback mode from the SS-R1/SS-R05 itself, use menu mode.

Using the dedicated key of the remote

- 1 While stopped, or when no CompactFlash card is inserted, press the remote’s P.MODE key to cycle through the playback modes. The home screen shows the currently selected mode as follows.**

Display	Playback mode
CONTINUE	Continuous playback
SINGLE	Single playback
PROGRAM	Program playback
RANDOM	Random playback

NOTE

In this owner’s manual, we will assume that continuous playback is selected as the playback mode unless otherwise specified.

Using the menu

(For details on how to perform menu operations, refer to “Operations in the menu screens” on page 16).

- 1 While stopped, press the MENU key to enter menu mode.**
- 2 Open the PLAY menu.**
- 3 Select the PLAY MODE item.**
- 4 Turn the MULTI JOG dial to select the desired play mode.**
- 5 Press the TIME (ESC) key to return to the home screen.**

NOTE

The play mode you select is remembered even when the power is turned off.

Program playback

Here is how to play back tracks in the order of the program you specify. You can specify a program of up to 99 tracks.

- 1 While stopped, set the play mode to program play mode (see “Specifying the playback mode” on page 24).
- 2 Use the remote’s numeric keys (0–9) to enter the desired track number for the program, and press the ENTER key to confirm it.

The track will be registered in the program.

NOTE

Alternatively, you can use the front panel MULTI JOG dial to select a track and then press the MULTI JOG dial.

- 3 Repeat step 2 to register each of the desired tracks in the program.

NOTE

- You can program the same track repeatedly.
- Pressing the remote’s CLR/ESC key will delete the

last-programmed track from the program.

- If you attempt to program the 100th track, an error message of PROGRAM FULL will appear. A maximum of 99 tracks can be programmed.
- If the total playback time of the programmed tracks exceeds 99 hours 59 minutes 59 seconds, the display will indicate --H--M--S.

- 4 Press the PLAY key to begin program playback.

NOTE

- In program play mode, you won’t be able to play unless at least one track has been registered in the program.
- If you press the STOP key while stopped, all program data will be cleared.
- The program data will be cleared when you switch the play mode.
- The program data will be cleared when you power-off the SS-R1/SS-R05.

Switching the playback time display mode

You can select the way in which the playback time is shown in the home screen.

- 1 Press the front panel TIME (ESC) key (or the remote’s TIME key).

Each time you press this key, you will cycle through four types of time display. The currently selected display mode is shown above the time display area.

No indicator

The elapsed time of the current track is shown.

REMAIN is lit

The remaining time of the current track is shown.

TOTAL is lit

The elapsed time from the beginning of the play area is shown.

TOTAL and REMAIN are lit

The remaining time in the play area is shown.

NOTE

- While stopped, the total playback time of the play area is always shown, regardless of whether TOTAL and REMAIN are lit.
- In Program mode, the display area shows the elapsed time and remaining time of the entire program; not of the entire play area.
- The time display mode setting is remembered even when the power is turned off.
- For details on the time display during recording or in the record-ready condition, refer to “Switching the recording time display mode” on page 38.

Power-on play

The Power-on Play function starts playback automatically when the SS-R1/SS-R05 is powered-on.

If this function is on and the POWER switch is pressed inward, you can use a commercially-available timer to power-on the SS-R1/SS-R05, and playback will begin automatically.

- 1 Connect the SS-R1/SS-R05 to a timer so that its power will be supplied from the timer.

- 2 Make preparations for playback.

Insert a CompactFlash card, and make the desired settings for the play area and the playback mode, etc.

- 3 Set the front panel POWER ON PLAY switch to the PLAY position.

- 4 Set your timer to the desired time.

When the specified time arrives, the SS-R1/SS-R05 will be powered-on, and playback will begin automatically.

5 – Playback

Repeat playback

You can repeatedly play back all tracks in the play area, or repeatedly play back a specified region within a track (A-B Repeat playback).

Conventional repeat playback

If you press the remote's **REPEAT** key to turn Repeat playback on, all tracks in the play area will play repeatedly (to do this on the SS-R1/SS-R05 itself, use menu mode).

NOTE

*You can use the **PLAY** menu item **REPEAT** to turn on Repeat playback from the SS-R1/SS-R05 itself.*

REPEAT will light in the display.

In this state, all tracks in the play area can be played back repeatedly.

If you turn on Repeat playback during playback, playback will continue, and when it reaches the end of the play area, it will return to the beginning and continue playing. If you

turn on repeat playback while stopped, repeat playback will begin when you press the **PLAY** key.

To turn off repeat playback, press the remote's **REPEAT** key once again (or turn the **PLAY** menu item **REPEAT** to the **OFF** setting).

The **REPEAT** indicator in the display will go dark.

NOTE

- *By using repeat playback in conjunction with Single playback, Program playback, or Random playback, you can repeat a single song, repeat a program, or repeat random playback.*
- *The repeat function on/off setting is remembered even when the power is off.*

A-B Repeat playback

This lets you specify a desired region (A-B) within a track that will be played back repeatedly.

- 1 **While playing or stopped, press the remote's A-B key at the starting point (A) of the region that you want to repeat.**

In the home screen, the **REPEAT** and **A-** indicators will blink.

NOTE

*If you press the **REPEAT** key, the repeat play starting point (A) will be cancelled, and **REPEAT** and **A-** will go dark.*

- 2 **Once again, press the remote's A-B key at the ending point (B) of the region that you want to repeat. If you cancel during playback, playback will continue past the point specified as the ending point of A-B repeat playback.**

NOTE

- *If you press the **STOP** key to stop playback, the specified region (A-B) will be cleared.*
- *You can't specify A-B repeat playback across tracks.*

In the home screen, **A-B** will light (in addition to **REPEAT**). The region (A-B) has now been specified, and A-B repeat playback will begin.
- **To turn off A-B Repeat playback:**

Press the remote's **A-B** key or the **REPEAT** key. In the home screen, the **REPEAT** indicator and the **A-B** indicator will go dark, and A-B repeat playback will be cancelled.

Pitch Control playback

The SS-R1/SS-R05 can modify the pitch (the pitch and playback speed) of the playback (Pitch Control playback).

Here is how to use Pitch Control playback.

- 1 **Press the front panel **PITCH** knob (or the remote's **PITCH** key) to turn on Pitch Control playback.**

When this is on, the **PITCH** indicator in the display will light in the home screen.
- 2 **Turn the **PITCH** knob (or use the remote's **PITCH +/-** keys) to specify the pitch.**

While you're making this setting, the display's pitch control value is shown as **PITCH LVL XXX%**.

You can specify the pitch in a range of -16.0—+16.0.

- **To turn off Pitch Control playback:**

Press the front panel **PITCH** knob (or the remote's **PITCH** key).

The **PITCH** indicator in the display will go dark, and Pitch Control playback will turn off. Even if Pitch Control playback is off, the pitch you specified in step 2 above is remembered, and will be valid if you turn Pitch Control on once again.

TIP

By using the Key Control function in conjunction with the Pitch Control function, you can change only the speed without affecting the pitch (see “Key Control play” on page 27).

NOTE

When you turn Pitch Control playback on/off during playback, the playback sound may be momentarily interrupted.

Specifying the Pitch Step

You can change the pitch step.

Pitch steps are the amount of pitch change produced by turning the **PITCH** knob one step or by pressing the remote’s **PITCH +/-** key once.

You must make the Pitch Step setting from the SS-R1/SS-R05 itself (this setting cannot be made from the remote).

- 1 Hold down the front panel **PITCH** knob.
The pitch step setting screen will appear.



- 2 While this screen is displayed, you can turn the **MULTI JOG** dial to specify the pitch step in a range of 0.1%–1.0%.
- 3 When you’ve finished making the setting, press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key) to return to the home screen.

NOTE


The pitch control setting is remembered even when you turn off the power.

Key Control playback

You can use the Key Control function to change the key (pitch) of playback.

Here is how to use menu mode to turn Key Control on/off and adjust the key level setting (for details on menu operations, refer to “Operations in the menu screen” on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **PLAY** menu.
- 3 Select the **KEY** item.

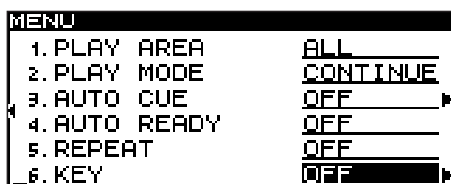

In this state you can turn Key Control on/off.

- 4 Turn the **KEY** item **ON**.
- 5 Press the front panel **▶▶** key (or the remote’s cursor **▶** key) to proceed to the level setting screen.



- 6 Turn the front panel **MULTI JOG** dial (or use the remote’s cursor **▲**, **▼** keys) to select the desired key level.

You can select the key level from a range of 6–1, 0 (no pitch change), #1–#6.

- 7 When you’ve finished making the setting, press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key) to return to the home screen.

The Key Control function will be on, and the home screen will indicate **KEY**.

NOTE

- The Key Control setting is remembered even when the power is turned off.
- When using the Key Control function, the playback sound may appear to quaver. This is due to the processing being applied to the playback, and is not a malfunction.


TIP

If you turn on both the Key Control function and the Pitch Control function, the key (pitch) will be specified by the Key Control function and the speed will be determined by the Pitch Control function. (In other words, using Pitch Control to change the speed will not affect the pitch of the sound). Thus, if you set **KEY LEVEL** to 0 and turn the Key Control function on, you can use Pitch Control to change the playback speed by itself without affecting the pitch.

5 – Playback

Using the remote's dedicated key to turn Key Control on/off

You can use the remote's **KEY** key to turn Key Control on/off.

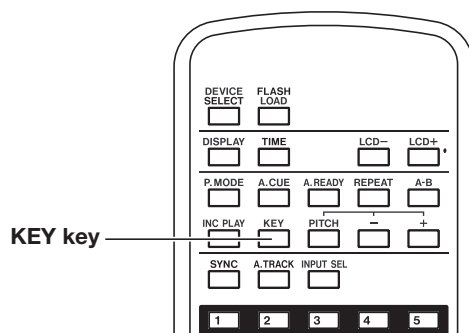


Auto Cue function

If the Auto Cue function is on, and you select a track to play and then enter pause mode, any “silent” portion at the beginning of the track will be skipped, and the SS-R1/SS-R05 will pause at the location where the actual “signal” of the track begins to rise. This means that sound will be heard immediately when you start playback.

You can specify the threshold level (= auto cue level) used to detect the audio signal when the Auto Cue function is active. In other words, any signal higher than the auto cue level will be treated by the SS-R1/SS-R05 as “signal”, and any signal lower than this level will be treated as “silence”.

The following procedure describes how you can use the menu to turn the Auto Cue function on/off and adjust the Auto Cue Level setting (for details on operations in the menu screen, refer to “Operations in the menu screens” on page 16).


- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **PLAY** menu.
- 3 Select the **AUTO CUE** item.

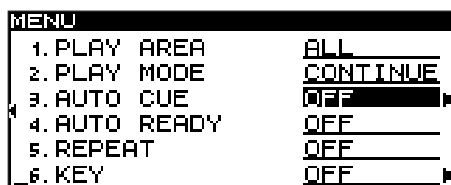

In this state, you can turn the Auto Cue function on/off.

- 4 Turn the **AUTO CUE** item **ON**.

- 5 Press the front panel **▶▶** key (or the remote's cursor **▶** key).

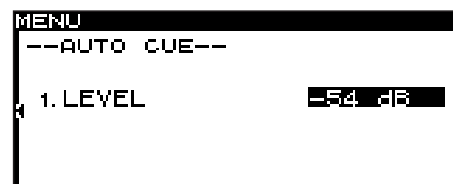

In this screen you can adjust the auto cue level.

- 6 Turn the front panel **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to select the desired **Auto Cue Level**.


You can select an auto cue level in the range of -24 dB – -72 dB (6 dB steps).

- 7 When you've finished making the setting, press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.

If the Auto Cue function is on, **A_CUE** will be lit in the home screen.


NOTE

The Auto Cue setting is remembered even if the power is off.

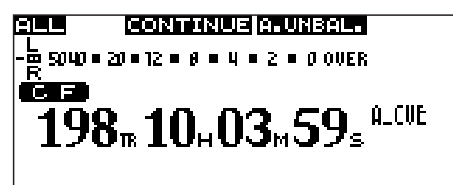

Using the remote’s dedicated key to turn Auto Cue on/off


You can turn the Auto Cue function on/off by pressing the remote’s **A.CUE** key.

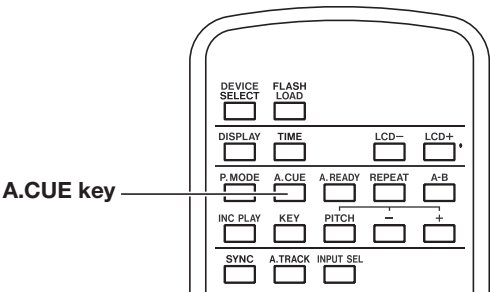


Auto Ready function

If the Auto Ready function is on, playback will pause at the beginning of the next track when a track has finished playing.

You can switch the Auto Ready function on/off by pressing the remote’s **A.READY** key.

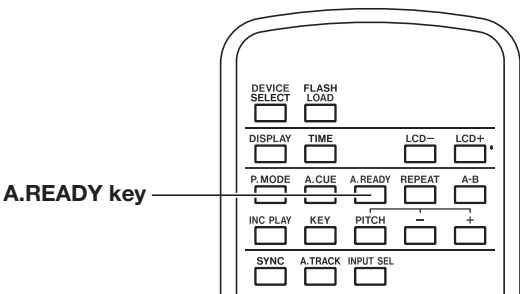


If the Auto Ready function is on, **A_READY** will be lit in the home screen.

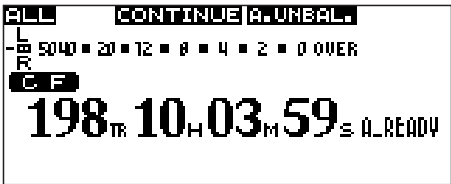

Turning the Auto Ready function on/off from the front panel

You can also turn the Auto Ready function on/off from the front panel via the menu (for details on operations in the menu screen, refer to “Operations in the menu screens” on page 16).

- 1 Press the **MENU** key to access the main menu screen.
- 2 Open the **PLAY** menu.
- 3 Select the **AUTO READY** item.

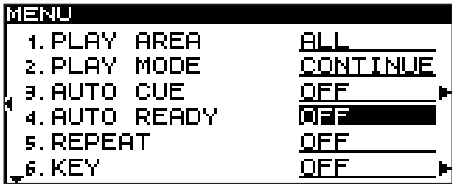

- 4 Turn the **MULTI JOG** dial to turn the setting on/off.
- 5 When you’ve finished making the setting, press the **TIME (ESC)** key to return to the home screen.

NOTE


The Auto Ready setting is remembered even if the power is off.

5 – Playback

Call function

The Call function returns to the point at which you most recently initiated playback from the pause condition (the “Call point”), and pauses there.

To execute the Call function, press the front panel or remote’s **CALL** key during playback or while stopped.

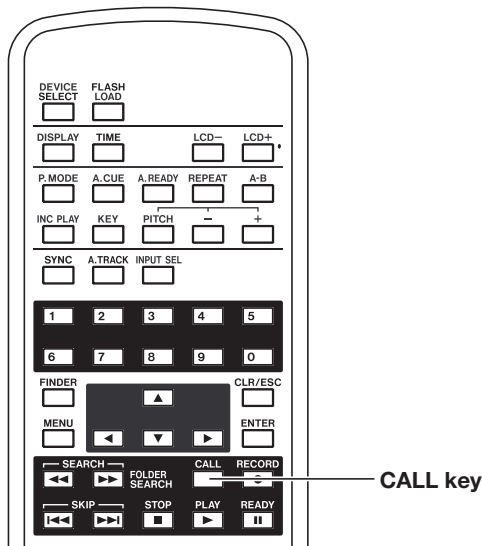

The Call point will be erased when you perform the following operations.

- Turn off the power.
- Remove the CompactFlash card.
- Switch the play mode.
- Switch the play area.
- Change the contents of the CompactFlash card (by recording, editing, deleting, etc.).

NOTE

- If you press the **CALL** key when a Call point has not been specified, the display will indicate NoCallPoint.
- You can't use the Call function in program play mode or random play mode.

Incremental Playback


If the Incremental Playback mode is on, pressing the **PLAY** key during playback will begin playback from the beginning of the next track, and pressing the **STOP** key while playing will pause at the beginning of the next track.

NOTE


- When the Incremental Playback mode is on, pressing the **PLAY** key while paused will begin playback from that point. Pressing the **STOP** key while paused will cause playback to stop.
- If you press the **PLAY** key during the last track is played back, playback will begin from the first track in the play area. Pressing the **STOP** key will pause at the beginning of the first track in the play area.

Using the remote's dedicated key

You can switch the Incremental Playback mode on/off by pressing the remote's **INC PLAY** key.

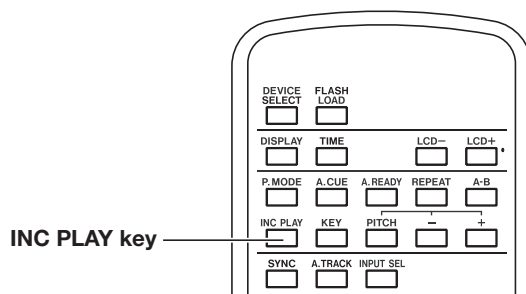

When the Incremental Playback mode is on, **INC_PLAY** will light in the home screen.

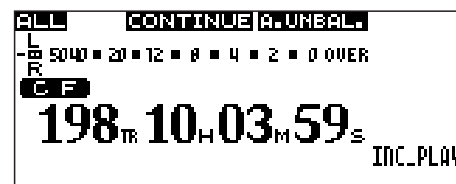

Using the menu to make settings

(For details on menu operations, refer to “Operations in the menu screens” on page 16.)

- 1 Press the MENU key to access the main menu list screen.
- 2 Open the PLAY menu.
- 3 Highlight the PREFERENCE item.
- 4 Press the front panel ►► key (or the remote’s cursor ► key) to proceed to the PLAY PREFERENCE screen.

- 5 Select the INC.PLAY item.

MENU	
--PLAY PREFERENCE--	
1. INC.PLAY	OFF
2. MONO MIX	OFF
3. EOM TRACK	OFF
4. EOM MEDIA	OFF
5. RESUME	OFF

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the “3. EOM TRACK and 4. EOM MEDIA items.”

- 6 Turn the MULTI JOG dial (or use the remote’s cursor ▲, ▼ keys) to turn the setting ON/OFF.
- 7 When you’ve finished making settings, press the front panel TIME (ESC) key (or the remote’s CLR/ESC key) to return to the home screen.

NOTE

The Incremental Play setting is remembered even when the power is turned off.

Playing back in monaural

You can play back a stereo audio file in monaural. In this case, the L/R channels of the track will be mixed and output from the L/R output channels.

Use the menu to make this setting (for details on menu operations, refer to “Operations in the menu screens” on page 16).

- 1 Press the MENU key to access the main menu list screen.
- 2 Open the PLAY menu.
- 3 Highlight the PREFERENCE item.
- 4 Press the front panel ►► key (or the remote’s cursor ► key) to proceed to the PLAY PREFERENCE screen.

- 5 Select the MONO MIX item.

MENU	
--PLAY PREFERENCE--	
1. INC.PLAY	OFF
2. MONO MIX	OFF
3. EOM TRACK	OFF
4. EOM MEDIA	OFF
5. RESUME	OFF

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the “3. EOM TRACK and 4. EOM MEDIA items.”

- 6 Turn the MULTI JOG dial (or use the remote’s cursor ▲, ▼ keys) to turn the setting ON/OFF.
- 7 When you’ve finished making settings, press the front panel TIME (ESC) key (or the remote’s CLR/ESC key) to return to the home screen.

NOTE

This setting is remembered even when the power is turned off.

5 – Playback

Resume Playback

If the Resume Playback mode is on, playback will begin from the location at which playback was last stopped (the “resume point”).


The Resume point will be erased when you perform the following operations.

- Remove the CompactFlash card.
- Switch the play area.
- Switch the play mode.
- Change the contents of the CompactFlash card (by recording, editing, deleting, etc.).

Use the menu to turn the Resume function on/off (for details on menu operations, refer to “Operations in the menu screens” on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **PLAY** menu.
- 3 Highlight the **PREFERENCE** item.
- 4 Press the front panel **▶▶** key (or the remote’s cursor **▶** key) to proceed to the **PLAY PREFERENCE** screen.

- 5 Select the **RESUME** item.

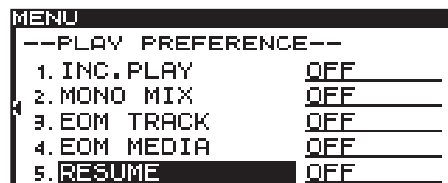

MENU	
--PLAY PREFERENCE--	
1. INC. PLAY	OFF
2. MONO MIX	OFF
3. EOM TRACK	OFF
4. EOM MEDIA	OFF
5. RESUME	OFF

- 6 Turn the **MULTI JOG** dial (or use the remote’s cursor **▲**, **▼** keys) to turn the setting **ON/OFF**.
- 7 When you’ve finished making settings, press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key) to return to the home screen.

NOTE

- This setting is remembered even when the power is turned off.
- If no playable track exists (e.g., if not even one track has been registered in program mode), of course, the resume point cannot be made. The counter display will state 000tr 00h 00m 00s.
- If the resume point does not exist (i.e., if the time registered as the resume point does not exist), the beginning of the first track in the play area will be the resume point.
- This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the “3. EOM TRACK and 4. EOM MEDIA items.”

Flash Start function

The Flash Start function lets you instantly start playback of a track you’ve registered.

The beginning of up to twenty tracks can be pre-loaded into memory, so that playback can be triggered instantly from a PS/2 keyboard connected to the front panel, or from an external device connected to the SS-R1’s parallel connector.

- 1 Specify the play area (see “Play area” on page 21).
Specify the play area as the play list or folder that contains the tracks you want to flash-start. Make sure that there are no more than twenty tracks.
- 2 Set the play mode to **CONTINUE** or **PROGRAM** (see “Playback Modes” on page 24).

NOTE

You can’t use Flash Load if the play mode is set to **RANDOM**.

- 3 While stopped, press the remote’s **FLASH LOAD** key.
The SS-R1/SS-R05 will successively read the beginning of each track in the play area.
The tracks will be read in the order of playback. In other words if the play mode is **CONTINUE**, the tracks will be read consecutively, starting with the first. If the


play mode is **PROGRAM**, the tracks will be read in the order of the program.

While the tracks are being read, the lower right of the home screen will indicate **FLASH** blinking.

NOTE

- If you press the **FLASH LOAD** key when the play mode is **RANDOM**, the display will indicate **CAN’T SELECT**, and the data will not be loaded.
- If you press the **FLASH LOAD** key when the play mode is **SINGLE**, the tracks in the play area will be read successively in the same way as for the **CONTINUE** setting.
- If twenty-one or more tracks are registered, data for the first twenty tracks from the beginning will be loaded.

When the data has been loaded, the lower right of the home screen will indicate **FLASH**.

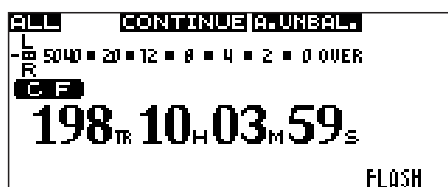

- 4 When **FLASH** is lit, you can trigger flash-start playback from a PS/2 keyboard connected to the front panel or from an external device connected to the SS-R1's parallel connector.

If you're using a PS/2 keyboard, the CTRL+function keys (F1–F12) will flash-start tracks 1–12 (see "Keyboard operations" on page 61).

If you're using the external parallel connector, you'll be able to flash-start tracks 1–20 (see "Control connections" on page 8).

NOTE

Tracks used with flash start must have the same sampling frequency. If a track with a different sampling frequency is detected while loading the tracks, the display indicates **FLASH LOAD**, and the unit cancels the track loading (the tracks already loaded are also canceled). The **FLASH** indicator does not light up.

TIP

You can make flash start settings for the desired tracks in an efficient way by specifying the play area as **PLAYLIST** and then selecting a playlist containing only the tracks you want to flash-start. (See "Using the playlist finder" on page 55, "Play area" on page 21.)

End of disc/track message (EOM) (SS-R1 only)

If the EOM function is on, an EOM tally signal will be output from the **CONTROL I/O (PARALLEL)** connector when the time remaining in the track or the play area falls below the specified duration.

Specifying an EOM tally output trigger

Use menu mode to specify the remaining track time or playlist time that will trigger the output of an EOM tally signal (for details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **PLAY** menu.
- 3 Highlight the **PREFERENCE** item.
- 4 Press the front panel **▶▶** key (or the remote's cursor **▶**) key to proceed to the **PLAY PREFERENCE** screen.
- 5 Select the **EOM TRACK** item if you want to use the track remaining time as the trigger, or **EOM MEDIA** if you want to use the remaining time in the play area as the trigger.

MENU	
--PLAY PREFERENCE--	
1. INC. PLAY	OFF
2. MONO MIX	OFF
3. EOM TRACK	OFF
4. EOM MEDIA	OFF
5. RESUME	OFF

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the "3. EOM TRACK and 4. EOM MEDIA items."

- 6 Turn the **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to specify the remaining time that will trigger the tally output.
You can choose from the range of **OFF** or **1-99** (seconds).
- 7 When you've finished making settings, press the **TIME (ESC)** key to return to the home screen.

NOTE

This setting is remembered even when the power is off.

Example of actual use

- 1 To the **CONTROL I/O (PARALLEL)** connector, connect the device that will receive the EOM tally signal.
- 2 Power-on the SS-R1 and the receiving device.
- 3 Begin playback on the SS-R1.
When the remaining time of the current track or the play area falls below the specified time duration, the **EOM** indicator in the home screen will blink, and an EOM tally signal will be output from the **CONTROL I/**

O (PARALLEL) connector.
If the remaining time of both the track and the play area have been specified as triggers, an EOM tally signal will be transmitted when either condition is satisfied.

6 – Recording

The SS-R1/SS-R05 can record MP3 or WAV format (44.1/48 kHz) audio to a CompactFlash card.

The following explanations assume that a recordable CompactFlash card has been inserted, that the necessary connections have been completed, and that the SS-R1/SS-R05 is powered-on.

Unexpected power interruptions

This unit has an automatic saving function to prevent the complete loss of track recordings should the power be interrupted unexpectedly when recording to a CompactFlash card. The function saves data up to 25 seconds before the power interruption.

NOTE

- Due to the nature of CompactFlash cards, all files on the card could be lost if the power is turned off or the card is removed from the unit while data is being written to the system area.
- This function is not intended to be used to turn the power off during recording with an external timer, for example.

Selecting the input source

You can select the input source (recording source) from three types of input: analog balanced (SS-R1 only), analog unbalanced, and digital.


To select an input source you can use the menu or the remote's **INPUT SEL** key.

NOTE

You can't change the input source during recording.

Using the dedicated remote key to select the source

Each time you press the **INPUT SEL** key you will cycle through the input source.

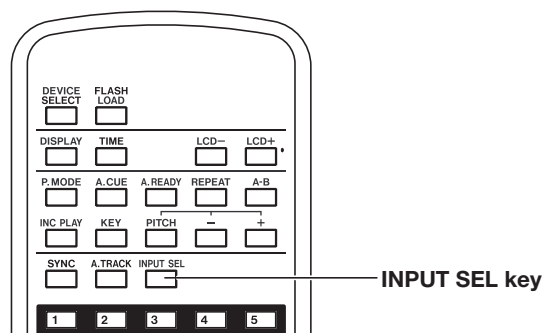

Using the menu to select the source

(For details on menu operations, refer to “Operations in the menu screens” on page 16).

- 1 Press the **MENU** key to access the main menu list screen.

MENU	
1. PLAY	1. PLAY AREA
2. REC	2. PLAY MODE
3. UTILITY	3. AUTO CUE
	4. AUTO READY
	5. REPEAT
	6. KEY

- 2 Open the **REC** menu.

MENU	
1. PLAY	1. INPUT SELE...
2. REC	2. INPUT VOLU...
3. UTILITY	3. REC FORMAT
	4. SYNC
	5. AUTO TRACK
	6. PREFERENCE

- 3 Select the **INPUT SELECT** item.
- 4 Turn the **MULTI JOG** dial (or use the remote's cursor ▲, ▼ keys) to select one of the following.

MENU	
1. INPUT SELECT	A. UNBAL.
2. INPUT VOLUME	
3. REC FORMAT	MP3
4. SYNC	OFF
5. AUTO TRACK	OFF
6. PREFERENCE	

A. UNBAL. (analog unbalanced input),
A. BAL. (analog balanced input, SS-R1 only),
D. COAX. (digital input)


- 5 When you've made your selection, press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.

NOTE

The input source selection is remembered even when the power is turned off.

Input source indicator

The currently selected input source is shown in the upper right of the home screen.

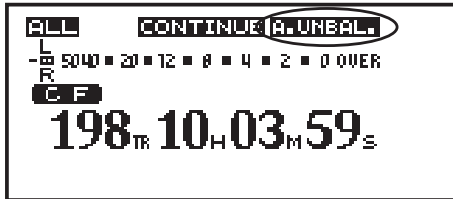

If A.BAL. is lit (SS-R1 only)

The input signals from the ANALOG INPUTS (BALANCED) L/R jacks are selected.

If A.UNBAL. is lit

The input signals from the ANALOG INPUTS (UNBALANCED) L/R jacks are selected.

If D.COAX. is lit

The input signal from the DIGITAL IN (COAXIAL) jack is selected.

NOTE

If the INPUT SELECT item is set to D.COAX., you won't be able to initiate recording from the record-ready state if the input source is in any of the following states.


- When the SS-R1/SS-R05 is not digitally locked to the input source. (The display will indicate DIN UNLOCK).
- When the input source is not audio. (The display will indicate DIN NotAudio).
- When the sampling rate specified by the REC menu item REC FORMAT differs from the input source. (The display will indicate FS UNMATCH). However if you have enabled the sampling rate converter, recording can take place even if the sampling rate does not match (see "Using the sampling rate converter" on page 36).

Specifying the recording file format


The SS-R1/SS-R05 can record in MP3 or WAV format.

The file format setting is made via the menu while stopped or while in the record-ready condition (for details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the MENU key to access the main menu list screen.
- 2 Open the REC menu.
- 3 Select the REC FORMAT item.
- 4 Turn the MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to select ".mp3" or ".wav".

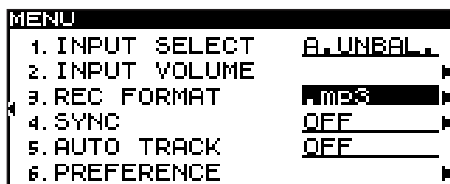

- 5 Press the front panel ►► key (or the remote's cursor ► key) to proceed to the detailed settings.

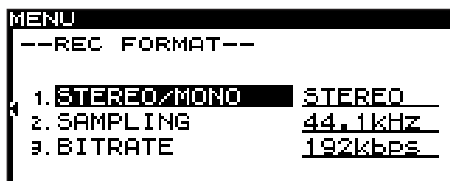

- 6 Make settings for the following items.

STEREO/MONO

Specify whether a stereo file or a monaural file will be recorded.

SAMPLING

Specify whether the sampling rate will be 44.1 kHz or 48 kHz.

BITRATE (selectable only if "mp3" is selected)

Specify the bit rate. You can choose from 64 kbps, 128 kbps, 192 kbps, 256 kbps, and 320 kbps.

- 7 When you've finished making settings, press the front panel TIME (ESC) key (or the remote's CLR/ESC key) to return to the home screen.

NOTE

The recording format setting is remembered even when the power is turned off.

6 – Recording


Using the sampling rate converter

The SS-R1/SS-R05 contains a built-in sampling rate converter, allowing you to record at a sampling rate that is different than the sampling rate of the digital input source.

Use the menu to turn the sampling rate converter (SRC) on/off (for details on menu operations, refer to “Operations in the menu screens” on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **REC** menu.
- 3 Highlight the **PREFERENCE** item.
- 4 Press the front panel **▶▶** key (or the remote’s cursor **▶** key) to proceed to the **REC PREFERENCE** screen.

- 5 Select the **SRC** item.

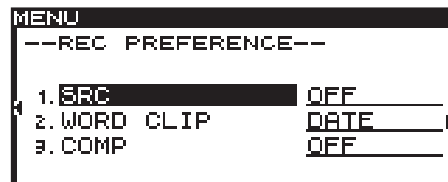


- 6 Turn the **MULTI JOG** dial (or use the remote’s cursor **▲**, **▼** keys) to turn the **SRC** setting **ON** / **OFF**.
- 7 When you’ve finished making the setting, press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key) to return to the home screen.

NOTE

- If a digital signal whose sampling rate differs from the sampling rate specified in the **REC FORMAT** item is being received at the **DIGITAL IN** jack, and you attempt to record with **SRC** off, an error message (**FS UNMATCH**) will appear.
- The sampling rate setting is remembered even when the power is turned off.

Monitoring the input signal

When you press the **RECORD** key to enter the record-ready condition, the front panel **RECORD** key and **READY** key will light, and the input signal will be output from the SS-R1/SS-R05’s various output jacks (headphone, analog balanced, analog unbalanced, and digital). The meter in the home screen will indicate the input level.

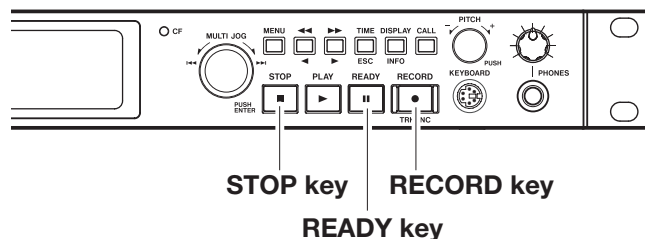

To cancel the record-ready condition, press the **STOP** key.

TIP


- If you simply want to monitor the input signal without intending to record anything, press the **RECORD** key without a CompactFlash card inserted. The display will indicate **MONITOR**, and the **RECORD** key will blink red.
- To stop monitoring the input signal, press the **STOP** key.

Adjusting the input signal level and balance


Use the menu to adjust the level and balance of the input signal.

As described above in “Monitoring the input signal”, put the SS-R1/SS-R05 in a condition where you can monitor the input signal, and then proceed with the following steps (for details on menu operations, refer to “Operations in the menu screens” on page 16).

- 1 Press the MENU key to access the main menu list screen.
- 2 Open the REC menu.
- 3 Highlight the INPUT VOLUME item.

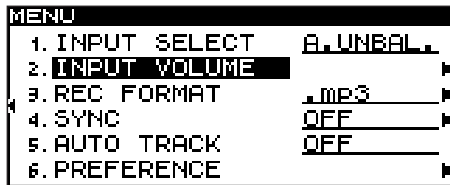

- 4 Press the front panel ►► key (or the remote’s cursor ► key) to access the INPUT VOLUME SETTING popup window.

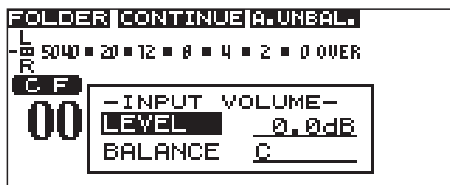

- 5 Turn the MULTI JOG dial (or use the remote’s cursor ▲, ▼ keys) to highlight the INPUT LEVEL

item, and then press the front panel ►► key (or the remote’s cursor ► key) to highlight the level value.

- 6 Turn the MULTI JOG dial (or use the remote’s cursor ▲, ▼ keys) to adjust the volume.

You can adjust the volume in a range of $-\infty$ to +18 dB.

The upper part of the display shows the level meter of the home screen, allowing you to watch the level while you make adjustments.

Set the level as high as possible without allowing the **OVER** indicator at the right edge of the meter to light.

NOTE


OVER will light at -0.2 dB or higher.

- 7 Press the front panel ◀◀ key (or the remote’s cursor ◀ key) to highlight LEVEL.
- 8 Turn the MULTI JOG dial (or use the remote’s cursor ▲, ▼ keys) to highlight BALANCE, and then press the front panel ►► key (or the remote’s cursor ► key) to highlight the balance value.
- 9 Turn the MULTI JOG dial (or use the remote’s cursor ▲, ▼ keys) to adjust the balance.
You can adjust this in a range of L50–C (center)–R50.
- 10 When you’ve finished making settings, press the front panel TIME (ESC) key (or the remote’s CLR/ESC key) to return to the home screen.


Basic recording operation

When you’ve finished making the above settings (input source selection, recording file format setting, sampling rate converter on/off, input level adjustment), you can begin recording.

To enter the unit in record-ready condition when stopped: Press the **RECORD** key to enter the record-ready condition (the front panel **RECORD** key and **READY** key will light).

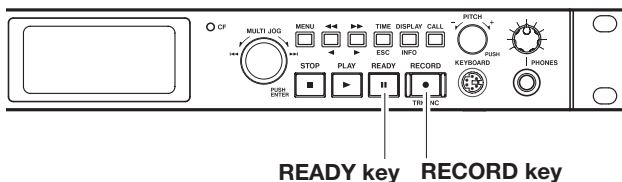

To start recording from the record-ready (pause) condition: Press the **PLAY** key.

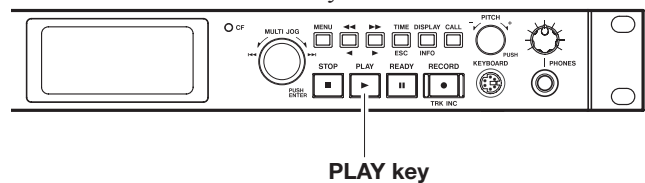

To pause recording: Press the **READY** key.

To stop recording: Press the **STOP** key. When you stop recording, the recorded data will be written, and an audio file will be created.

NOTE

- You can use the **PREFERENCE** menu item **WORD CLIP** to specify the audio file name that is automatically added to the created file (see “Specifying a name of the recorded file” on page 44).
- The maximum size of each track is 2 GB.
- The recorded track will be created in the current folder (see “Making a folder the current folder” on page 48).

6 – Recording

NOTE

While the recorded content is being stored to the card, the display will indicate INFORMATION WRITING.

While this message is shown, do not move the SS-R1/SS-R05, turn off the power, or remove the card. The content will not be recorded correctly if you do so.

WAVE Stereo

Label on media	44.1 kHz	48 kHz
512 MByte	48 minutes	44 minutes
1 GByte	1 hour 36 minutes	1 hour 28 minutes
2 GB	3 hours 12 minutes	2 hours 56 minutes
4 GB	6 hours 24 minutes	5 hours 52 minutes
8 GB	12 hours 48 minutes	11 hours 44 minutes

WAVE Mono

Label on media	44.1 kHz	48 kHz
512 MByte	1 hour 36 minutes	1 hour 28 minutes
1 GByte	3 hours 12 minutes	2 hours 56 minutes
2 GB	6 hours 24 minutes	5 hours 52 minutes
4 GB	12 hours 48 minutes	11 hours 44 minutes
8 GB	25 hours 36 minutes	23 hours 28 minutes

MP3 Stereo , 44.1 kHz/48 kHz

Label on media	64 kbps	128 kbps	192 kbps	256 kbps	320 kbps
512 MByte	17 hours 40 minutes	8 hours 50 minutes	5 hours 50 minutes	4 hours 25 minutes	3 hours 30 minutes
1 GByte	35 hours 20 minutes	17 hours 40 minutes	11 hours 40 minutes	8 hours 50 minutes	7 hours 00 minutes
2 GB	70 hours 40 minutes	35 hours 20 minutes	23 hours 20 minutes	17 hours 40 minutes	14 hours 00 minutes
4 GB	141 hours 20 minutes	70 hours 40 minutes	46 hours 40 minutes	35 hours 20 minutes	28 hours 00 minutes
8 GB	282 hours 40 minutes	141 hours 20 minutes	93 hours 20 minutes	70 hours 40 minutes	56 hours 00 minutes

MP3 Mono , 44.1 kHz/48 kHz (If you check the recorded file information, the bit rate appears a half of the bit rate selected when recording.)

Label on media	64 kbps	128 kbps	192 kbps	256 kbps	320 kbps
512 MByte	35 hours 20 minutes	17 hours 40 minutes	11 hours 40 minutes	8 hours 50 minutes	7 hours 00 minutes
1 GByte	70 hours 40 minutes	35 hours 20 minutes	23 hours 20 minutes	17 hours 40 minutes	14 hours 00 minutes
2 GB	141 hours 20 minutes	70 hours 40 minutes	46 hours 40 minutes	35 hours 20 minutes	28 hours 00 minutes
4 GB	282 hours 40 minutes	141 hours 20 minutes	93 hours 20 minutes	70 hours 40 minutes	56 hours 00 minutes
8 GB	565 hours 20 minutes	282 hours 40 minutes	186 hours 40 minutes	141 hours 20 minutes	112 hours 00 minutes

NOTE


The number of bytes listed on the media will not match the actual capacity.

Example: 4.0 GB media ≈ 4,096,000,000 bytes ≈ 3.8 Gbytes

The numbers in the table are estimates, and may contain some discrepancies.

Switching the recording time display mode

During recording (or in the record-ready condition), you can use the front panel or remote's **TIME** key to switch the time display mode between the following four types. The selected time display mode will be lit above the time display in the home screen.

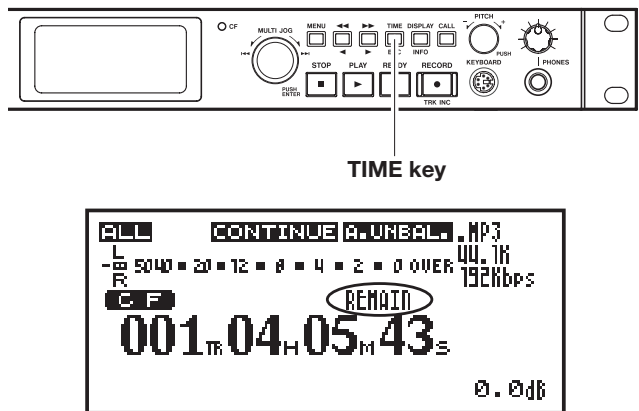

ing time is limited by the free space on the card or by the maximum track size (2 GB).

TOTAL is lit

The total recorded time of the entire card is shown.

TOTAL and REMAIN are lit

The remaining recordable time of the entire card at the current recording format is shown.

NOTE

- The remaining time will depend on the recording format (the REC menu item REC FORMAT).
- During recording, if the recordable time of the card is shorter than the recordable time for a single track, the time counter shows the same remaining time when only REMAIN is lit or TOTAL and REMAIN are lit.
- The recording time display mode is remembered even when the power is turned off.
- For details on the time display during playback, refer to "Switching the playback time display mode" on page 25.
- The SS-R1/SS-R05 is able to record a maximum of 999 tracks.

Nothing lit

The recorded time of the current track is shown.

REMAIN is lit

The remaining recordable time of the current track at the current recording format is shown. The remain-

Sync recording

If the Sync Record function is on, recording will begin automatically when the input signal exceeds the level you specify (the sync level). After recording has begun,

recording will end automatically when the input signal stays below the sync level for a specified length of time (the stop time), and will switch to the record-ready state.

Making settings


Use the menu to turn the Sync Recording function on/off and to make detailed settings. However, you can also use the remote's **SYNC** key to turn this function on/off (but not make settings).

If the Sync Record function is on, **SYNC** will light in the home screen.


Using the menu

(For details on menu operations, refer to “Operations in the menu screens” on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **REC** menu.
- 3 Select the **SYNC** item.

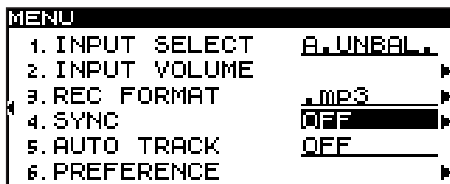

- 4 Turn the **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to turn the setting on/off.
- 5 Press the front panel **▶▶** key (or the remote's cursor **▶** key) to proceed to the screen for detailed settings.

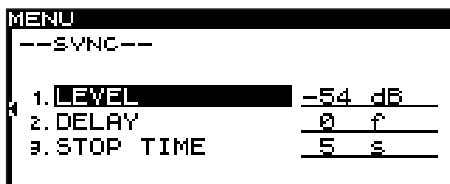

- 6 Set the following items.

LEVEL

Specify the sync level.

You can set this in a range of -72 dB – -24 dB (6 dB steps). (The default setting is -54 dB).

DELAY

Specify the time (in steps of one frame) from when a signal exceeding the sync level is detected until recording will begin. (One frame is 1/75th of a second). You can set this in a range of -75 frames – +75 frames (the default setting is 0). If you specify a negative value, the corresponding length of audio prior to triggering

will also be captured.

NOTE

When this range is converted to seconds, it is equivalent to -1.00 seconds – +1.00 seconds.

STOP TIME

Specify the length of time after which recording will automatically end when the input signal stays below the sync level.

You can specify a value of 5–30 seconds (one-second steps) or INF. By default, this will be five seconds. If you don't want recording to end automatically, choose INF.


- 7 When you've finished making settings, press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.

NOTE

This setting is remembered even when you turn off the power.

Using the remote's dedicated key to turn the function on/off

Each time you press the **SYNC** key, the Sync Record function will turn on/off.

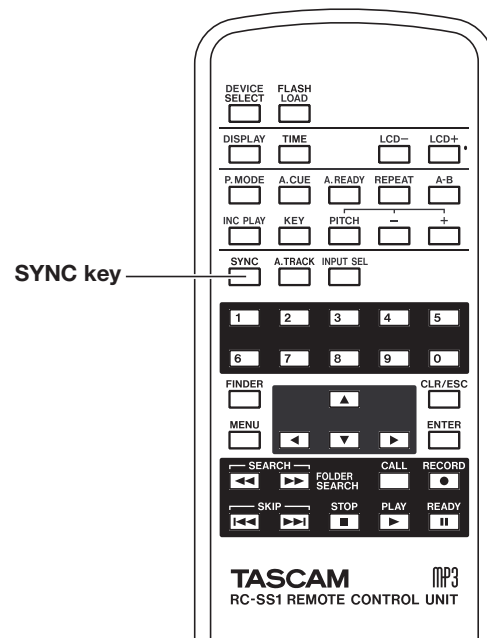


6 – Recording

Sync Record operation

When you put the SS-R1/SS-R05 in record-ready condition with the Sync Record function on, recording will automatically start or stop according to the level of the input source.

- **When a signal higher than the sync level is input, recording will begin automatically.**


However, recording will not begin even if input is detected unless there has been at least one second in which the signal was below the sync level after entering the record-ready state.

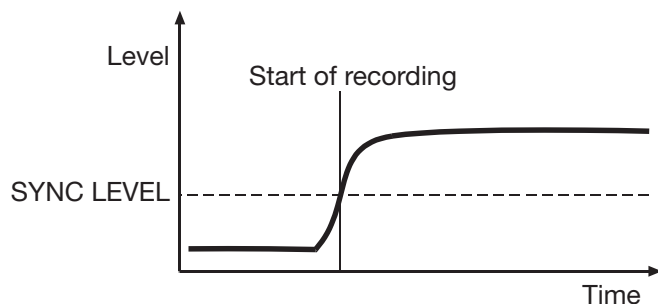

NOTE

The above explanation is for the case when the *DELAY* setting is "0" (the default setting). By changing the *DELAY* setting, you can change the "record start" point.

- **While recording, if the input signal stays below the sync level for the duration specified by STOP TIME (default: 5 seconds), the SS-R1/SS-R05 will automatically switch to the record-ready condition.**

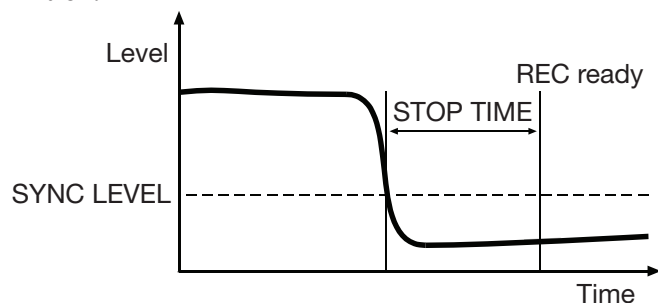


NOTE

If you set the *STOP TIME* to *INF*, the record-pause state will not be entered even though the input signal falls below the sync level.

- **To defeat Sync Record, press the remote's SYNC REC key.**


- **When the sync level is too high:**

If the sync level setting is too high, you may have problems such as failing to capture the beginning of a song that begins with a low volume.

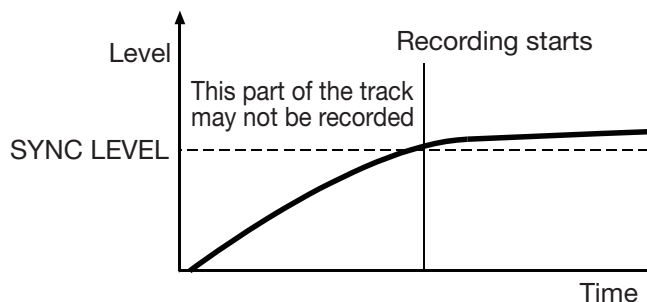

- **If the sync level is too low:**

Sync recording will not begin if the source you're recording has a high noise level, so that the sync level is exceeded immediately when you enter the record-ready state.

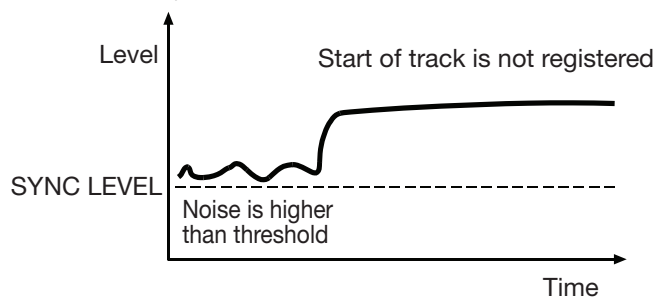

Auto Track function

Auto Track recording is a function that automatically assigns a new track number when the specified condition is satisfied during recording. A new audio file is created each time a new track number is assigned.

You'll use the menu to select Auto Track mode and make detailed settings. However, the Auto Track mode setting itself can be made using the **A.TRACK** key of the remote.

If the Auto Track function is on, **A_TRACK** will light in the home screen.

Auto track settings can be made at any time, and you can change the settings after you start recording.


NOTE

If you've recorded in WAV format, you'll be able to use editing functions to divide or join tracks after recording (see "Operations in the file menu screen" on page 50).

Using the menu

(For details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **REC** menu.
- 3 Select the **AUTO TRACK** item.

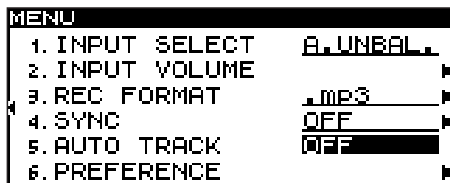


- 4 Turn the **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to select the Auto Track mode from the following choices.

OFF:

New track numbers will not be assigned automatically.

LEVEL:

A new track number will be assigned when the signal exceeds the auto track level (specified in the screen for detailed settings described below) after having stayed below it for two seconds or longer.

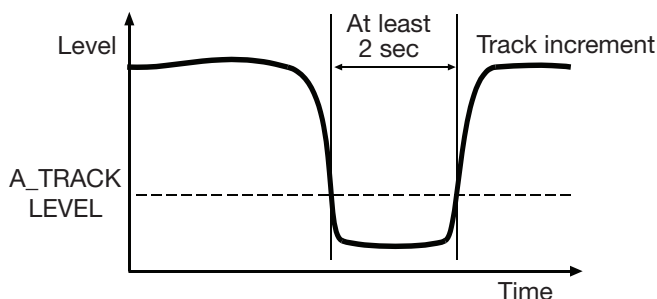

DD:

When recording a digital source (CD, DAT, MD) via the **DIGITAL IN** jack, a new track number will be assigned when a track division is detected in the source.

However when recording an analog source or a digital source other than those listed above, this will operate as **LEVEL** mode, and a new track number will be assigned

according to the input level.


TIME:

A new track number will be assigned at a fixed interval of time (specified in the screen for detailed settings described below).

- 5 If you selected a choice other than **OFF**, press the front panel **▶▶** key (or the remote's cursor **▶** key) to proceed to the screen for detailed settings.

- 6 Make detailed settings for the function.

- If **LEVEL** is selected

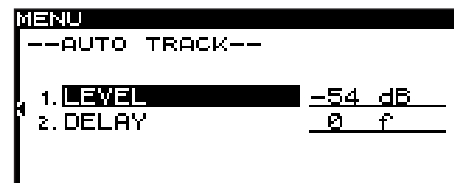

Use the **LEVEL** item to specify the level at which Auto Track will operate.

You can set this in a range of -72 dB – -24 dB (6 dB steps). (The default setting is -54 dB).

Use the **DELAY** item to specify the time (in units of one frame) from when a signal exceeding the auto track level is detected until the new track number is assigned (one frame is 1/75th of a second).

You can set this in a range of -75 frame – +75 frame (the default setting is 0). Negative values will cause a portion of the signal prior to the detection point to be captured.

NOTE

If this range is converted into time, the adjustable range is equivalent from -1 second to +1 second.

6 – Recording


• If DD is selected

As when LEVEL is selected, use the DELAY item to specify the time from when a signal exceeding the auto track level is detected until the new track number is assigned, in steps of one frame (one frame is 1/75 of a second).



• If TIME is selected

Use the INTERVAL item to specify the time interval at which the track number is assigned, in a range of 1–10 minutes (one-minute steps).

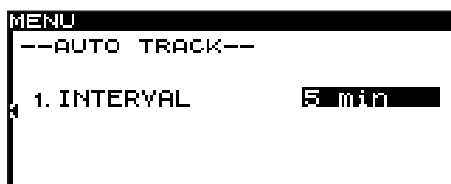

- 7 When you've finished making settings, press the front panel TIME (ESC) key (or the remote's CLR/ESC key) to return to the home screen.

NOTE

This setting is remembered even when you turn off the power.

Using the remote's dedicated key to switch modes

Each time you press the remote's A.TRACK key, the Auto Track function mode will cycle in the order of OFF → LEVEL → DD → TIME.

Assigning a new track number manually

You can assign a new track number manually by pressing the RECORD key during recording.

However, you cannot create a track that is shorter than four seconds.

NOTE

- If you recorded in WAV format, you can use the editing functions to divide or join tracks after they have been recorded (see "Operations in the file menu screen" on page 50).
- Depending on the CompactFlash (CF) card used on the unit, when recording MP3 files, incrementing and creating many tracks in a short time period can cause over flow (the unit shows the message OVER FLOW on the screen), and the unit will stop operating. To avoid such unexpected results, leave a sufficient time gap after the previous track before increment the track number.


Applying the compressor while recording

You can apply the SS-R1/SS-R05's built-in compressor to the recording source while you record.

A compressor is an effect that holds down peaks in the audio, making the overall level more consistent and more listenable.

You'll use the menu to turn the compressor on/off (for details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **REC** menu.
- 3 Highlight the **PREFERENCE** item.
- 4 Press the front panel **▶▶** key (or the remote's cursor **▶** key) to proceed to the **REC PREFERENCE** screen.
- 5 Select the **COMP** item.

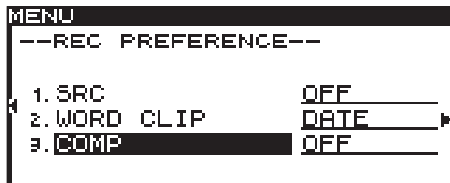

- 6 Turn the **MULTI JOG** dial (or use the remote's cursor **▲**, **▼** keys) to select one of the following as the **compressor mode**.

OFF: The compressor will not be used when recording.

SOFT: Light compression will be applied. This setting is suitable when recording music.

HARD: Strong compression will be applied. This setting is suitable when the audio source you're recording has a low volume. Since the recording volume will be boosted, it is also suitable when recording a meeting or conference.

- 7 When you've finished making settings, press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.

NOTE

This setting is remembered even when you turn off the power.


6 – Recording

Specifying the name of the recording file

You can specify the file name before recording, so that it is automatically assigned during recording.

You'll use the menu to make this setting (for details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the MENU key to access the main menu list screen.
- 2 Open the REC menu.
- 3 Highlight the PREFERENCE item.
- 4 Press the front panel ►► key (or the remote's cursor ► key) to proceed to the REC PREFERENCE screen.
- 5 Select the WORD CLIP item.

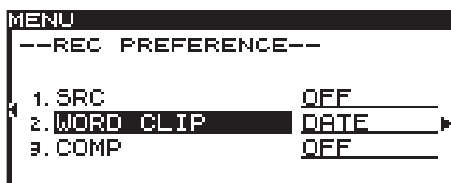

- 6 Turn the MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to select one of the following choices.

DATE: (default setting)

The date and time of the SS-R1/SS-R05's clock will be the file name.

USER01-USER03:

The user-specified text string (eight characters) will be the file name.

To edit and store a text string, proceed as follows.

- 1 With one of the choices USER01-USER03 selected, press the ►► key.
The editing screen will appear.
- 2 Edit the text string as follows.
 - To change the editing location (cursor position):
Use the front panel ◀◀, ►► keys (or the remote's cursor ◀, ▶ keys).
 - To change the character at the cursor position:
Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys).
 - To delete a character:
Press the front panel TIME (ESC) key (or the remote's CLR/ESC key).
 - To delete all characters following the cursor position:
Press and hold down the front panel TIME (ESC) key (or the remote's CLR/ESC key).
 - To switch between uppercase and lowercase:
Press the front panel DISPLAY (INFO) key (or the remote's DISPLAY key).
 - To insert a space:
Press the CALL key.
 - To cancel your editing:
Press the STOP key.
- 3 When you've finished editing, press the MULTI JOG dial.
The edited text string will be finalized, and you will return to the PREFERENCE menu.

7 – Using the folder finder

Overview

The SS-R1/SS-R05 can use a folder structure to manage audio files on a CompactFlash card.


The folder finder screen shows the folders and files in a tree structure. In this screen, you can select the folder or file that you want to use, and then enter the folder menu screen or file menu screen. From these screens, you can create folders, rename or delete a folder or file, register a file in a playlist, or edit files by dividing or joining them. You can also use operations directly from the folder finder screen to move or copy files between folders.

TIP

If you use a card reader to load files from your computer into a CompactFlash card, you'll be able to use your computer to modify the folder structure, edit the folder name or file name, or delete files or folders. If you perform this type of editing from your computer, please be aware that the playback order of the files on the SS-R1/SS-R05 may differ after editing on your computer.

Opening the folder finder screen

When the play area (“Play area” on page 21) is ALL or FOLDER, and the SS-R1/SS-R05 is stopped, playing, or paused, you can hold down the front panel **MENU** key (or press the remote’s **FINDER** key) to access the folder finder screen.

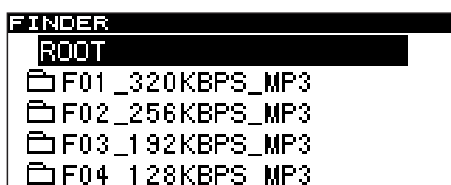

- If the play area is ALL and the SS-R1/SS-R05 was stopped, the finder screen for the root folder will appear.
- If the play area is FOLDER and the SS-R1/SS-R05 was stopped, the finder screen for the current folder will appear.
- While paused, the finder screen for the folder of the current file (regardless of the play area) will appear. At this time, the current file will be highlighted.


Navigating in the folder finder screen

When the folder finder screen is displayed, you can use the front panel ◀◀, ▶▶ keys and **MULTI JOG** dial (or the remote’s cursor keys) to select (highlight) the desired folder or file.

Operations when a folder is highlighted and when a file is highlighted are explained below.

Operations when a folder is highlighted


- **To see the folder menu for the highlighted folder:**
Press the **MENU** key (“Operations in the folder menu screen” on page 47).

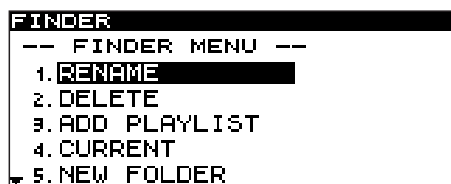

- **To open a higher-level folder:**
Press the front panel ◀◀ key (or the remote’s cursor ◀ key).
- **To open the highlighted folder:**
Press the front panel ▶▶ key (or the remote’s cursor ▶ key).
- **To return to the home screen:**
Press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key).

- **To start playback from the first file of the highlighted folder:**
Press the **PLAY** key. Playback will start, and you will return to the home screen.
If the play area is FOLDER, the highlighted folder will be the current folder.
- **To pause at the first file of the highlighted folder:**
Press the **READY** key. The SS-R1/SS-R05 will pause, and you will return to the home screen.
If the play area is FOLDER, the currently selected folder will be the current folder.
- **To view the properties of the currently selected folder:**
Press the front panel **DISPLAY (INFO)** key (or the remote’s **DISPLAY** key).

7 – Using the folder finder

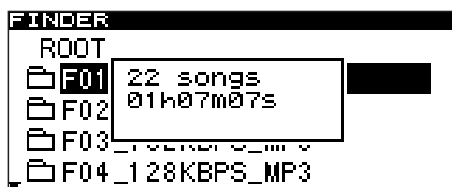


When you once again press the front panel **DISPLAY** (**INFO**) key (or the remote's **DISPLAY** key), the property display will disappear, and you will return to the folder finder screen.

Operations when a file is highlighted

- **To see the file menu for the highlighted file:**

Press the **MENU** key ("Operations in the file menu screen" on page 50).

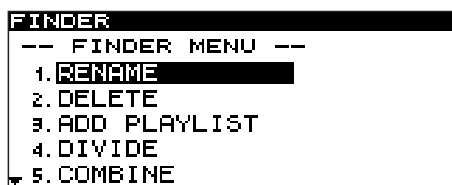

- **To open a higher-level folder:**

Press the front panel **◀◀** key (or the remote's cursor **◀** key).

- **To return to the home screen:**

Press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key).

- **To start playback from the beginning of the highlighted file:**

Press the **PLAY** key. Playback will start, and you will return to the home screen.

If the play area is **FOLDER**, the folder that contains the highlighted file will be the current folder.


- **To pause at the beginning of the highlighted file:**

Press the **READY** key. The SS-R1/SS-R05 will pause, and you will return to the home screen.

If the play area is **FOLDER**, the folder that contains the highlighted file will be the current folder.

- **To view the properties of the highlighted file:**

Press the front panel **DISPLAY (INFO)** key (or the remote's **DISPLAY** key).

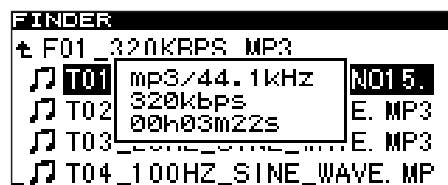

When you once again press the front panel **DISPLAY (INFO)** key (or the remote's **DISPLAY** key), the property display will disappear and you will return to the folder finder screen.

- **To move the highlighted file:**

Press and hold the front panel **MULTI JOG** dial (or the remote's **ENTER** key) to enter File Move mode. For details, refer to "Moving and copying a file" on page 53.

7 – Using the folder finder

Operations in the folder menu screen

The following explanations assume that the folder on which you wish to perform the operation is shown in the folder menu screen.

To access the folder menu screen, highlight the desired folder in the folder finder screen, and press the **MENU** key (“Navigating in the folder finder screen” on page 45).

```
FINDER
-- FINDER MENU --
1. RENAME
2. DELETE
3. ADD PLAYLIST
4. CURRENT
5. NEW FOLDER
```

Renaming a folder

- 1 With the folder menu screen shown, turn the front panel MULTI JOG dial (or use the remote’s cursor **▲**, **▼** keys) to highlight the **RENAME** item.

- 2 Press the front panel MULTI JOG dial (or the remote’s **ENTER** key).

The **RENAME** screen will appear.

```
FINDER
-- RENAME --
F01_320KBPS_MP3
```

- 3 Edit the name as follows.

- **To move the editing position (cursor position):**
Use the front panel **◀**, **▶** keys (or the remote’s cursor **◀**, **▶** keys).
- **To change the character at the cursor position:**
Turn the front panel MULTI JOG dial (or use the remote’s cursor **▲**, **▼** keys).
- **To delete a character:**
Press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key).
- **To delete all characters following the cursor position:**
Press and hold the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key).

- **To switch the type of character (uppercase/lower-case):**

Press the front panel **DISPLAY (INFO)** key (or the remote’s **DISPLAY** key).

- **To insert a space:**

Press the **CALL** key.

- **To cancel editing:**

Press the **STOP** key.

- 4 When you’ve finished editing, press the front panel MULTI JOG dial (or the remote’s **ENTER** key) to finalize your edits.

The display will return to the folder finder screen.

NOTE

- You cannot edit names that include characters other than alphabetic character, numeral, or symbol characters. (If even one such character is included, the registered name will not be displayed at all.)
- Also, the following symbolic characters cannot be used on the unit: **\ / ; : * , ? " < > |**

Deleting a folder

Here’s how to delete a folder. Deleting a folder will also delete the files that are in that folder.

- 1 With the folder menu screen displayed, use the front panel MULTI JOG dial (or the remote’s cursor **▲**, **▼** keys) to highlight the **DELETE** item.

- 2 Press the front panel MULTI JOG dial (or the remote’s **ENTER** key).

A screen will ask you to confirm the deletion.

```
FINDER
-- FINDER MENU --
1. REN  --DELETE--
2. [DEL] Execute ?
3. ADD  ent/esc
4. CURRENT
5. NEW FOLDER
```

- 3 Once again press the front panel MULTI JOG dial (or the remote’s **ENTER** key).

The folder will be deleted.

The display will return to the folder finder screen.

If you decide not to delete the folder, press the **TIME (ESC)** key (or the remote’s **CLR/ESC** key).

NOTE

Immediately after deleting a folder, you will still be able to undo the deletion (“Undoing a deleted folder”, on page 48).

7 – Using the folder finder

Undeleting a deleted folder (UNDO)

Immediately after deleting a folder, you can recover the folder by undoing the operation.

This is possible only if the play mode is set to continuous playback (CONTINUE).

NOTE

When performing the Undo operation, it does not matter which folder is selected in the folder finder screen when you open the folder menu screen.

- 1 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the UNDO item.
- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key.)
A confirmation screen will appear.



- 3 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The folder will be recovered, and you will return to the folder finder screen. At this time the recovered folder will be highlighted.


NOTE

- If you decide not to perform this undelete operation (UNDO), press the front panel TIME (ESC) key (or the remote's CLR/ESC key).
- If there is no file deletion operation that can be undone, the display will indicate CAN'T UNDO.

Making a folder the current folder

Here's how to make the folder in which you're working the current folder.

- 1 With the folder menu screen displayed, turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the CURRENT item.
- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key.)
The following popup (CHANGE CURRENT FOLDER) will appear.

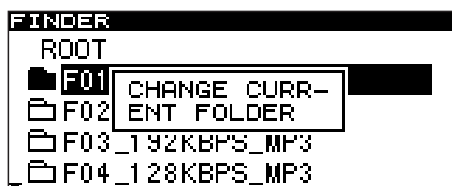

The display will return to the folder finder screen.

NOTE

Audio files created by recording will be created in the current folder. If you create a new folder in which to store recorded files, you can use the above procedure to make that new folder the current folder.

Creating a new folder

Here's how to create a new folder inside the working folder.

- 1 With the folder menu displayed, turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the NEW FOLDER item.
- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key.)
- 3 The NEW FOLDER screen will appear. If you want to edit the name that was automatically created by the system, you can edit it here. (You are also free to edit it later.)
For details on editing a name, refer to "Renaming a folder" on page 47.

- 4 When you've finished editing the name, press the front panel MULTI JOG dial (or the remote's ENTER key) to finalize the changes.

A popup CREATE NEW FOLDER will appear, and the new folder will be created.

When the folder has been created, the display will return to the folder finder screen.

NOTE

A maximum of 255 folders can be created on a Compact-Flash card.

7 – Using the folder finder

Adding an entire folder to a playlist

You can add all the files in a folder to the desired playlist.

However, files in a sub-folder will not be added.

- 1 With the folder menu screen displayed, turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the ADD PLAYLIST item.



- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The playlist select screen will appear.



- 3 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the playlist in which you want to register the files.
- 4 Press the front panel MULTI JOG dial or ►► key (or the remote's ENTER key or cursor ► key). The selected playlist will be displayed.



- 5 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to select the position within the playlist at which you want to add the files. The files will be added following the highlighted file.
- 6 Press and hold the front panel MULTI JOG dial (or the remote's ENTER key). The folder will be added to the playlist.

Undoing a folder menu operation (UNDO)

Some of the operations in the folder menu (folder name editing, adding a new folder, deleting a folder) can be undone immediately after they are executed.

This is possible only if the play mode is set to continuous playback (CONTINUE).

NOTE

When executing an Undo, it does not matter which folder in the folder finder screen was selected before opening the folder menu screen.

- 1 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the UNDO item.

A confirmation screen will appear.



In the example screen shown above, the folder delete operation (DELETE) can be undone.

- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The Undo operation will be executed, and you will return to the folder finder screen. At this time, the file to which Undo applied will be highlighted.

NOTE

- If you decide to cancel the Undo operation, press the front panel TIME (ESC) key (or the remote's CLR/ESC key).
- If there is no file to which the Undo operation can be applied, the display will indicate CAN'T UNDO.

7 – Using the folder finder

Operations in the file menu screen

The following explanations assume that the screen is showing the file menu screen for the file you want to operate.

To access the file menu screen, highlight the desired file in the folder finder screen, and press the **MENU** key (“Navigating in the folder finder screen” on page 45).

```
FINDER
-- FINDER MENU --
1. RENAME
2. DELETE
3. ADD PLAYLIST
4. DIVIDE
5. COMBINE
```

Editing the file name

- 1 With the file menu screen displayed, turn the front panel **MULTI JOG** dial (or use the remote’s cursor **▲**, **▼** keys) to highlight the **RENAME** item.

- 2 Press the front panel **MULTI JOG** dial (or the remote’s **ENTER** key).

The **RENAME** screen will appear.

```
FINDER
-- RENAME --
T01_PIANO_SONATA_NO15
INSERT
```

- 3 Edit the name as follows.

- **To change the editing location (cursor position):**
Use the front panel **◀**, **▶** keys (or the remote’s cursor **◀**, **▶** keys).
- **To change the character at the cursor position:**
Turn the front panel **MULTI JOG** dial (or use the remote’s cursor **▲**, **▼** keys).
- **To delete a character:**
Press the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key).
- **To delete all characters following the cursor position:**
Press and hold down the front panel **TIME (ESC)** key (or the remote’s **CLR/ESC** key).
- **To switch between uppercase and lowercase:**
Press the front panel **DISPLAY (INFO)** key (or the

remote’s **DISPLAY** key).

- **To insert a space:**
Press the **CALL** key.
- **To cancel your editing:**
Press the **STOP** key.

- 4 When you’ve finished editing, press the front panel **MULTI JOG** dial (or the remote’s **ENTER** key) to **finalize the changes**.

The display will return to the folder finder screen.

If you decide to cancel your editing, press the **TIME (ESC)** key (or the remote’s **CLR/ESC** key).

NOTE

- You can connect a CompactFlash card directly to your computer and edit the file name from the computer, but if you do so, please be aware that this may affect the order in which the files play back on the SS-R1/SS-R05.
- You cannot edit names that include characters other than alphabetic character, numeral, or symbol characters. (If even one such character is included, the registered name will not be displayed at all.) Also, the following symbolic characters cannot be used on the unit: \ / ; : * , ? " < > |

Deleting a file

Here’s how to delete a file from a CompactFlash card.

- 1 With the file menu screen displayed, turn the front panel **MULTI JOG** dial (or use the remote’s **CURSOR ▲**, **▼** keys) to highlight the **DELETE** item.

- 2 Press the front panel **MULTI JOG** dial (or the remote’s **ENTER** key).

The delete confirmation screen will appear.

```
FINDER
-- FINDER MENU --
1. REN --DELETE--
2. DEL Execute ?
3. ADD ent/esc
4. DIVIDE
5. COMBINE
```

- 3 Once again, press the front panel **MULTI JOG** dial (or the remote’s **ENTER** key).

The file will be deleted from the CompactFlash card.

The display will return to the folder finder screen.

If you decide not to execute the Delete operation, press the **TIME (ESC)** key (or the remote’s **CLR/ESC** key) at the confirmation screen.

NOTE

Files can be deleted only if the play mode is set to consecutive playback (CONTINUE).

7 – Using the folder finder

If you want to change the dividing point, press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key). You will return to scrub play mode, and can repeat the procedure from step 6.

If you're ready to execute the Divide operation, proceed to step 8.

NOTE

- If the file has been registered in a playlist, the **P.LIST ENTRY** popup will appear.
- If the file you're editing was registered in a playlist, it will no longer be possible to play that playlist. You will need to re-edit that playlist in the playlist finder.

8 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The Divide operation will be executed, and you will return to the folder finder screen.

Combining files (COMBINE)

Here's how to join two WAV files, combining them into a single file.

This is possible only if the play mode is set to consecutive playback (CONTINUE).

NOTE

- You can't combine MP3 files.
- You can't combine two WAV files that have different sampling rates or a different number of channels.
- You can undo the Combine operation after executing it ("Undoing a file menu operation (UNDO)" on page 53).


1 Open the file menu screen for one of the files you want to combine.

2 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the COMBINE item.

3 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The file list will appear.

The file you had selected before opening the file menu will have a check mark.

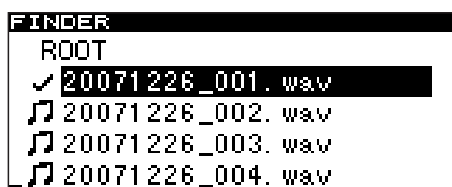

4 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the file that


you want to combine with the file that has the check mark.

5 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The display will ask **EXECUTE?**, and the four seconds preceding and following the connection point will play repeatedly.

NOTE

- If the file has been registered in a playlist, the **P.LIST ENTRY** popup will appear.
- If a file you're editing was registered in a playlist, it will no longer be possible to play that playlist. You'll need to re-edit that playlist in the playlist finder.

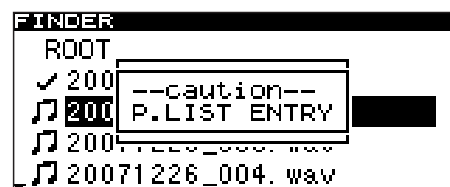

6 To execute the Combine operation, press the front panel MULTI JOG dial (or the remote's ENTER key).

The two files will be combined, and you will return to the folder finder screen.

If you decide not to execute the Combine operation, press the front panel **TIME (ESC)** key (or the remote's **CLR/ESC** key). You will return to the file list, and can repeat the procedure from step 1.

7 – Using the folder finder

Undoing a file menu operation (UNDO)

Of the file menu operations, Divide, Combine, and Delete operations can be undone immediately after you've executed the operation.


This is possible only if the play mode is set to continuous playback (CONTINUE).

NOTE

When performing the Undo operation, it does not matter which file is selected in the folder finder screen when you open the file menu screen.

- 1 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the UNDO item.

A confirmation screen will appear.

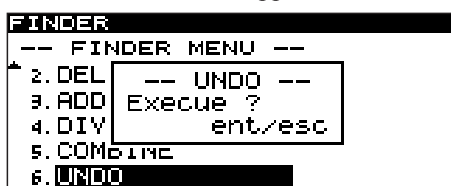

- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key).

The Undo operation (UNDO) will be executed, and you will return to the folder finder screen. At this time, the folder/file to which the Undo operation applied will be highlighted.

NOTE

- If you decide not to perform the Undo operation (UNDO), press the front panel TIME (ESC) key (or the remote's CLR/ESC key).
- If there is no file operation that can be undone, the display will indicate CAN'T UNDO.


Moving or copying a file

You can move a file within a folder, or move or copy a file to another folder. These operations are performed in the folder finder screen. (There is no need for you to enter the file menu screen).


Moving a file within a folder

- 1 In the folder finder screen, use the front panel ◀◀, ▶▶ keys and MULTI JOG dial (or the remote's cursor keys) to access the finder screen for the folder that contains the file you want to move.
- 2 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the file that you want to move.
- 3 Press and hold the front panel MULTI JOG dial (or the remote's ENTER key).

The file to be moved will blink.

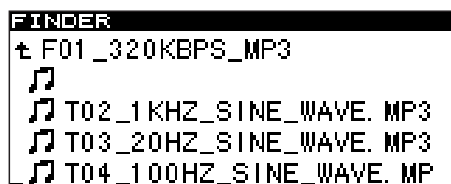


- 4 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to move the file to the desired location.

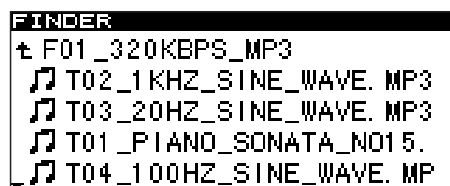

- 5 Press the front panel MULTI JOG dial (or the remote's ENTER key).


The MOVE popup will appear, and the Move operation will be confirmed.

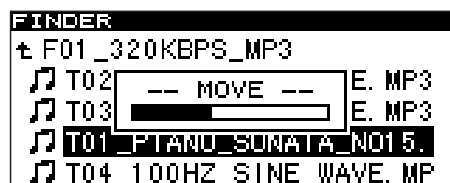

7 – Using the folder finder

Moving or copying a file between folders


- 1 In the folder finder screen, use the front panel ◀◀, ▶▶ keys (or the remote's cursor ◀, ▶ keys) to access the finder screen for the folder that contains the file you want to move.
- 2 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the file that you want to move.
- 3 Press and hold the front panel MULTI JOG dial (or the remote's ENTER key).
The file to be moved will blink.

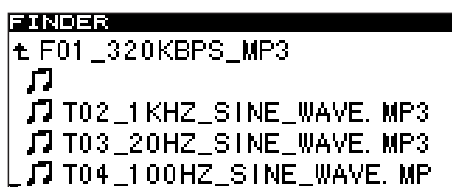


When you move the blinking file to where a folder name is shown, the blinking file name will disappear, and the folder name will be highlighted.

- 4 Use the front panel MULTI JOG dial and ◀◀, ▶▶ keys (or the remote's cursor ▲, ▼, ◀, ▶ keys) to navigate within the folder finder to open the move-destination folder.
When you move the cursor to where the file name is displayed, the blinking file to be moved will appear.

- 5 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to move the blinking file to the desired location.
Press the MULTI JOG dial (or the remote's ENTER key).
The following popup will appear.

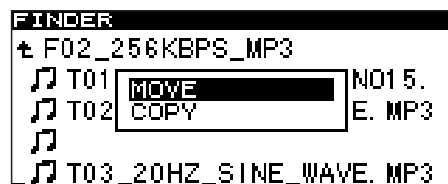

- 6 Highlight MOVE if you simply want to move the file from its former location, or highlight COPY if you want to copy the file. Then press the front panel MULTI JOG dial (or the remote's ENTER key).
The operation will be executed, and a popup will appear during execution.

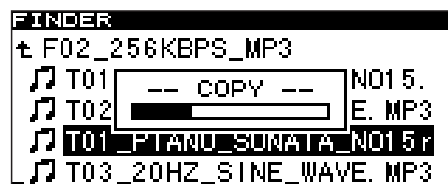

NOTE

If you choose COPY, the original file will remain where it was. If you choose MOVE, the original file will not remain.

8 – Using the playlist finder

Overview

When you first insert a CompactFlash card into the SS-R1/SS-R05, three empty playlists (01–03) will automatically be created on the card. You can register audio files from the card into these playlists, and then select the desired playlist (the current playlist) so that its files will be played when you specify Playlist as the play area.

To perform playlist-related operations, start by opening the “playlist finder screen”.

```
FINDER
↑ USER PLAYLIST
[P] Playlist 01    0tracks
[P] Playlist 02    0tracks
[P] Playlist 03    0tracks
```

From this screen, proceed to the “playlist menu screen” where you can add files to a playlist or delete the entire contents of a playlist.

```
FINDER
-- FINDER MENU --
1. ADD PLAYLIST
2. DELETE
```

From the playlist finder screen, you can also proceed to the “playlist screen” (which shows the files in the playlist).

```
FINDER
↑ Playlist 01
```

Select a file for operations, and then move to the “playlist menu screen” where you can add a file to the playlist, delete a file from the playlist, or move a file within the playlist.

Opening the playlist finder screen

If the play area (“Play area” on page 21) is PLAYLIST, make sure that the SS-R1/SS-R05 is stopped, playing, or paused, and hold down the front panel **MENU** key (or the remote’s **FINDER** key) to access the playlist finder screen.

```
FINDER
↑ USER PLAYLIST
[P] Playlist 01    0tracks
[P] Playlist 02    0tracks
[P] Playlist 03    0tracks
```

Navigating in the playlist finder screen

The playlist finder screen will show three playlists (PLAYLIST_01-PLAYLIST_03).

At the right is shown the number of files (tracks) registered in each playlist.

With the playlist finder screen displayed, turn the front panel **MULTI JOG** dial (or use the remote’s cursor **▲**, **▼** keys) to select (highlight) the playlist that you want to operate.

In this state you can perform the following operations:

- **To start playback from the beginning of the playlist**
Press the **PLAY** key. Playback will begin, and you will return to the home screen.
The playlist you selected will be specified as the current playlist.

- **To pause at the beginning of the playlist**

Press the **READY** key. The SS-R1/SS-R05 will pause, and return to the home screen.

The playlist you selected will be specified as the current playlist.

- **To open the playlist screen**

Press the front panel **MULTI JOG** dial or **▶▶** key (or the remote’s **ENTER** key or cursor **▶** key). The display goes as follow.


```
FINDER
↑ Playlist 01
```

8 – Using the playlist finder

• Opening the playlist menu screen

Press the **MENU** key.

For details on each item in the playlist menu, refer to “Operations in the playlist menu screen” on page 56.

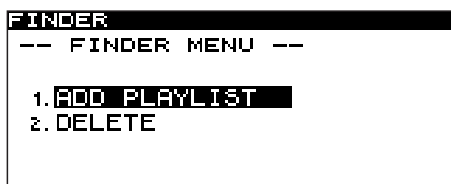

• Viewing the properties of a playlist

Press the front panel **DISPLAY (INFO)** key (or the remote's **DISPLAY** key).



The number of tracks in the playlist and the total playback time will be displayed.


Press the front panel **DISPLAY (INFO)** key (or the remote's **DISPLAY** key) once again; the property display will disappear, and you will return to the playlist finder screen.

Operations in the playlist menu screen

In the playlist menu you can delete files from the playlist or add files to the playlist.

The following explanations assume that the display is showing the playlist menu screen for the playlist you're operating.

To access the playlist menu screen, highlight the desired playlist in the playlist finder screen, and press the **MENU** key (“Navigating in the playlist finder screen” on page 55).

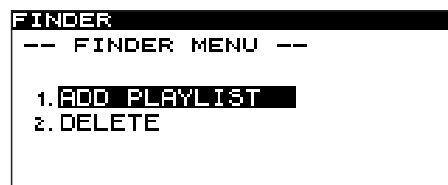

8 – Using the playlist finder


Adding a file/folder to a playlist

Here is how to add a file/folder to the playlist. By adding a folder, you can add all the files of the folder in a single action.

NOTE

Files in sub-folders will not be added.

- 1 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the **ADD PLAYLIST** item.
- 2 Press the front panel MULTI JOG dial (or the remote's ENTER key).
The folder finder screen will appear.

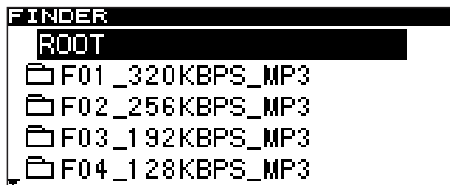

- 3 **Select (highlight) the file or folder that you want to add.**
For details on navigation in the folder finder screen, refer to “Navigating in the folder finder screen” on page 45.
- 4 **Press and hold the front panel MULTI JOG dial (or the remote's ENTER key).**
The file (or all files in the folder) will be added to the playlist.

NOTE

- A maximum of 99 tracks can be registered in a playlist.
- If you attempt to register more than 99 tracks, an indicator of P.LIST FULL will appear, and the track(s) will not be registered.
- You cannot register the same track more than once in a playlist.

Deleting a file/all files from a playlist

Here is how to delete a file or all files in a playlist (01-03).

This operation does not delete the files in the card.

- 1 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to select a file in a playlist or one of the playlists (deleting all files in the playlist).
- 2 Press the MENU key to access the playlist menu screen.
- 3 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to highlight the **DELETE** item.


- 4 **Press the front panel MULTI JOG dial (or the remote's ENTER key).**
A confirmation popup screen will appear.
- 5 **Press the front panel MULTI JOG dial (or the remote's ENTER key).**
If you decide not to delete, press the **TIME (ESC)** key (or the remote's CLR/ESC key).

8 – Using the playlist finder

Moving a file


Here's how to move the position of a file within the playlist.

- 1 Highlight the file that you want to move.
- 2 Press and hold the front panel MULTI JOG dial (or the remote's ENTER key).
The playlist screen will appear. In the screen, the file to be moved will be blinking.

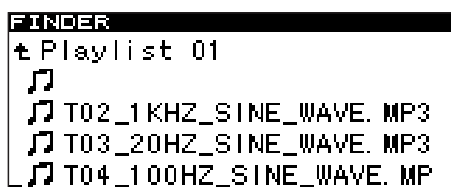

```
FINDER
↑ Playlist 01
  T02_1KHZ_SINE_WAVE. MP3
  T03_20HZ_SINE_WAVE. MP3
  T04_100HZ_SINE_WAVE. MP
```

- 3 Turn the front panel MULTI JOG dial (or use the remote's cursor ▲, ▼ keys) to move the file to the desired position in the playlist.

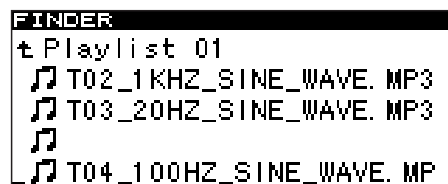

```
FINDER
↑ Playlist 01
  T02_1KHZ_SINE_WAVE. MP3
  T03_20HZ_SINE_WAVE. MP3
  T04_100HZ_SINE_WAVE. MP
```

- 4 Press the front panel MULTI JOG dial (or the remote's ENTER key).
The move will be finalized.

9 – Other settings


Restoring the factory settings

You can restore the menu settings and other settings to their factory-set condition.

You cannot restore these settings if a CompactFlash card is inserted.

Remove the CompactFlash card before you perform the following menu operation. (For details on menu operations, refer to “Operations in the menu screens” on page 16.)

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Select the **UTILITY** menu.
- 3 Select the **FACTORY PRESET** item.
A confirmation popup will appear.

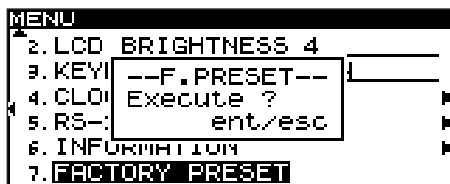

NOTE

- This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the “5. RS-232C item.”
- If you select the **FACTORY PRESET** item when a CompactFlash card is inserted, a popup of **CAN'T SELECT** will appear, and your selection will not be accepted. Remove the card and perform the operation once again.

- 4 Once again press the front panel **MULTI JOG** dial (or the remote's **ENTER** key).
The settings will be reset.
- 5 Press the **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.

Formatting a CompactFlash card

When the SS-R1/SS-R05 is stopped, you can format the entire CompactFlash card to FAT format.

Before a CompactFlash card used by another device can be used with the SS-R1/SS-R05, you must format it on the SS-R1/SS-R05.


NOTE

When you format a card, all folders and files stored on that card will be deleted.

Perform the following menu operations. (For details on menu operations, refer to “Operations in the menu screens” on page 16.)

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Select the **UTILITY** menu.
- 3 Select the **MEMORY FORMAT** item.

A confirmation popup will appear.

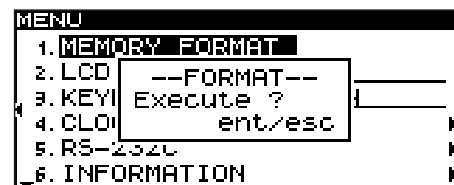

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the “5. RS-232C item.”

- 4 Once again press the front panel **MULTI JOG** dial (or the remote's **ENTER** key).
The card will be formatted.
During execution, the display will indicate **Format**.
- 5 Press the **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.


Checking the capacity of the card

Here's how to check the capacity of the currently-inserted CompactFlash card.

Perform the following menu operations. (For details on menu operations, refer to “Operations in the menu screens” on page 16.)

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Select the **UTILITY** menu.

- 3 Select the **INFORMATION** item.
The capacity of the card will be displayed.

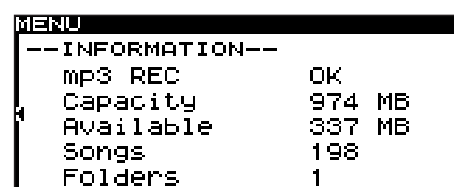

- 4 Press the **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.


10 – Operation using a computer keyboard

If you connect an IBM PC compatible PS/2 interface keyboard to the SS-R1/SS-R05's front panel, you'll be able to use your keyboard to control the SS-R1/SS-R05. The keyboard can be used for various types of control, but is particularly convenient when entering names.

Specifying the keyboard type

Select the keyboard type as appropriate for the keyboard you've connected (for details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Select the **UTILITY** menu.
- 3 Select the **KEYBOARD** item.

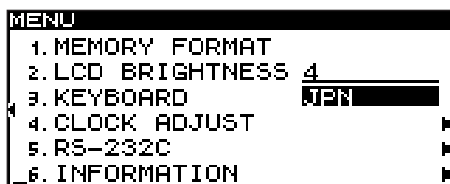

NOTE

This is an example of a screen from an SS-R1 unit. The SS-R05 menu does not show the "5. RS-232C item."

- 4 According to the keyboard you've connected, choose **JPN (Japanese keyboard)** or **US (English keyboard)**.
- 5 Press the **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.


Using the keyboard to enter names

You can edit or enter a folder name or track name just as when typing text into a computer.

NOTE

- You cannot edit names that include characters other than alphabetic character, numeral, or symbol characters. (If even one such character is included, the registered name will not be displayed at all.)
- Also, the following symbolic characters cannot be used on the unit: \ / ; : * , ? " < > |

To access the name editing screen (RENAME screen), move from the folder finder menu to the folder menu or file menu, and then select the **RENAME** item. Alternatively, move from the playlist finder menu to the playlist menu or the file menu, and select the **RENAME** item.

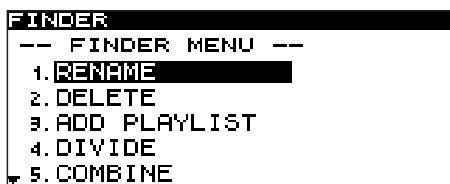

To select the type of character to enter

CAPS key: Selects/de-selects uppercase alphabetical characters.

When de-selected: Lowercase alphabetical characters will be entered.

To enter text

Use the numeric keys and alphabetical keys for direct entry.

To move the cursor

Use the **←/→** keys.

To delete a character:

Delete key: Deletes the character at the cursor location.

Backspace key: Deletes the character preceding the cursor location.

To insert a character:

Press the **Insert** key at the desired location to switch between overwrite and insert mode.

To edit a character:

Move the cursor and overwrite the character.

10 – Operation using a computer keyboard

List of keyboard operations

You can use the keyboard not only to enter names, but also for other operations such as controlling the transport and editing. The keyboard operations are listed below.

Keyboard operations

F1 key

The same function as turning the front panel **MULTI JOG** dial toward the left (same as the remote's **SKIP ◀◀** key)

F2 key

The same function as turning the front panel **MULTI JOG** dial toward the right (same as the remote's **SKIP ▶▶** key)

F3 key

The same as the remote's **KEY** key

F4 key

The same as the **STOP** key

F5 key

The same as the **PLAY** key

F6 key

The same as the **READY** key

F7 key

The same as the remote's **AUTO CUE** key

F8 key

The same as the **RECORD** key

F9 key

The same as the remote's **AUTO READY** key

F10 key

The same as the remote's **REPEAT** key

F11 key

The same as the remote's **P.MODE** key

F12 key

The same as pressing the front panel **PITCH** dial (same as the remote's **PITCH** key)

SHIFT + F1 key

To "DELETE" of edit mode

SHIFT + F2 key

No assignment

SHIFT + F3 key

To "FORMAT" of edit mode

SHIFT + F4 key

To "MOVE" of edit mode

SHIFT + F5 key

To "DIVIDE" of edit mode

SHIFT + F6 key

To "COMBINE" of edit mode

SHIFT + F7 key

The same as the remote's **FINDER** key

SHIFT + F8 key

To "RENAME" of edit mode

SHIFT + F9 key

No assignment

SHIFT + F10 key

The same as the remote's **FLASH LOAD** key

SHIFT + F11 key

No assignment

SHIFT + F12 key

No assignment

CTRL + F1

After **FLASH LOAD** is completed, flash-start track 1 playback

CTRL + F2

After **FLASH LOAD** is completed, flash-start track 2 playback

CTRL + F3

After **FLASH LOAD** is completed, flash-start track 3 playback

CTRL + F4

After **FLASH LOAD** is completed, flash-start track 4 playback

CTRL + F5

After **FLASH LOAD** is completed, flash-start track 5 playback

CTRL + F6

After **FLASH LOAD** is completed, flash-start track 6 playback

CTRL + F7

After **FLASH LOAD** is completed, flash-start track 7 playback

CTRL + F8

After **FLASH LOAD** is completed, flash-start track 8 playback

CTRL + F9

After **FLASH LOAD** is completed, flash-start track 9 playback

(Continue)

10 – Operation using a computer keyboard

CTRL + F10

After FLASH LOAD is completed, flash-start track 10 playback

CTRL + F11

After FLASH LOAD is completed, flash-start track 11 playback

CTRL + F12

After FLASH LOAD is completed, flash-start track 12 playback

CAPS key

Select/de-select uppercase alphabetical characters

Numeric keys

Enter numerals

←/→ keys

Move the cursor

Delete key

Delete the character at the cursor location

Backspace key

Delete the character preceding the cursor location

Insert key

Inserts a character at the cursor location

ESC key

Cancels editing or title editing, and exits menu mode

Enter key

The same as the **ENTER** key

NOTE

When using the keyboard for editing, press the desired execution key when the finder screen is displayed.

Example: To execute DELETE

Press SHIFT + F7 (FINDER key) to access the finder screen. Use the cursor keys to highlight the file or folder that you want to delete.

Press SHIFT + F1 key.

The display will ask EXECUTE?, so press the ENTER key.

11 – Using the RS-232C connector (SS-R1)

If you connect the SS-R1's **CONTROL I/O (RS-232C)** connector to the RS-232C connector of your computer, you will be able to control the SS-R1 from your computer.

You'll use the menu to make communication-related settings (for details on menu operations, refer to "Operations in the menu screens" on page 16).

- 1 Press the **MENU** key to access the main menu list screen.
- 2 Open the **UTILITY** menu.
- 3 Highlight the **RS-232C** item, and press the front panel **▶▶** key (or the remote's cursor **▶** key).
The RS-232C setting screen will appear.

```
MENU
--RS-232C--
1. BAUD RATE    19200bps
2. PARITY BIT   NON
3. STOP BIT     1
4. DATA LENGTH 8bit
```

- 4 Make the appropriate setting for each item.

BAUD RATE

Specify the baud rate (communication speed).
Choose from 4800, 9600, 19200, and 38400 bps (default: 19200).

PARITY BIT

Specify the communication parity bit setting.
Choose from NON, EVEN, and ODD (default: NON).

STOP BIT

Specify the communication stop bit setting.
Choose 1 or 2 (bit) (default: 1).

DATA LENGTH

Choose the communication data length.
Choose 7 or 8 (bit) (default: 8).

- 5 When you've finished making settings, press the **TIME (ESC)** key (or the remote's **CLR/ESC** key) to return to the home screen.

NOTE

- RS-232C settings are saved even when the power is turned off.
- For details on the SS-R1's RS-232C command protocol, please contact TEAC Corporation's Tascam customer support.

12 – Messages

Errors: Press the **STOP** key or **ESCAPE** key to close the popup.

	1st line	2nd line	Meaning
1	-- error --	DECODE	Failed to play MP3/WAV file.
2	-- error --	REC STAND BY	Failed to prepare to begin recording.
3	-- error --	CAPACITY	Recording stopped because of insufficient storage area on the media.
4	-- error --	RECORD	Error occurred while recording.
5	-- error --	INFO WRITING	An error occurred while writing data.
6	-- error --	OVER FLOW	Recording buffer was insufficient while recording an MP3/WAV track.
7	-- error --	NotMatchDMA	Cannot record because the media does not meet the system requirements.
8	-- error --	FLASH LOAD	Error occurred while loading flash start data.
9	-- error --	DIN UNLOCK	Digital input is not locked.
10	-- error --	DIN NotAudio	The incoming digital data is not audio.
11	-- error --	FS UNMATCH	The digital signal being input differs from the currently selected sampling rate.

Cautions: The popup will close automatically (after approximately two seconds)

	1st line	2nd line	Meaning
1	--caution--	CAN'T UNDO	Undo is not possible because no undoable edit exists.
2	--caution--	MEDIA FULL	Recording cannot be started because there is insufficient space on the media.
3	--caution--	TRACK FULL	Recording is not possible because you have reached the maximum number of tracks.
4	--caution--	NoCallPoint	A call request was made when no call point existed.
5	--caution--	CAN'T REC	Recording is not possible due to system limitations.
6	--caution--	WriteProtect	The media is write-protected.
7	--caution--	NOT EXECUTE	Failed to execute the editing operation.
8	--caution--	CAN'T EDIT	Editing was not possible due to system limitations.
9	--caution--	CAN'T SELECT	Selection/execution was not possible due to system limitations.
10	--caution--	TRK PROTECT	Editing was not possible because the track was protected.
11	--caution--	NAME FULL	The name has reached the maximum number of characters.
12	--caution--	PROGRAM FULL	Registration is not possible because you have reached the maximum number of tracks in a program.
13	--caution--	PGM EMPTY	Play or pause is not possible because no program has been registered.
14	--caution--	NoSearchTime	Search was not possible because the specified search time (search track) does not exist.
15	--caution--	UnmatchMedia	Recording is not possible because the media does not meet the system requirements.
16	--caution--	Dif Playlist	There is a discrepancy between the specified playlist and the media information.
17	--caution--	P.LIST FULL	Registration was not possible because the number of entries in the playlist has exceeded the allowable number.
18	--caution--	P.LIST EMPTY	Play or pause is not possible because no playlist has been registered.
19	--caution--	P.LIST ENTRY	You attempted to edit a track that is registered in a playlist.

Operation messages: Displays in place of the counter

	1st line	Meaning
1	POWER ON	The system is starting up and initializing.
2	DEVICE ERROR	Could not detect the CompactFlash card device. Please contact service.
3	NO MEDIA	Media is not inserted in the CompactFlash card slot.
4	MONITOR	Now monitoring the input.
5	MEDIA READING	Now reading from media.
6	MEDIA ERROR	Failed to read media.
7	UNKNOWN	The media is formatted with other than FAT32. Please format the media if you want to use it with the SS-R1/SS-R05.
8	INITIALIZING MEDIA	Creating data in order to use this media with the SS-R1/SS-R05.
9	RECORD STAND BY	Now in record-ready condition.
10	INFORMATION WRITING	Now writing the recorded data.
11	FLASH LOADING	Now loading flash-start data.
12	Fs CHANGING	The system's sampling frequency is being changed because the track's sampling frequency differs from that of the current track.

■ Power does not turn on

Make sure that the power plug is firmly inserted.

■ Media is not detected

Make sure that the CompactFlash card is firmly inserted.

■ Can't play back

In the case of a WAV file, make sure that the file is of a sampling frequency (44.1 kHz or 48 kHz) and bit depth (16-bit) supported by the SS-R1/SS-R05. In the case of an MP3 file, make sure that the file is of a bit rate supported by the SS-R1/SS-R05.

■ No sound

Check the SS-R1/SS-R05's connections to your monitor system. Also check the volume of your amp.

■ Can't record

- Check the connections once again.
- Adjust the recording level.

■ A setting you changed is not remembered

The SS-R1/SS-R05 backs-up the settings when you change them. This backup may fail if you turn off the power at an inappropriate time, so do not turn off the power immediately after changing a setting.

■ Noise is heard

Check whether a connection cable might have a bad connection.

■ When editing a name, the display indicates

Name Full

Due to limitations of the system, the number of characters in a file name and folder name is limited to 255 characters (single-byte). Since the full path within the folder finder is limited to 255 characters, the maximum name length for a file or folder that is inside a sub-folder will be reduced by the number of characters used by any folders above it and any separator characters.

14 – Specifications

Storage disk	CompactFlash card
Recording/playback formats	MP3: Sampling frequencies: 44.1 kHz, 48 kHz Bit depth: 16-bit Data rate: 64, 128, 192, 256, 320 kbps WAV: Sampling frequencies: 44.1 kHz, 48kHz Bit depth: 16-bit
Number of channels	2 channels (stereo), 1 channel (monaural)
Analog inputs	Balanced XLR-3-31 equivalent (SS-R1 only) Nominal input level: +4 dBu Maximum input level: +20 dBu Minimum input level: -6 dBu or greater Input impedance: 22 k Ω Unbalanced RCA pin jack Nominal input level: -10 dBV Maximum input level: +6 dBV Minimum input level: -20 dBV or greater Input impedance: 22 k Ω
Analog Outputs	Balanced XLR-3-32 equivalent (SS-R1 only) Nominal output level: +4 dBu Maximum output level: +20 dBu (*1) Output impedance: 100 Ω Unbalanced RCA pin jack Nominal output level: -10 dBV Maximum output level +6 dBV Output impedance: 200 Ω
Phones output	Stereo phone jack (1/4") 45 mW + 45 mW or greater (THD+N: 0.1% or less, at 32 Ω load)
Digital input (COAXIAL)	Connector: RCA pin jack (IEC- 60958-3 (S/PDIF)) Input sampling frequencies supported: 32 kHz – 48 kHz Input impedance: 75 Ω (unbalanced) Variable gain amount: - ∞ – +10 dBFS
Digital output (COAXIAL)	Connector: RCA pin jack Supported signal format: IEC- 60958-3 (S/PDIF) Output impedance: 75 Ω (unbalanced)
CONTROL I/O	(RS-232C) connector (SS-R1 only) Communication protocol: Complies with RS-232C protocol specification 1.00 Connector: D-sub 9-pin connector (PARALLEL) connector (SS-R1 only) Parallel control input/output Connector: D-sub 25-pin connector Maximum input voltage: +5.5 V Minimum high level input voltage: +3.75 V Maximum low level input voltage: +1.25 V Output format: Open drain (maximum voltage 50 V, maximum current 50 mA) Maximum low level output voltage: 0.5 V
REMOTE IN connector	For connecting dedicated RC-SS1 remote control: Stereo mini jack For connecting a PS/2 keyboard: Mini-DIN connector
Frequency response	20 Hz – 20 kHz, ± 0.5 dB (for recording)
Distortion	0.005% or less (AES-17 20 kHz) (for recording)
S/N ratio	95 dB (AES-17 20 kHz, A-weighted, typical) (for recording)
Dynamic range	95 dB (AES-17 20 kHz, A-weighted, typical) (for recording)
Crosstalk between channels	95 dB

14 – Specifications

Power	U.S.A./Canada	120 VAC, 60Hz
	U.K./Europe	230 VAC, 50Hz
	Australia	240 VAC, 50Hz
Power consumption	SS-R1:	13 W (U.S.A./Canada), 13 W (U.K./Europe/Australia)
	SS-R05:	13 W (U.S.A./Canada), 13 W (U.K./Europe/Australia)
Dimensions (w x h x d)	482.6 x 44.5 x 301 (mm) / 19 x 1.8 x 11.9 (in)	
Weight	SS-R1: 3.3 kg (7.3 lb), SS-R05: 3.3 kg (7.3 lb)	


- If you would like to change the maximum balanced output level, please contact the service department.
- Specifications and appearance are subject to change without notice for improvement.
- Please be aware that due to improvements in this product, illustrations in this owner's manual may differ from the product in some respects.

Backup memory

The following settings are retained by a back-up battery even when the unit's main power is turned OFF.

- MENU settings
- TIME mode
- Pitch control settings


Dimensional diagram

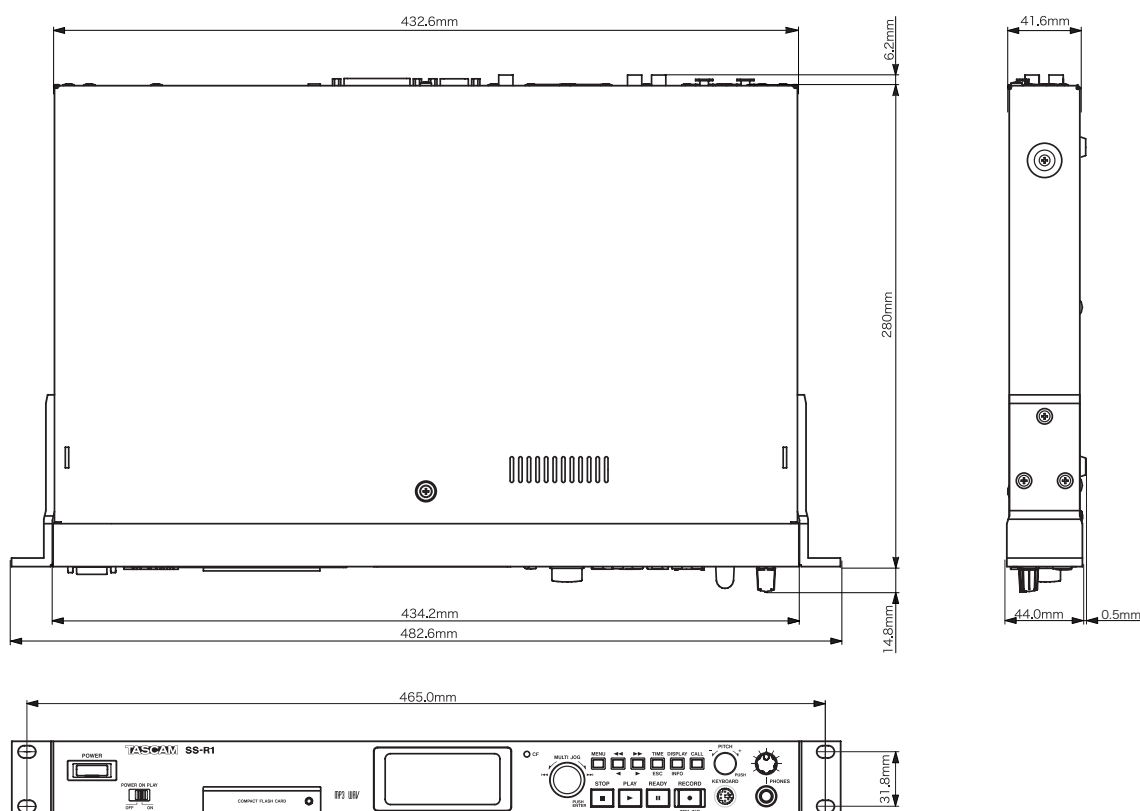

NOTE

The dimensions of the SS-R1 and SS-R05 models are the same.

 SS-R05's Rear Panel



TASCAM[®]
TEAC PROFESSIONAL

SS-R1 SS-R05

TEAC CORPORATION

Phone: +81-42-356-9143
1-47 Ochiai, Tama-shi, Tokyo 206-8530, Japan

www.tascam.jp

TEAC AMERICA, INC.

Phone: +1-323-726-0303
7733 Telegraph Road, Montebello, California 90640 USA

www.tascam.com

TEAC CANADA LTD.

Phone: +1905-890-8008 Facsimile: +1905-890-9888
5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada

www.tascam.com

TEAC MEXICO, S.A. de C.V.

Phone: +52-55-5010-6000
Río Churubusco 364, Colonia Del Carmen, Delegación Coyoacán, CP 04100, México DF, México

www.teacmexico.net

TEAC UK LIMITED

Phone: +44-8451-302511
Suites 19 & 20, Building 6, Croxley Green Business Park, Hatters Lane, Watford, Hertfordshire, WD18 8TE, UK

www.tascam.co.uk

TEAC EUROPE GmbH

Phone: +49-611-71580
Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany

www.tascam.de