

This is a list of keyboard shortcuts for the **TASCAM X-48** when using an optional keyboard (not included) and software version 1.03 or higher.



TASCAM X-48 Keyboard Shortcuts

Naming Channels

Move to beginning/end of edit contents	Home / End
Move single letters at a time	Left/Right Arrow keys
Select entire word	Double-click on word
Move down/up rows	Tab /Shift+Tab

Dialog Boxes

New Project	CTRL + N
Open Project	CTRL + O
Save Project	CTRL + S
Open Settings Window	ALT + F8
Save As...	CTRL + SHIFT + S
File Manager	CTRL + F
Export Project	CTRL + SHIFT + E
Import Project	CTRL + SHIFT + I
Open Import Audio window	Alt - Shift - I
Open Audio Pool	CTRL + P
Edit, Nudge, Trim	

Editing

Nudge selection or region right/left by Nudge value	+/- on numeric keypad only
Select entire track in Edit window	Ctrl+A (on selected track)
Repeat Paste	ALT + CTRL + V
Redo	CTRL + Y
Crop	CTRL + U
Insert Time	CTRL + SHIFT + E
Split	CTRL + E
Cycle through Edit Tools	ESC or simultaneously press both mouse keys
Select entire region in Edit window	Double-click with I-Beam
Cut	CTRL + X
Copy	CTRL + C
Paste	CTRL + V
Undo	CTRL + Z
Display History List	CTRL + H
Delete (do not place in clipboard)	Delete (Backspace)
Go to Song Start	Start+Enter
Extend selection to Song Start	Shift+Start+Enter
Go to end of session	End
Extend selection to end of session	Shift+End
Toggle Automation view	ALT + A
Drag to another track without changing timing	Shift+Click and drag

TASCAM X-48 Keyboard Shortcuts

F-Keys

Select Object Tool	F8
Select I-Beam Tool	F9
Select Magnify Tool	F12
Show Track Screen	F1
Show Mixer CH 1-24	F2
Show Mixer CN 25-48	F3
Show Groups Mixer	F4
Show Master Mixer	F5
Toggle DSP CH display	F6
Toggle Auto Input (On/Off)	ALT + F9
Toggle All Input	ALT + F10
Toggle All Safe	ALT + F11
Toggle One Button Record	ALT + F12
Select Smart Tool	F11

Global

Fine adjust mode	CTRL + click on control
Increase or decrease track height	Start+Up Arrow key / Start+Down Arrow key

Recording and Playback

Play/Stop	0 on numeric keypad
Rewind	1 on numeric keypad
F Fwd	2 on numeric keypad
Record	3 on numeric keypad
Stop record	spacebar
Start/stop playback	spacebar
Solo-safe track	CTRL + click on track solo enable button
Punch In/Out of Record	CTRL + spacebar or F-12
Stop record & undo	CTRL + . (period)
Toggle TC Chase (Online)	CTRL + J or ALT + spacebar
Loop toggle	ALT + L
Toggle Pre/Post Roll	CTRL + K
Create a memory location	Enter on the numeric keypad

Timecode Data Entry

Move sub-unit selection to the right	. (period)
Move sub-unit selection to the left/right	Left/Right Arrow keys
Increment/decrement the current sub-unit	Up/Down Arrow keys
Clear entered numeric value and stay in time entry	Retype value
Apply entered numeric value	Enter
Clear entered numeric value & exit time entry	ESC

Zoom

Horizontal zoom in/out	Ctrl+] / [
Vertical zoom in/out	Ctrl+Alt+] / [