

1. Preliminary Work

... Creation of updating data CD

1] Have a blank CD-R or CD-RW medium available, as well as a system capable of creating data CDs.

2] Download from the given location the required version of firmware to write it on CD. (You should use the format of ISO9660 Level 1 (MS-DOS compliant)).

... Updating of the firmware takes about 1 minute 30 seconds.

2. Precautions

... Updating of the firmware has no effects on the song data on the HDD.

... Check to make sure that the line voltage you are going to use matches the voltage specified on the 2488neo targeted for firmware update.

... Pay particular attention not to accidentally interrupt the power in the process of update.

* If the power is interrupted in the process of update, there are chances the 2488neo cannot restart and you have to replace the FLASH ROM.

... Once the firmware has been updated, you cannot undo the updating.

3. Here is how to update the firmware.

1] Hold down both the MONITOR SOURCE and SHUT DOWN keys and switch on the power.

2] In about 30 seconds the CD-RW drive tray automatically opens, then place an updating CD on the tray and press the YES/ENTER key.

3] A confirmation message appears when the updating CD has been loaded, then press the YES/ENTER key.

4] The process of the firmware update starts.

5] When updating is completed a message appears and the CD tray opens. Remove the updating CD out of the tray, press the EJECT button on the CD-RW drive to close the tray, and switch off the power.

6] Switch on the power again and look up the version information on the screen showing at startup.