

# IF-FW/DM Version 1.10 Release Notes

## ***Included in your download***

- For Windows
  - v1.10 Windows driver installer
  - v1.10 IF-FW/DM firmware (.bcd file)
  - This document
- For Mac
  - IF-FW/DM firmware updater v1.04 for OSX
  - v1.10 IF-FW/DM firmware (.bcd file)
  - This document

Note that the IF-FW/DM firmware updater is built into the Windows control panel while it is a separate app for OSX.

Note that only Windows requires the v1.10 driver update since OSX includes its own drivers for the IF-FW/DM.

## ***Maintenance Items***

- Sync reliability between the IF-FW/DM and a host PC has been improved.

## ***Installation for PC:***

Perform the steps below in the following order:

### **Updating the Windows Driver**

- Update the IF-FW/DM Windows driver by running the v1.10 installer. It will prompt you then automatically uninstall the previous version.

### **Updating the IF-FW/DM Firmware**

1. Under the Tools menu of the IF-FW/DM control panel, select the menu item to Update Firmware on Card.
2. You will be prompted to locate the v1.01 .bcd file.

## ***Installation for Mac:***

Your Mac must meet the minimum system requirements for the IF-FW/DM to perform the following update. If it does not, your IF-FW/DM could experience an incomplete firmware update, requiring its replacement. Please refer to the IF-FW/DM Owner's Manual if you are unsure about the minimum system requirements.

1. Run the OSX IF-FW/DM Firmware Updater and follow the detailed on screen instructions
2. You will be prompted to locate the v1.10 .bcd file