

# TASCAM SS-CDR250N / SS-R250N

## Checking the firmware version

Before starting firmware update procedures, check the firmware version of the SS-CDR250N/SS-R250N you are using.

1. Turn the main unit on.
2. Select **VERSION** on the **SYSTEM\_2** menu page to open the **VERSION** screen.

```
VERSION
SYSTEM      1.00 B0010
FPGA        000F
DRIVE       T.06 (W250)
DRIVE WORKED 0 H
```

3. On this screen, you can check the **SYSTEM** (system firmware) and **FPGA** versions.

Updating is not necessary if the **SYSTEM** and **FPGA** shown here are the same or newer than those of the firmware versions you intend to use for the update.

### NOTE

For details, see "Checking the firmware version" in "14 – Other Settings, Information Screens and Keyboard Operations" of the SS-CDR250N/SS-R250N Owner's Manual.

## Firmware update procedures (USB flash drive/SD card only)

### NOTE

Updating is not possible if the current media is **CD**.

1. Download the latest firmware from the TEAC Global Site (<http://teac-global.com/>). Decompress the downloaded file if it is in ZIP format or another compressed file type.
2. Copy the downloaded firmware to the root level of the medium.
3. Load the medium prepared in step 2 in an SD card slot or the USB port on the front of the unit.
4. Set that medium as the current medium on the **MEDIA SELECT** screen.
5. Select **UPDATE** on the **SYSTEM 2** page to open the **FIRMWARE UPDATE** screen.

```
FIRMWARE UPDATE      EXIT:MENU
SYSTEM                >>
FPGA                  >>
RC-SS150              >>
```

#### SYSTEM item

Update the unit's firmware.

#### FPGA item

Update the unit's FPGA.

#### RC-SS150 item

Update the firmware of a TASCAM RC-SS150 remote control.

6. Select the item to update, and press the **MULTI JOG** dial. After the medium and firmware update file have been verified, the following screen will appear.

```
FIRMWARE UPDATE
SS-Main.101
```

### NOTE

- The screen above shows a list of firmware update files in the root folder of the current medium. The firmware copied in step 2 above should also be shown.

No **Update File** is shown if no update file is in the directory.

- A maximum of five lines of firmware can be shown at the same time. If there are more files than can be shown on the display at once, use the **MULTI JOG** dial to scroll the list.

- The screen shown above is an example. The actual appearance will differ.

7. Select the firmware update to use. The screen shown below will appear.

```
SYSTEM UPDATE
SS-Main.101
Ver 1.00  -> Ver 1.01
Build0033  Build0034
Are you sure?
```

The number of the current version is shown on the left and the update version is shown on the right.

### NOTE

The screen shown above is an example. The actual appearance will differ.

8. Press the **MULTI JOG** dial to start updating.

### CAUTION

- Be careful not to let the power be interrupted during the update.
- If the power is interrupted during the update, the unit might become unstartable.

9. When the update completes, the following message will appear.

```
SYSTEM UPDATE
Update Complete!!
----- Shutdown -----
Remain 5sec
```

10. When the unit automatically turns off after the message appears, turn it on again.

11. Confirm that the latest firmware is being used. This completes the update procedure.

12. Delete the firmware update file from the medium.