

TASCAM

X-48

Software Update Instructions

Please follow the steps below for a smooth experience in updating your X-48 to the latest software revision. Also, check the TASCAM website frequently to ensure that your X-48 is running the latest software.

To check the software version in your X-48

- VGA
 - Select *About* from the *Windows* menu
 - The software version will be displayed
 - Click anywhere on the dialog to dismiss it
- LCD
 - Press the **SYS** front panel shortcut key
 - Press the **Up** or **Down Arrow** keys until *About* is displayed
 - Press **CHNG**
 - The software version will be displayed
 - Press **CLEAR/HOME** to dismiss the display

To update the software in your X-48

1. Download the ZIP file from the TASCAM website containing the latest X-48 software. <http://www.tascam.com>
2. Inside the ZIP file is an X-48 Update folder. Extract that folder to someplace on your computer easy to find, like your desktop.
3. Copy that folder to a USB flash drive or burn it to CD
4. Connect the USB flash drive to the X-48 or insert the CD containing the update folder.
 - a. If you are using a USB flash drive, give the X-48 a moment to recognize it, then press the front panel **EXT MNT** key to mount the drive. When mounted, that key will illuminate.
5. Using the VGA interface select *Launch External Application* from the *File* menu.
6. Navigate to the folder on the USB flash drive or CD containing the update files.
7. Run the `X48_Updater.exe` application
 - a. You will be prompted twice to confirm that you want to run this application.
 - b. You will be prompted to confirm installation of a software version
 - c. You will be notified that the X-48 application must exit to run the updater
 - d. You will be notified that the installation is complete
 - e. Remove the CD from the X-48's CD tray if one was used
 - f. Click OK and the X-48 will shut down
- 8. Remove the USB flash drive if one was used**
9. Power up the X-48 and check the software version number