

**TASCAM CD-400U/CD-400UDAB  
CONTROL I/O Terminals  
RS-232C/TELNET Protocol Specifications**

**Ver. 1.02**

**Aug/2018**

**TEAC Corporation**

## CAUTION

TEAC Corporation (hereafter, "TEAC") permits the use of the protocol described in this specification document with the prerequisite that the customer consents to the following protocol use agreement conditions.

If you do not consent to the following conditions in the protocol use agreement, you may not use this protocol and should return this document to TEAC. Moreover, be aware that violations of any of the following items in the protocol use agreement is an infringement on the rights of TEAC and could result in the termination of further use and be subject to restitution claims, for example.

### Protocol use agreement

1. This agreement comes into effect from the time the customer starts use of this protocol.
2. TEAC grants a nonexclusive and nontransferable "usage" right to the customer in order to develop devices (including software) that are compatible with the covered TASCAM products.
3. The acquisition of this document by the customer does not mean that the customer has acquired any rights, titles or interests in this protocol other than what is specified in this use agreement. The customer should recognize that as a written work belonging to TEAC, this document is protected based on the copyright laws of the signatory nations of the Universal Copyright Convention and the Berne Convention for the Protection of Literary and Artistic Works. Without exception, the intellectual property in this protocol belongs to TEAC or a source that provides it to TEAC.
4.
  - (1) The customer may not make copies of this specifications document.
  - (2) The customer may not transfer this specifications document to a third party without obtaining prior permission from TEAC.
  - (3) Since confidential information that belongs to TEAC is contained in this specifications document, the customer may not disclose it to a third party without obtaining prior permission from TEAC.
5. This specifications document and this protocol are provided as is. TEAC does not provide any guarantee whatsoever that the contents of this specifications document and the protocol are suitable for the specific purpose of the customer or that they are free of error.
6. TEAC cannot respond to customer inquiries about the contents of this specifications document.
7. TEAC will bear no responsibility for any damages (including business losses, business interruption, loss of business data or other financial damages) arising from the use or inability to use this specifications document or this protocol. This applies even if TEAC is informed about the potential for such damage in advance.

End of Use Agreement

## 1. Overview

The CD-400U/CD-400UDAB ("controlled device") can be controlled from an external device ("external controller"), such as a computer, through a serial RS-232C and ETHERNET (TELNET) connection.

## 2. Specifications

### Serial RS-232C

#### 2.1. Electrical Specifications

Standard:	JIS X-5101 (equivalent to the former JIS-C-6361 and EIA RS-232C standards) Note that this is not compatible with the RS-422 used in professional VTRs.
Impedance at receiver:	When measured with an applied voltage between -3 V and +3 V or between -15 V and +15 V, the DC resistance is between 3 k ohms and 7 k ohms. Total load capacitance is 2500 pF or less.
Open circuit voltage at transmitter:	25V or less
Open circuit voltage at receiver:	2V or less
Signal voltage:	When the open circuit voltage at the receiver is 0 V, the signal voltage is between -5 V and +5 V or between -15 V and +15V against a load impedance between 3 k ohms and 7 k ohms.
Signal discrimination:	Logic "1": -3V or less Logic "0": +3V or more

#### 2.2. Communication format


Circuit type:	3-wire, Half-duplex
Transmission type:	Digital binary serial
Data signal rate (baud rate):	4800/9600/19200/38400/57600 bits/sec
Data bits:	8 bits
Parity bits:	None
Stop bits:	1 bit

\*Data signal rate can be set from the menu of the controlled device.

**2.3. Connector pin-out**

Connector

D-sub 9pin female (Inch screw thread)




Terminal pin-out and input/output signals

Pin No.	In/Out	Signal name	Description
1	-	NC	Not connected
2	In	Rx DATA	Data received at this pin (*1)
3	Out	Tx DATA	Data transmitted from this pin
4	-	(Reserved)	Reserved
5	-	GND	Signal ground pin
6	-	(Reserved)	Reserved
7	Out	RTS	Short-circuit to Pin No. 8.
8	In	CTS	Short-circuit to Pin No. 7.
9	-	NC	Not connected

\*1: Make sure that a voltage applied to Pin No. 2 for Rx DATA conforms to the RS-232C standard.

\*2: Pins No. 7 and 8 are short-circuited to receive or transmit RTS/CTS signals.

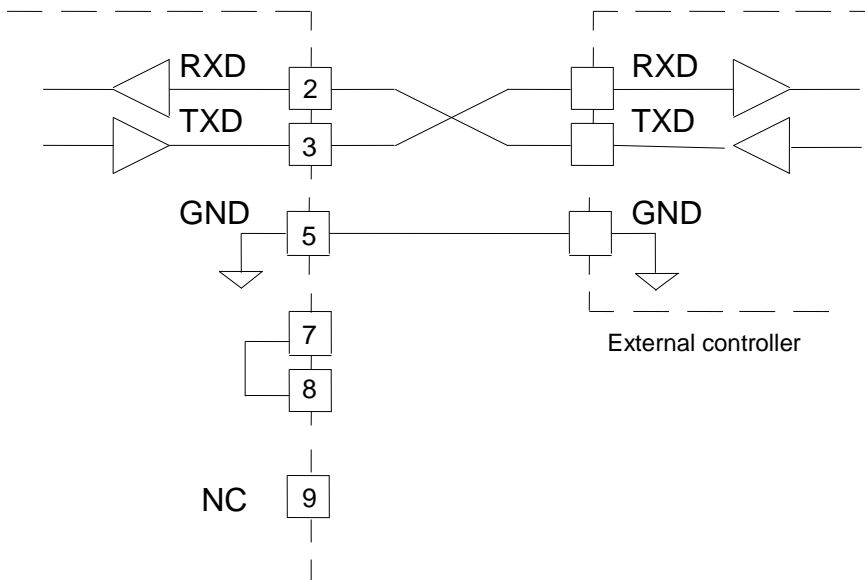

Controlled device  
(CD-400U/CD-400UDAB)

### 3. Command Format

#### 3.1. Command Format Overview

The command format is as follows.

##### Serial RS-232C

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	...	Byte n
LF	ID	Command		Data 1	Data 2	Data 3	Data 4	...	CR

A command uses a 2-byte ASCII format, starting with Line Field (LF), which is followed by machine ID, and ending with Carriage Return (CR).

For information about machine ID, see the section 3-2 Machine ID.

A command is followed by a byte string, which consists of data ranging from 0 bytes (if the command includes no data) to 98 bytes, maximum.

For detailed information about data, see each of the sections explaining commands. Note that capital letters are used for "A to F" for commands that use 0 to 9 and A to F as data values.

##### Command examples

**Example 1:** Sending the PLAY command to the controlled device with the machine ID=0  
 When the controlled device is in the stop or ready state, the PLAY command starts playing the controlled device.  
 The PLAY command is [12] and sent in the following format.

		ID	Command		
ASCII	LF	0	1	2	CR
HEX	0Ah	30h	31h	32h	0Dh

**Example 2:** Performing a direct search for the track 12 on the controlled device with the machine ID=0  
 To do a direct search for the track 12, DIRECT TRACK SEARCH PRESET command [23] is sent.  
 Data bytes consist of 2-byte ASCII characters.  
 A track number is specified in the DIRECT TRACK SEARCH PRESET command as shown below.  
 Data 1    tens digit of the track number to be specified  
 Data 2    ones digit of the track number to be specified  
 Data 3    thousands digit of the track number to be specified  
 Data 4    hundreds digit of the track number to be specified

Based on the above rule, the send command is described as follows.

		ID	Command		Data: 12th track				
ASCII	LF	0	2	3	1	2	0	0	CR
HEX	0Ah	30h	32h	33h	31h	32h	30h	30h	0Dh

**ETHERNET (TELNET)**

Byte 1	2	3	4	5	6	7	...	n-1	n
ID	Command		Data 1	Data 2	Data 3	Data 4	...	CR	LF

Commands start with an "ID" and end with a carriage return (CR) and a linefeed (LF), and are based on ASCII format. Machine ID (ID) will be explained below.

Commands are expressed as two-byte ASCII.

For details on the data, refer to the detailed explanation for each command. For commands that use 0--9 and A--F as data values, uppercase characters are used for A--F.

**Command examples**

**Example 1:** Sending a PLAY command to a controlled device with Machine ID = 0

When stopped or in playback standby, this command will start playback on the controlled device.

The play command is "12" and is transmitted as follows.

	ID	Command			
ASCII	0	1	2	CR	LF
HEX	30h	31h	32h	0Dh	0Ah

**Example 2:** Specifying a direct search for track 123 on a controlled device with Machine ID = 0

The command "DIRECT TRACK (TAKE) SEARCH PRESET [23]" is transmitted to perform this action.

Data bytes are formed of two-byte ASCII units.

For the command "DIRECT TRACK SEARCH PRESET," the track number is specified as follows.

- Data 1 Tens digit for specified track number
- Data 2 Ones digit for specified track number
- Data 3 Thousands digit for specified track number
- Data 4 Hundreds digit for specified track number

Therefore, the transmitted command is as follows.

	ID	Command		Data: take 123					
ASCII	0	2	3	2	3	0	1	CR	LF
HEX	30h	32h	33h	32h	33h	30h	31h	0Dh	0Ah

**3.2. Machine ID**

The Machine ID is fixed at [0]. A command with the machine ID other than [0] is ignored.

### 3.3. Command Sequence

In most cases, the controlled device does not send an ACK command in response to a transport control command or data preset command that is sent from an external controller.

The controlled device sends a return command in response to a data sense command that requests the controlled device to return the controlled device's preset data values.

If the controlled device switches from one state to another - from stop state to playback state, for example, or if an error occurs, the controlled device sends a command to notify the external controller about the state transition.

Examples of command sequences are shown below.

Make sure that commands are sent at a minimum of 100-millisecond intervals.

Example 1: Using a transport control of the controlled device (e.g. playback)

When entering the playback state after receiving the playback command, the controlled device sends the CHANGE STATUS command.

The controlled device does not send an ACK command in response to this command.

Command			Status of the controlled device
External controller		Controlled device	
			STOP
PLAY	->		
	<-	CHANGED STATUS	Sent when the controlled device enters the playback state

Example 2: Presetting data (e.g. pitch control data)

When receiving the RESUME PLAY SELECT command, the controlled device sets the pitch control data.

The controlled device does not send an ACK command in response to this command.

Command			Status of the controlled device
External controller		Controlled device	
PLAY MODE SELECT (Single)	->		Sets the resume play mode to single

Example 3: Requesting currently set data (e.g. pitch control data)

When receiving the PLAY MODE SENSE (Sense) command, the controlled device sends the set play mode status.

Command			Status of the controlled device
External controller		Controlled device	
PLAY MODE SENSE (Sense)	->		
	<-	PLAY MODE RETURN	

#### Command details

The commands, data and Machine ID given here are ASCII characters.

Commands are 2-byte characters, the Machine ID is a 1-byte character and Data are each 1-byte characters.

The specifications for take and project numbers that this unit can handle are as follows. If a number is specified for an item that does not exist, however, the command will be treated as invalid.

Track number (MP3/WAV MEDIA )	999 maximum
Track number (Audio CD)	99 maximum

### 3.4. List of Commands

#### List of main commands

Control/Preset/Sense Command		Return Command	
0F	INFORMATION REQUEST	8F	INFORMATION RETURN
10	STOP		
12	PLAY		
14	READY		
18	EJECT		
1A	TRACK SKIP		
23	DIRECT TRACK SEARCH PRESET		
34	RESUME PLAY SELECT	B4	RESUME PLAY SELECT RETURN
37	REPEAT SELECT	B7	REPEAT SELECT RETURN
3A	INCR PLAY SELECT	BA	INCR PLAY SELECT RETURN
4C	REMOTE/LOCAL SELECT	CC	REMOTE/LOCAL SELECT RETURN
4D	PLAY MODE SELECT		
4E	PLAY MODE SENSE	CE	PLAY MODE RETURN
50	MECHA STATUS SENSE	D0	MECHA STATUS RETURN
55	TRACK NO. SENSE	D5	TRACK NO. RETURN
56	MEDIA STATUS SENSE	D6	MEDIA STATUS RETURN
57	CURRENT TRACK INFORMATION SENSE	D7	CURRENT TRACK INFORMATION RETURN
58	CURRENT TRACK TIME SENSE	D8	CURRENT TRACK TIME RETURN
5D	TOTAL TRACK NO./TOTAL TIME SENSE	DD	TOTAL TRACK NO./TOTAL TIME RETURN
		F0	ERROR SENSE REQUEST
		F1	CAUTION SENSE REQUEST
		F2	ILLEGAL STATUS
		F4	POWER ON STATUS
		F6	CHANGE STATUS
78	ERROR SENSE	F8	ERROR SENSE RETURN
79	CAUTION SENSE	F9	CAUTION SENSE RETURN
7F	VENDOR COMMAND	FF	VENDOR COMMAND RETURN

#### List of vendor commands

The list of vendor commands (Command 7F/FF) is as follows.

Their command codes are indicated as a combination of Command (2-byte), Category Code (2-byte) and Sub Command (2-byte). For details, see the section starting page 24.

Control/Sense Command		Return Command		Adopted F/W Ver
7F01	DEVICE SELECT	FF01	DEVICE SELECT RETURN	
7F074F	PLAY AREA SELECT	FF07CF	PLAY AREA SELECT RETURN	

Caution: If no supported version is indicated in the "Adopted F/W Ver." column, ver. 1.00 or later are supported.



### 3.5. Command Details

#### INFORMATION REQUEST

INFORMATION REQUEST requests the controlled device to return information including the software version of the controlled device.

Command	0F
Data	None
Return	INFORMATION RETURN [8F]

#### STOP

STOP puts the controlled device into the stop state.

Command	10
Data	None
Return	None

#### PLAY

Play puts the controlled device into playback mode.

Command	12
Data	None
Return	None

**READY**

READY puts the controlled device into playback standby mode.

Command 14  
Data 2 bytes  
Return None

Data 1	Data 2	Description	Remarks
0	0	Ready OFF	Switches back from playback standby mode.
0	1	Ready ON	Switches to playback standby mode.

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**EJECT**

EJECT ejects a CD Media from the controlled device.

If the device selected on the controlled device is not CD, this command ejects the CD Media.

Command 18  
Data None  
Return None

**TRACK SKIP**

SKIP allows the controlled device to skip a track.

Command 1A  
Data 2 bytes  
Return None

Data 1	Data 2	Description	Remarks
0	0	Track Skip Next	Skips to the next track
0	1	Track Skip Previous	If the current position is at the beginning of a track (or within one second of the beginning of a track), the controlled device skips to the beginning of the previous track. If the current position is not at the beginning of a track, the controlled device skips to the beginning of the current track.

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**DIRECT TRACK SEARCH PRESET**

DIRECT TRACK SEARCH PRESET performs a search for a track on the controlled device by specifying the track number. If a track search is performed while the controlled device is in a playback state or a stop state, the controlled device starts playing the selected track first.

If a track search is performed while the controlled device is in a state other than the above two states, the controlled device switches back to the state where it was before starting a search and remains in that state.

Command 23  
 Data 4 bytes  
 Return None

	Description	Remarks
<b>Data 1</b>	Tens digit of the track number	Track number Example) 2301: Track 123
<b>Data 2</b>	Ones digit of the track number	
<b>Data 3</b>	Thousands digit of the track number	
<b>Data 4</b>	Hundreds digit of the track number	

If the track number specified does not exist in the media, it sends ILLEGAL [F2].

If the mode is FM, AM or DAB, this command performs selecting preset station by specifying the preset number.

**RESUME PLAY SELECT**

RESUME PLAY SELECT turns the resume play mode of the controlled device on or off.

Only when this command is sent with request data [FF], the controlled device sends the REPEAT SELECT RETURN command [B4].

Command 34  
 Data 2 bytes  
 Return RESUME PLAY SELECT RETURN [B4]

Data 1	Data 2	Description	Remarks
0	0	Resume play OFF	
0	1	Resume play ON	
F	F	Sense	Requests the controlled device to return the current resume play mode setting

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**REPEAT SELECT**

REPEAT SELECT turns the repeat mode of the controlled device on or off.

Only when this command is sent with request data [FF], the controlled device sends the REPEAT SELECT RETURN command [B7].

Command 37  
 Data 2 bytes  
 Return REPEAT SELECT RETURN [B7]

Data 1	Data 2	Description	Remarks
0	0	Repeat OFF	
0	1	Repeat ON	
F	F	Sense	Requests the controlled device to return the current repeat mode setting

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**INCR PLAY SELECT**

INCR PLAY SELECT turns the incremental playback mode of the controlled device on or off.

Only when this command is sent with request data [FF], the controlled device sends the INCR PLAY SELECT RETURN command [BA].

Command        3A  
 Data            2 bytes  
 Return         INCR PLAY SELECT RETURN [BA]

Data 1	Data 2	Description	Remarks
0	0	Incremental playback OFF	
0	1	Incremental playback ON	
F	F	Sense	Requests the controlled device to return the current incremental playback mode setting

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**REMOTE/LOCAL SELECT**

REMOTE/LOCAL SELECT enables or disables key operation on the controlled device.

Only when this command is sent with request data [FF], the controlled device sends the REMOTE/LOCAL RETURN command [CC].

Command 4C  
 Data 2 bytes  
 Return REMOTE/LOCAL SELECT RETURN [CC]

Data 1	Data 2	Description	Remarks
0	0	Only remote	Enables only remote operation through an RS-232C connector, ETHERNET and the IR remote control. Key operation on the controlled device is disabled. Keys on the front panel: Disable RS-232C & Ethernet: Enable IR remote control: Enable
0	1	Remote and Front key	Enables remote operation and key operation on the controlled device All are enabled.
1	0	Serial control only	Enables only remote operation through an RS-232C, ETHERNET. Key operation on the controlled device and remote operation through the IR remote control are disabled. Keys on the front panel: Disable RS-232C & Ethernet: Enable IR remote control: Disable
1	1	IR remote disable	Enables remote operation through an RS-232C, ETHERNET and key operation on the controlled device. Remote operation through the IR remote control is disabled. Keys on the front panel: Enable RS-232C & Ethernet: Enable IR remote control: Disable
F	F	Sense	Requests the controlled device to return the current remote/local mode setting

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**PLAY MODE SELECT**

PLAY MODE SELECT sets the playback mode of the controlled device.

The playback mode setting can be checked using the PLAY MODE SENSE command [4E].

Command 4D  
 Data 2 bytes  
 Return None

Data 1	Data 2	Description	Remarks
0	0	Continuous	Continuous playback
0	1	Single	Single playback
0	6	Random	Random playback

**PLAY MODE SENSE**

PLAY MODE SENSE requests the controlled device to return the current playback mode setting of the controlled device.

Command	4E
Data	None
Return	PLAY MODE RETURN [CE]

**MECHA STATUS SENSE**

MECHA STATUS SENSE requests the controlled device to return the status of the specified mechanism of the controlled device.

Command	50
Data	None
Return	MECHA STATUS RETURN [D0]

**TRACK No. SENSE**

TRACK No. SENSE requests the controlled device to return the current track number.

Command:	55
Data:	None
Return:	TRACK No. RETURN [D5]

**MEDIA STATUS SENSE**

MEDIA STATUS SENSE requests the controlled device to return information about the presence or absence and the type of a media in the controlled device.

Command	56
Data	None
Return	MEDIA STATUS RETURN [D6]

**CURRENT TRACK INFORMATION SENSE**

CURRENT TRACK INFORMATION SENSE requests the controlled device to return information about the current track.

Command	57
Data	None
Return	CURRENT TRACK INFORMATION RETURN [D7]

**CURRENT TRACK TIME SENSE**

CURRENT TRACK TIME SENSE requests the controlled device to return the selected time information about the current track or the whole media, when in a playback or a ready state. Track remaining time(01), Total elapsed time on the media(02) and Total remaining time on the media (03) are not supported when the media is Data-CD, USB or SD.

Command        58  
 Data            2 bytes  
 Return         CURRENT TRACK TIME RETURN [D8]

Data 1	Data 2	Description	Remarks
0	0	Track elapsed time	
0	1	Track remaining time	Only for CD-DA
0	2	Total elapsed time on the media	Only for CD-DA
0	3	Total remaining time on the media	Only for CD-DA

·If the controlled device receives data other than the above data, it sends ILLEGAL (F2).

**TOTAL TRACK No./TOTAL TIME SENSE**

TOTAL TRACK No./TOTAL TIME SENSE requests the controlled device to return the total number of tracks on the media and the total running time of the media in the controlled device.

Command        5D  
 Data            None  
 Return         TOTAL TRACK No./TOTAL TIME RETURN [DD]

**ERROR SENSE**

ERROR SENSE requests the controlled device to return information about an error that occurred on the controlled device. Be sure to determine the error by using this command if the ERROR SENSE REQUEST command [F0] is issued from the controlled device.

Command:        78  
 Data:            None  
 Return:         ERROR SENSE RETURN [F8]

**CAUTION SENSE**

CAUTION SENSE requests the controlled device to return information about a caution that is shown on the controlled device. Be sure to check the caution by using this command if the CAUTION SENSE REQUEST command [F1] is issued from the controlled device.

Command:        79  
 Data:            None  
 Return:         CAUTION SENSE RETURN [F9]

**VENDOR COMMAND**

This command controls a function unique to this unit. For details, see "**Detailed information about Vendor Commands**" on page 24.

Command:        7F  
 Return:         VENDOR COMMAND RETURN [FF]

**INFORMATION RETURN**

INFORMATION RETURN is sent in response to the INFORMATION REQUEST command [0F] to show the software version.

Command 8F  
 Data 4 bytes  
 Request command INFORMATION REQUEST [0F]

	Description	Remarks
<b>Data 1</b>	Tens digit of the software version	Example) 0123: Version 01.23
<b>Data 2</b>	Ones digit of the software version	
<b>Data 3</b>	First decimal place of the software version	
<b>Data 4</b>	Second decimal place of the software version	

**RESUME PLAY SELECT RETURN**

RESUME PLAY SELECT RETURN is sent in response to the RESUME PLAY SELECT command [34] to show the current resume play mode setting.

Command B4  
 Data 2 bytes  
 Request command RESUME PLAY SELECT [34]

Data 1	Data 2	Description	Remarks
0	0	Resume play OFF	
0	1	Resume play ON	

**REPEAT SELECT RETURN**

REPEAT SELECT RETURN is sent in response to the REPEAT SELECT command [37] to show the current repeat setting.

Command B7  
 Data 2 bytes  
 Request command REPEAT SELECT [37]

Data 1	Data 2	Description	Remarks
0	0	Repeat OFF	
0	1	Repeat ON	

**INCR PLAY SELECT RETURN**

INCR PLAY SELECT RETURN is sent in response to the INCR PLAY SELECT command [3A] to show the current incremental playback setting.

Command BA  
 Data 2 bytes  
 Request command INCR PLAY SELECT [3A]

Data 1	Data 2	Description	Remarks
0	0	INCR playback OFF	
0	1	INCR playback ON	



**REMOTE/LOCAL SELECT RETURN**

REMOTE/LOCAL SELECT RETURN is sent in response to the REMOTE/LOCAL SELECT command [4C] to show the current remote/local mode setting.

Command CC  
 Data 2 bytes  
 Request command REMOTE/LOCAL SELECT [4C]

Data 1	Data 2	Description	Remarks
0	0	Only remote	Enables only remote operation through an RS-232C connector, ETHERNET and the IR remote control. Key operation on the controlled device is disabled. Keys on the front panel: Disable RS-232C & Ethernet: Enable IR remote control: Enable
0	1	Remote and Front key	Enables remote operation and key operation on the controlled device All are enabled.
1	0	Serial control only	Enables only remote operation through an RS-232C, ETHERNET. Key operation on the controlled device and remote operation through the IR remote control are disabled. Keys on the front panel: Disable RS-232C & Ethernet: Enable IR remote control: Disable
1	1	IR remote disable	Enables remote operation through an RS-232C, ETHERNET and key operation on the controlled device. Remote operation through the IR remote control is disabled. Keys on the front panel: Enable RS-232C & Ethernet: Enable IR remote control: Disable

**PLAY MODE RETURN**

PLAY MODE RETURN is sent in response to the PLAY MODE SENSE command [4E] to show the current playback mode setting.

Command CE  
 Data 2 bytes  
 Request command PLAY MODE SENSE [4E]

Data 1	Data 2	Description	Remarks
0	0	Continuous playback	
0	1	Single playback	
0	6	Random playback	

**MECHA STATUS RETURN**

MECHA STATUS RETURN is sent in response to the MECHA STATUS SENSE command [50] to show the current status of the specified mechanism of the controlled device.

Command D0  
 Data 2 bytes  
 Request command MECHA STATUS SENSE [50]

Data 1	Data 2	Description	Remarks
0	0	No Media	No Media
0	1	Preparing for disc ejection	In disc-ejecting state
1	0	Stop	In stop state
1	1	Play	In playback state
1	2	Ready	In ready state
8	1	Record	In recording state
8	2	Record ready	In record ready state
8	3	Information writing	In information writing state
F	F	Other	Some other status

**TRACK No. RETURN**

TRACK No. RETURN is sent in response to the TRACK No. SENSE command [55] to show the current track number.

Command D5  
 Data 6 bytes  
 Request command TRACK No. SENSE [55]

	Description	Remarks
<b>Data 1</b>	EOM Status	00: Shows that the current track has yet to reach the set EOM time or EOM display mode is turned off 01: Shows that the controlled device is displaying the EOM time
<b>Data 2</b>		
<b>Data 3</b>	Tens digit of the track number	
<b>Data 4</b>	Ones digit of the track number	
<b>Data 5</b>	Thousands digit of the track number	
<b>Data 6</b>	Hundreds digit of the track number	

**MEDIA STATUS RETURN**

MEDIA STATUS RETURN is sent in response to the MEDIA STATUS SENSE command [56] to show the presence or absence of a media and the type of the media.

Command D6  
 Data 4 bytes  
 Request command MEDIA STATUS SENSE [56]

<b>Data 1</b>	Media status	00: No media
<b>Data 2</b>		01: Media loaded
<b>Data 3</b>	Media type	00: CD-DA, SD or USB
<b>Data 4</b>		10: CD-ROM (Data)

**CURRENT TRACK INFORMATION RETURN**

CURRENT TRACK INFORMATION RETURN is sent in response to the CURRENT TRACK INFORMATION SENSE command [57] to show information about the program number when in program playback mode or current track when in another playback mode.

Command D7  
 Data 12 bytes  
 Request command CURRENT TRACK INFORMATION SENSE [57]

	Description	Remarks
<b>Data 1</b>	Tens digit of the track number	
<b>Data 2</b>	Ones digit of the track number	
<b>Data 3</b>	Thousands digit of the track number	
<b>Data 4</b>	Hundreds digit of the track number	
<b>Data 5</b>	Tens digit of the minutes	
<b>Data 6</b>	Ones digit of the minutes	
<b>Data 7</b>	Thousands digit of the minutes	
<b>Data 8</b>	Hundreds digit of the minutes	
<b>Data 9</b>	Tens digit of the seconds	
<b>Data 10</b>	Ones digit of the seconds	
<b>Data 11</b>	(Tens digit of the frames)	Frames are not supported. Data 11 and 12 are always 0.
<b>Data 12</b>	(Ones digit of the frames)	

**CURRENT TRACK TIME RETURN**

CURRENT TRACK TIME RETURN is sent in response to the CURRENT TRACK TIME SENSE command [58] to show the selected time information about the current track.

Command                      D8  
 Data                              10 bytes  
 Request command              CURRENT TRACK TIME SENSE [58]

		Description	Remarks
<b>(Data 1, Data 2)</b>	00	Elapsed time	01, 02 and 03 are not supported when the media is Data-CD, USB or SD, When the media is CD-DA and Play mode is random, 02 and 03 is not supported. Elapsed time(00) is returned.
	01	Track remaining time	
	02	Total elapsed time on the media	
	03	Total remaining time on the media	
<b>Data 3</b>	--	Tens digit of the minutes	
<b>Data 4</b>	--	Ones digit of the minutes	
<b>Data 5</b>	--	Thousands digit of the minutes	
<b>Data 6</b>	--	Hundreds digit of the minutes	
<b>Data 7</b>	--	Tens digit of the seconds	
<b>Data 8</b>	--	Ones digit of the seconds	
<b>Data 9</b>	0	(Tens digit of the frame)	Frames are not supported. Data 9 and 10 are always 0.
<b>Data10</b>	0	(Ones digit of the frame)	

**TOTAL TRACK No./TOTAL TIME RETURN**

TOTAL TRACK No./TOTAL TIME RETURN is sent in response to the TOTAL TRACK No./TOTAL TIME SENSE command [5D] to show the total number of tracks on a media and the total running time of the media in the controlled device.

Command DD  
 Data 12 bytes  
 Request command TOTAL TRACK No./TOTAL TIME SENSE [5D]

	Description	Remarks
<b>Data 1</b>	Tens digit of the total number of tracks	
<b>Data 2</b>	Ones digit of the total number of tracks	
<b>Data 3</b>	Thousands digit of the total number of tracks	
<b>Data 4</b>	Hundreds digit of the total number of tracks	
<b>Data 5</b>	Tens digit of the minutes	Data-CD, USB and SD don't support total time. In this case, Data 5 – 12 are always 0.
<b>Data 6</b>	Ones digit of the minutes	
<b>Data 7</b>	Thousands digit of the minutes	
<b>Data 8</b>	Hundreds digit of the minutes	
<b>Data 9</b>	Tens digit of the seconds	
<b>Data 10</b>	Ones digit of the seconds	
<b>Data 11</b>	(Tens digit of the total number of frames of all tracks)	Frames are not supported. Data 11 – 12 are always 0.
<b>Data 12</b>	(Ones digit of the total number of frames of all tracks)	

**ERROR SENSE REQUEST**

ERROR SENSE REQUEST is sent from the controlled device to the external controller to show that the controlled device is in an error state. If the command is sent, the external controller issues the ERROR SENSE command [78]. Be sure to determine the error by using the ERROR SENSE command.

Command F0  
 Data None  
 Request command None

**CAUTION SENSE REQUEST**

CAUTION SENSE REQUEST is sent from the controlled device to the external controller to show that the controlled device is in a caution state. If the command is sent, the external controller issues the CAUTION SENSE command [79]. Be sure to check the caution by using the CAUTION SENSE command.

Command F1  
 Data None  
 Request command None

**ILLEGAL STATUS**

ILLEGAL STATUS is sent from the controlled device to the external controller to show that an invalid command or data has been sent to the controlled device. If the command is sent, send a command or data again, making sure that it is a valid command or data.

Command F2  
 Data None  
 Request command None

**POWER ON STATUS**

POWER ON STATUS is sent from the controlled device to the external controller to show that the controlled device has been turned on.

Command F4  
 Data None  
 Request command None

**CHANGE STATUS**

CHANGE STATUS is sent from the controlled device to the external controller to show that the controlled device has switched from one state to another.

Command F6  
 Data 2 bytes  
 Request command None

Data 1	Data 2	Description	Remarks
0	0	Mechanism status change	The status of the specified mechanism has been changed.
0	3	Track and EOM status changes	The controlled device has moved from one track to another or the EOM status has been changed.

**ERROR SENSE RETURN**

ERROR SENSE RETURN is sent in response to the ERROR SENSE command [78].

Command F8  
 Data 4 bytes  
 Request command ERROR SENSE [78]

Data 1	N2	ERROR CODE (N1-N2N3)
Data 2	N3	0-00 No Error
Data 3	0	1-01 Dubbing Error (error related to recording)
Date 4	N1	1-02 Device Error (error related to device)
		1-FF Other Error (An error other than those above occurred. Check the unit.)

**CAUTION SENSE RETURN**

CAUTION SENSE RETURN is sent in response to the CAUTION SENSE command [79].

Command                    F9  
 Data                        4 bytes  
 Request command        CAUTION SENSE [79]

Data 1	N2	CAUTION CODE (N1-N2N3)	
Data 2	N3	0-00	No Caution
Data 3	0	1-02	Media Error (error related to media)
Data 4	N1	1-06	Media Full (media has no remaining capacity)
		1-0C	Write Protected (media is write-protected)
		1-0D	Not Execute (function cannot be executed in this state)
		1-13	Can't Select (selecting is not possible in this state)
		1-16	Name Full (name setting character upper limit has been reached)
		1-1E	Decode Error (error related to playback)
		1-1F	Media Not Match (media is not suitable)
		1-FF	Other Caution (A caution other than those above occurred. Check the unit.)

**VENDOR COMMAND RETURN**

This is the returned command in response to the command [7F].

See “**Detailed Information about Vendor Commands**” below.

Command                    FF

### Detailed information about Vendor Commands

Vendor commands have the following format.

#### Serial RS-232C

Byte 1	Byte 2	Byte 3	Byte 4	Byte 5	Byte 6	Byte 7	Byte 8	Byte 9	...	Byte n
LF	ID	Command		Data 1	Data 2	Data 3	Data 4	Data 5	...	CR
LF	'0'	'7F' or 'FF'		Category Code		Sub Command		Parameter	...	CR

#### ETHERNET (TELNET)

Byte 1	2	3	4	5	6	7	8	...	n-1	n
ID	Command		Data 1	Data 2	Data 3	Data 4	Data 5	...	LF	CR
'0'	'7F' or 'FF'		Category Code		Sub Command		Parameter	...	LF	CR

Category Code: The category code (2-byte ASCII) is used for classifying vendor commands according to function.

Sub Command: This is a unique sub-command code (2-byte ASCII) within the category.  
 DEVICE SELECT (01), DIVIDE(02) and DELETE ( 03 ) is the only category that has no sub command.  
 DEVICE SELECT (01) is Data 3 and higher are parameters.

Parameter: This is a parameter added to the command code (ASCII, length differs for each sub command.)

Below is the list of category codes.

Category Code	Category classification	Description
01	DEVICE SELECT	Selects the device to be used (SD, USB,CD)
07	Playback	Setting related to playback

### DEVICE SELECT

DEVICE SELECT changes the device to be used on the controlled device.

Command 7F  
 Category Code 01  
 Parameter: 2 bytes  
 Return DEVICE SELECT RETURN [FF01]

Data 5	Data 6	Function	Remarks
0	0	SD	Sets the device to SD
1	0	USB	Sets the device to USB
1	1	CD	Sets the device to CD
2	0	Bluetooth	Sets the device to Bluetooth
3	0	FM	Sets the device to FM (CD-400U)
		DAB	Sets the device to DAB (CD-400UDAB)
3	1	AM	Sets the device to AM (CD-400U)
		FM	Sets the device to FM (CD-400UDAB)
4	0	AUX	Sets the device to AUX
F	F	Sense	Requests the controlled device to return the current device.



**PLAY AREA SELECT**

PLAY AREA SELECT sets the playback area of the controlled device. This command is not supported when the media is CD-DA.

Command 7F  
 Category Code 07  
 Subcommand 4F  
 Parameter: 2 bytes  
 Return PLAY AREA SELECT RETURN [FF07CF]

Data 7	Data 8	Function	Remarks
0	0	All	
0	1	Folder, not skip mode	
0	F	Folder, skip mode	
F	F	Sense	

If the source is CD-DA, it sends ILLEGAL [F2].

**DEVICE SELECT RETURN**

DEVICE SELECT RETURN returns the information about the selected device.

Command FF  
 Category Code 01  
 Parameter: 2 bytes  
 Request command DEVICE SELECT [7F01]

Data 5	Data 6	Function	Remarks
0	0	SD	SD is selected
1	0	USB	USB is selected.
1	1	CD	CD is selected.
2	0	Bluetooth	Bluetooth is selected.
3	0	FM	FM is selected. (CD-400U)
		DAB	DAB is selected. (CD-400UDAB)
3	1	AM	AM is selected. (CD-400U)
		FM	FM is selected. (CD-400UDAB)
4	0	AUX	AUX is selected.

**PLAY AREA SELECT RETURN**

PLAY AREA SELECT RETURN is sent in response to the PLAY AREA SELECT command [7F074F]. This command is not supported when the media is CD-DA.

Command FF  
Category Code 07  
Subcommand CF  
Parameter: 2 bytes  
Request command PLAY AREA SELECT [7F074F]

Data 7	Data 8	Function	Remarks
0	0	All	
0	1	Folder, not skip mode	
0	F	Folder, skip mode	

If the media is CD-DA, it sends ILLEGAL [F2].

**Revision List**

- Ver 1.00 First issue
- Ver 1.01 Change 7F01 "DEVICE SELECT" and FF01 "DEVICE SELECT RETURN"  
Delete Subcommand 32 DAB  
Change Subcommand 30: FM → FM for CD-400U / DAB for CD-400UDAB  
Change Subcommand 31: AM → AM for CD-400U / FM for CD-400UDAB
- Ver 1.01 Collection of RS-232C command format
- Ver.1.02 Collect errors