


TASCAM
TEAC PROFESSIONAL

D01098520B

DR-680

Portable Multitrack Recorder

OWNER'S MANUAL

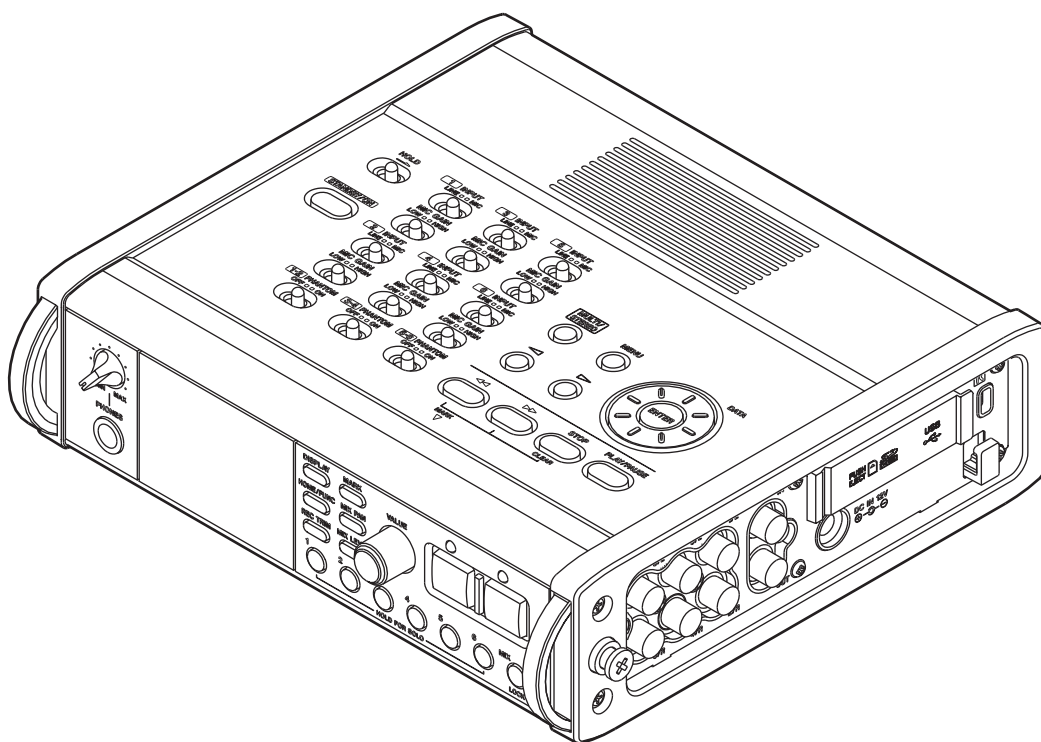

IMPORTANT SAFETY INSTRUCTIONS



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

For U.S.A.

TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Changes or modifications to this equipment not expressly approved by TEAC CORPORATION for compliance could void the user's authority to operate this equipment.


WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

This appliance has a serial number located on the rear panel. Please record the model number and serial number and retain them for your records.

Model number _____

Serial number _____

IMPORTANT SAFETY INSTRUCTIONS

- 1 Read these instructions.
 - 2 Keep these instructions.
 - 3 Heed all warnings.
 - 4 Follow all instructions.
 - 5 Do not use this apparatus near water.
 - 6 Clean only with dry cloth.
 - 7 Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
 - 8 Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
 - 9 Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
 - 10 Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
 - 11 Only use attachments/accessories specified by the manufacturer.
 - 12 Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- 
- 13 Unplug this apparatus during lightning storms or when unused for long periods of time.
 - 14 Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Do not expose this apparatus to drips or splashes.
 - Do not place any objects filled with liquids, such as vases, on the apparatus.
 - Do not install this apparatus in a confined space such as a book case or similar unit.
 - The apparatus draws nominal non-operating power from the AC outlet with its POWER or STANDBY/ON switch not in the ON position.
 - The apparatus should be located close enough to the AC outlet so that you can easily grasp the power cord plug at any time.
 - The mains plug is used as the disconnect device, the disconnect device shall remain readily operable.
 - If the product uses batteries (including a battery pack or installed batteries), they should not be exposed to sunshine, fire or excessive heat.
 - CAUTION for products that use replaceable lithium batteries: there is danger of explosion if a battery is replaced with an incorrect type of battery. Replace only with the same or equivalent type.
 - Caution should be taken when using earphones or headphones with the product because excessive sound pressure (volume) from earphones or headphones can cause hearing loss.

IMPORTANT SAFETY INSTRUCTIONS

CAUTIONS ABOUT BATTERIES

This product uses batteries. Misuse of batteries could cause a leak, rupture or other trouble. Always abide by the following precautions when using batteries.

- Never recharge non-rechargeable batteries. The batteries could rupture or leak, causing fire or injury.
- When installing batteries, pay attention to the polarity indications (plus/minus (+/-) orientation), and install them correctly in the battery compartment as indicated. Putting them in backward could make the batteries rupture or leak, causing fire, injury or stains around them.
- When you store or dispose of batteries, isolate their terminals with insulating tape or similar to prevent them from contacting other batteries or metallic objects.
- When throwing used batteries away, follow the disposal instructions indicated on the batteries and the local disposal laws.
- Do not use batteries other than those specified. Do not mix and use new and old batteries or different types of batteries together. The batteries could rupture or leak, causing fire, injury or stains around them.
- Do not carry or store batteries together with small metal objects. The batteries could short, causing leak, rupture or other trouble.
- Do not heat or disassemble batteries. Do not put them in fire or water. Batteries could rupture or leak, causing fire, injury or stains around them.
- If the battery fluid leaks, wipe away any fluid on the battery case before inserting new batteries. If the battery fluid gets in an eye, it could cause loss of eyesight. If fluid does enter an eye, wash it out thoroughly with clean water without rubbing the eye and then consult a doctor immediately. If the fluid gets on a person's body or clothing, it could cause skin injuries or burns. If this should happen, wash it off with clean water and then consult a doctor immediately.
- Remove the batteries if you do not plan to use the unit for a long time. Batteries could rupture or leak, causing fire, injury or stains around them. If the battery fluid leaks, wipe away any fluid on the battery compartment before inserting new batteries.

产品有毒有害物质或元素的名称及含量

机种：DR-680		有毒有害物质或元素					
	品名	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
1	CHASSIS部份	×	○	○	○	○	○
2	线材部份	○	○	○	○	○	○
3	PCB Assy部份	×	○	○	○	○	○
4	电源部份	×	○	○	○	○	○
5	附属品部份	○	○	○	○	○	○
6	SEAL部份	○	○	○	○	○	○
7	包装部份	○	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含有量均在 SJ/T11363-2006 标准规定的限量要求以下。

×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。

（针对现在代替技术困难的电子部品及合金中的铅）

1 – Introduction	7
Features	7
Items included with the product	7
Conventions used in this manual	7
Intellectual property rights	8
About SD cards	9
Precautions for use	9
Precautions for placement and use	9
Beware of condensation	9
Cleaning the unit	9
2 – Names and Functions of Parts	10
Top panel	10
Front panel	11
Left side panel	13
Right side panel	14
Bottom panel	15
Home Screen	16
Menu structure	17
Using menus	18
Operation basics	18
Functions Screen	18
Repeat activation	19
Pre-record activation	19
Auto-record activation	19
DIN/MIX monitor settings	19
Limiter activation	19
Low-cut filter activation	19
3 – Preparations	20
Powering the unit	20
About the power supply	20
Using AA batteries	20
Using the AC adaptor	20
Turning the power on and putting the unit into standby	21
Turning the power on	21
Putting the unit into standby	21
Inserting and removing SD cards	21
Inserting an SD card	21
Ejecting an SD card	21
Preparing an SD card for use	22
Card write-protection	22
Setting the date and time	22
Monitoring playback with the built-in speaker	22
Connecting monitoring equipment	23
Adjusting the display contrast	23
4 – Recording	24
Files and takes	24
Recording settings	24
Setting the recording file format	24
Setting the sampling frequency	25
Setting the file recording mode	25
Stereo track recording settings	25
Arming and disarming tracks for recording	25
Creation of new takes when restarting recording	26
Setting the name given to recording takes	26
Editing the user take names	26
Available recording time display	27
Set the folder for saving takes	27
Connecting other equipment	27
Input settings	27
Setting the input sources	28
Phantom power	28
Selecting the inputs for recording to tracks 5 and 6	28
Adjusting the input levels	29
Recording a take	30
Recording a stereo mix	30
Using the solo function	31
Automatically starting and pausing recording (auto-record function)	31
Using the auto-record function	31
Auto-record settings	31
Automatically cutting unnecessary silences when recording (silent cut function)	31
Automatically adding marks at the position where recording restarts	32
Starting a new take and continuing to record	32
Manually starting a new take during recording	32
Automatically starting a new take during recording	33
Using the limiter	33
Using the low-cut filter	33
Turning the low-cut filter on and off	33
Setting the cut-off frequency of the low-cut filter	33
Using marks	34
Manually adding marks when recording and during playback	34
Moving to a mark	34
Erasing marks	34
Pre-recording	35
Recording times	36
5 – Take and folder operations (BROWSE screen)	37
Navigating the BROWSE screen	37
Icons on the BROWSE screen	37
Take operations	37
Folder operations	38
6 – Playback	39
Playback	39
Starting playback	39
Stopping playback	39
Pausing playback	39
Searching forward and backward	39
Selecting a take for playback	39
Changing the playback position (scrubbing)	39
Mixing and outputting a multitrack recording	40
Using the internal mixer	40
Using the solo function	40
Playing a stereo track	40
Setting the playback area	41
Selecting a folder for the playback area on the BROWSE screen	41
Setting the search speed	41

Contents

Repeat playback.....	42
7 – Connection with a computer	43
Copying files to a computer	43
Copying files from a computer.....	43
Ending the connection with a computer	44
8 – Cascade connections	45
Preparing to use the cascade function	45
Cascade recording	45
Cascade playback.....	45
Disabling cascade operation	45
Precautions for use of the cascade function.....	46
9 – Other Settings and Information	
Display	47
Output settings	47
Analog output settings	47
Digital output settings	47
System settings	47
Power AUTO OFF settings.....	48
Turning the backlight off automatically	48
Cascade settings	48
Setting the extent of the panel operation lock function ...	48
Setting the battery type.....	48
Initializing the unit.....	49
Viewing system information.....	49
Reformatting SD cards	49
Viewing card information	50
10 – Messages	51
11 – Troubleshooting	53
12 – Specifications	54
Recording media and formats.....	54
Input and output	54
Analog audio input and output	54
Digital audio input and output.....	54
Control input and output	54
Audio performance	55
Requirements for connected computers.....	55
Other specifications	55
Dimensions.....	56
Block diagrams	57

Thank you very much for purchasing a TASCAM DR-680 Portable Multitrack Recorder. Please read this manual thoroughly before using the unit so that you understand correct operating procedures and can use its functions fully. We hope that you enjoy using this unit for many years.

Please keep this manual so that you can read it at any time. A digital copy of this manual can also be downloaded from our website (<http://www.tascam.com/>)

Features

- 8-track recording with a resolution of up to 24-bit, 96 kHz (6 analog inputs with stereo mix, or 6 analog inputs with digital stereo input)
- 2-track recording resolution of up to 24-bit, 192 kHz
- Recording/playback media: SD/SDHC cards (Class 4 or faster)
- Recording/playback formats: BWF, WAV, MP3
- Recording up to 4 tracks in MP3 format simultaneously possible
- Sampling frequencies: 44.1, 48, 96 and 192 kHz
- Quantization rates: 16-bit, 24-bit
- MP3 files can be recorded at resolutions of 96/128/192/320 kbps
- 6 balanced mic/line inputs (1–4 are XLR/TRS combo jacks and 5–6 are TRS jacks)
- Mic inputs can provide +48V phantom power
- Limiters on each input can automatically adjust their levels appropriately if input levels are too high
- Low-cut filters on each input are useful for reducing low-frequency noise
- 6 unbalanced line outputs (RCA pin jacks)
- S/PDIF and AES/EBU digital input and output (coaxial)
- Cascade function allows the transport of multiple DR-680 units to be controlled by a single master unit
- Pre-record function allows up to 2 seconds of input before the start of recording to be captured
- Auto-record function allows the unit to start recording automatically when it detects a set sound input level
- Mark function allows movement to specific playback positions

- Key lock function can be used to prevent misoperation
- Repeat playback function
- Mixer for monitoring with level and pan controls
- User can start a new take at any time without interrupting recording
- Take names can be based on a word set by the user or the date
- 500-mW monaural output speaker built-in
- 50-mW + 50-mW headphones output
- Operates on power from 8 AA batteries or an AC adaptor (PS-1225L)
- LCD with 128 x 64 pixel resolution and a backlight
- USB2.0 port
- USB cable included

Items included with the product

The DR-680 package contains the following items.

Take care when opening the package not to damage the items. Keep the package materials for transportation in the future.

Please contact the store where you purchased this unit if any of these items are missing or have been damaged during transportation.

• Main unit	1
• AC adaptor (TASCAM PS-1225L)	1
• Power cord set for AC adaptor	1
• USB cable	1
• Shoulder strap	1
• Warranty card	1
• Owner's manual (this document)	1

Conventions used in this manual

The following conventions are used in this manual.

- “SD memory card” is sometimes abbreviated as “SD card.”
- When we refer to a key or connector or control on the DR-680, the typeface looks like this: **MENU**.
- When we show messages, for example, that appear on the screen, the typeface looks like this: **BROWSE**.

1 – Introduction

- Additional information is introduced in the styles below when needed:

TIP

We give hints and tips on using the DR-680 when you see this icon.

NOTE

A note provides additional explanations for special situations.

CAUTION

A caution shows that you may lose data (recordings) if you do not follow the instructions.

Any data, including, but not limited to information, described herein are intended only as illustrations of such data and/or information and not as the specifications for such data and/or information. TEAC Corporation disclaims any warranty that any use of such data and/or information shall be free from infringement of any third party's intellectual property rights or other proprietary rights, and further, assumes no liability of whatsoever nature in the event of any such infringement, or arising from or connected with or related to the use of such data and/or information.

Intellectual property rights

- TASCAM is a trademark of TEAC Corporation, registered in the U.S. and other countries.
- SDHC Logo is a trademark of SD-3C, LLC.



- Microsoft, Windows, Windows XP, Windows Vista, and Windows 7 are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple, Macintosh, iMac, Mac OS and Mac OS X are trademarks of Apple Inc.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson.

Supply of this product does not convey a license nor imply any right to distribute MPEG Layer-3 compliant content created with this product in revenue-generating broadcast systems (terrestrial, satellite, cable and/or other distribution channels), streaming applications (via Internet, intranets and/or other networks), other content distribution systems (pay-audio or audio-on-demand applications and the like) or on physical media (compact discs, digital versatile discs, semiconductor chips, hard drives, memory cards and the like). An independent license for such use is required. For details, please visit <http://mp3licensing.com>.

- Other company names, product names and logos in this document are the trademarks or registered trademarks of their respective owners.

This product is designed to help you record and reproduce sound works to which you own the copyright, or where you have obtained permission from the copyright holder or the rightful licensor. Unless you own the copyright, or have obtained the appropriate permission from the copyright holder or the rightful licensor, your unauthorized recording, reproduction or distribution thereof may result in severe criminal penalties under copyright laws and international copyright treaties. If you are uncertain about your rights, contact your legal advisor. Under no circumstances will TEAC Corporation be responsible for the consequences of any illegal copying performed using the recorder.

About SD cards

This unit uses SD cards for recording and playback.

A list of SD cards that have been tested with this unit can be found on the TASCAM web site (www.tascam.com).

Use of cards that have not been verified for use with this unit could result in the unit not functioning properly.

Precautions for use

SD cards are delicate media. In order to avoid damaging a card or the card slot, please take the following precautions when handling them.

- Do not leave in extremely hot or cold places.
- Do not leave them in extremely humid places.
- Do not let them get wet.
- Do not put things on top of them or twist them.
- Do not hit them.

Precautions for placement and use

- The operating temperature should be between 0°C and 40°C (32°F and 104°F).
- Do not install in the following types of places. Doing so could degrade the sound quality and/or cause malfunctions.
 - Places with significant vibrations or that are otherwise unstable
 - Near windows or other places exposed to direct sunlight
 - Near heaters or other extremely hot places
 - Extremely cold places
 - Places with bad ventilation or high humidity
 - Very dusty locations
- Avoid installing this unit on top of any heat-generating electrical device such as a power amplifier.
- Hum might occur if a powered amplifier or other device with a large transformer is used near this unit. If this should happen, try increasing the distance between this unit and that device and changing their orientations.
- Uneven colors might appear on televisions and noise might be heard from radios that are used near this unit. If this should happen, use the unit further from the affected device.

- Noise might be heard from this unit if a mobile telephone or other wireless device is used nearby during calls and when data is transmitted and received. If this should happen, use that device farther from the unit or turn its power off.

Beware of condensation


If the unit is moved from a cold to a warm place, or used after a sudden temperature change, there is a danger of condensation; vapor in the air could condense on the internal mechanism, making correct operation impossible. To prevent this, or if this occurs, let the unit sit for one or two hours at the new room temperature before using.

Cleaning the unit

Use a dry soft cloth to wipe the unit clean. Do not clean the unit with a chemically treated cloth or substances such as benzene, thinner and alcohol because they might cause damage to the surface of the unit.

2 – Names and Functions of Parts

Top panel

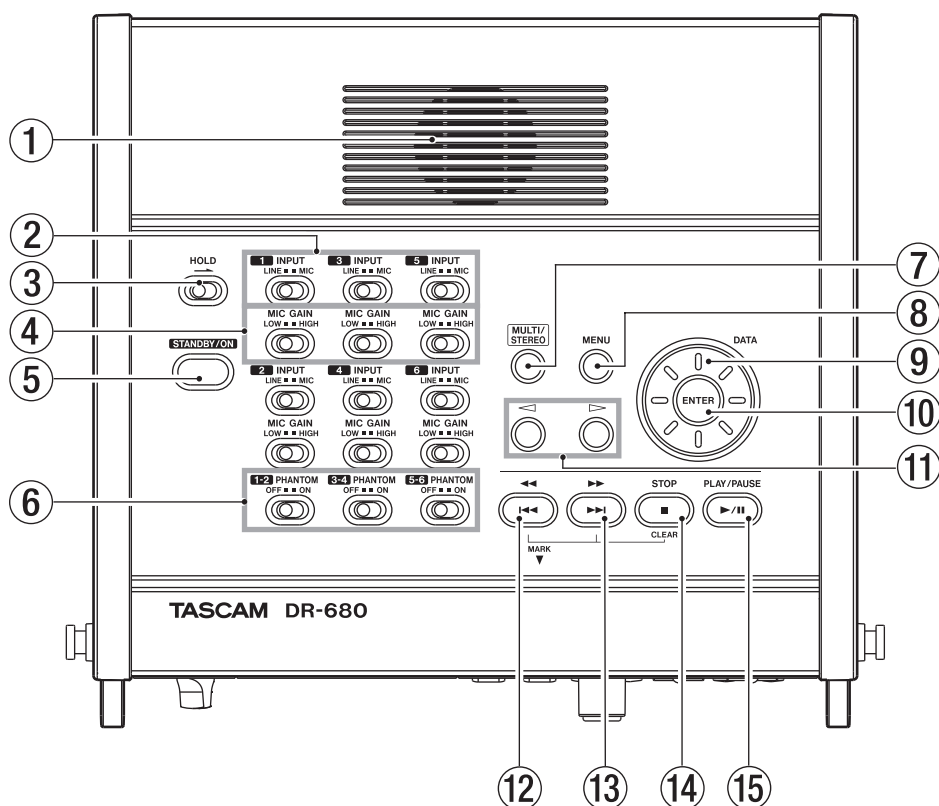

① Built-in monaural speaker

Use this built-in speaker for monitoring. Use the **PHONES** knob to adjust the volume. When headphones are connected, no sound is output from this speaker.

② INPUT switches

Use these to set the inputs to **LINE** or **MIC**.

③ HOLD switch

Slide this in the direction of the arrow to disable the **STANDBY/ON** button to prevent the power from accidentally being cut.

④ MIC GAIN switches

Use these to adjust the gain of the mic inputs.

⑤ STANDBY/ON button

Press this to switch the unit power between **ON** and **STANDBY**.

⑥ PHANTOM switches

Use these to turn phantom power **ON** or **OFF** for input pairs 1/2, 3/4 and 5/6.

⑦ MULTI/STEREO

Press to select whether the stereo track or the multi-track (6-track) is played back.

⑧ MENU key

Press this key when the Home Screen is open to open the **MENU** screen.

Press this key when the **MENU** screen is open to return to the previous menu level.

⑨ DATA wheel

Use this to select items and change values on various settings screens.

When the Home Screen is open, use the **DATA** wheel to move the playback position in the take.

⑩ ENTER key

Use this to confirm selections, advance to the next level in a menu and respond “YES” to confirmation pop-up messages on various settings screens.

2 – Names and Functions of Parts

⑪ ◀/▶ (cursor) keys

Use these on various settings screens to move the cursor left and right.

On the **BROWSE** screen, use these to move up and down levels.

Use ◀ key to respond “NO” to confirmation pop-up messages on various settings screens or to cancel the current operation.

⑫ ⏮/⏪ key

Press this key during playback or when stopped in the middle of a take to return to the beginning of the current take.

Press when stopped at the beginning of the take to skip to the beginning of the previous take.

Press and hold to search backwards.

Press this key while pressing the **MARK** key on the front panel to move to the previous mark.

⑬ ⏭/⏩ key

Press this key during playback or when stopped to skip to the beginning of the next take.

Press and hold to search forward.

Press this key while pressing the **MARK** key on the front panel to move to the next mark.

⑭ STOP (CLEAR) key

Press to stop recording and playback and locate the transport to the beginning of the current take.

Press to end recording standby.


Press this key while pressing the **MARK** key on the front panel to erase the current mark.

⑮ PLAY/PAUSE key

Press when stopped or paused to start playback.

Press during playback to pause at that position.

Front panel

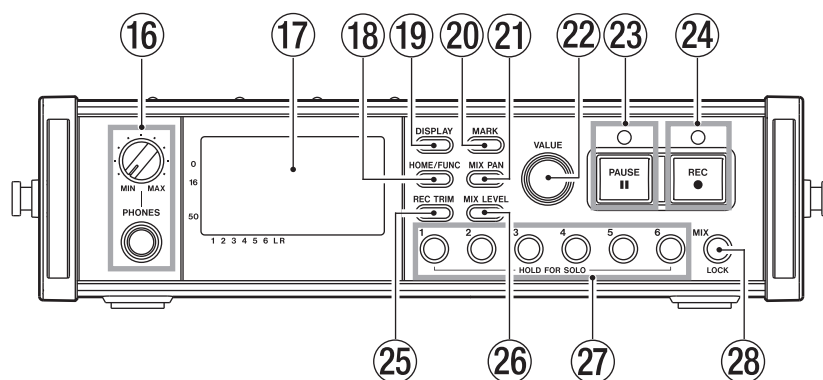

⑯ PHONES jack and knob

Use this standard stereo phone jack to connect headphones. Use the **PHONES** knob to adjust the headphones and speaker output level.

⑰ Display

This shows a variety of information related to the operation of the unit.

⑱ HOME/FUNC key

Press when any screen other than the Home Screen is open to return to the Home Screen.

Press when the Home Screen is open to open the Functions Screen.

When the Home Screen is open, press and hold this button to open the **MENU** screen.

⑲ DISPLAY key

Press to switch the counter display mode.

Turn the **VALUE** knob on the front panel while pressing this key to adjust the display contrast.

⑳ MARK key

Press during playback or recording to add a mark at that time.

Press the ⏮/⏪ key on the top panel while pressing this key to move to the previous mark.

Press the ⏭/⏩ key on the top panel while pressing this key to move to the next mark.

Press the **STOP** key on the top panel while pressing this key to erase the current mark.

2 – Names and Functions of Parts

②① MIX PAN key

Press to open the PAN settings screen. Press when the PAN settings screen is open to close it and return to the Home Screen.

②② VALUE knob

Use this to change the value of the selected item on the TRIM, LEVEL and PAN settings screens.

On the Functions Screen, use this to select function items, and press the knob to turn each function item ON or OFF.

Turn this knob while pressing the **DISPLAY** key on the front panel to adjust the display contrast.

When the MENU screen is open, this dial can be used for the same functions as the **DATA** wheel and pressing this dial has the same function as the **ENTER** key.

②③ PAUSE key and indicator

Press when stopped or recording to start recording standby. The indicator lights when in recording standby.

Press when in recording standby to stop recording standby.

On the Functions Screen, press to turn the selected function ON or OFF for that track.

Press and hold to enable/disable solo monitoring of that track.

②⑧ MIX (LOCK) key

When the LEVEL screen is open, this selects the stereo track as the track to be controlled. Press and hold this key to engage or disengage the lock function, which disables the use of other keys.

NOTE

The PAUSE key on the front panel functions only when recording. Use the PLAY/PAUSE key on the top of the unit to pause playback.

②④ REC key and indicator

Press when stopped or in recording standby to start recording. The indicator lights when recording or in recording standby.

Press this key when recording to end the current take and continue recording a new take without pause.

②⑤ REC TRIM key

Press to open the input TRIM settings screen.

When the input TRIM settings screen is open, press to close it and open the Home Screen.

②⑥ MIX LEVEL key

Press to open the LEVEL settings screen.


Press when the LEVEL settings screen is open to close it and return to the Home Screen.

②⑦ 1–6 keys

Use these to select tracks on the TRIM, LEVEL and PAN settings screens.

Press when in recording standby to arm/disarm that track for recording.

Left side panel

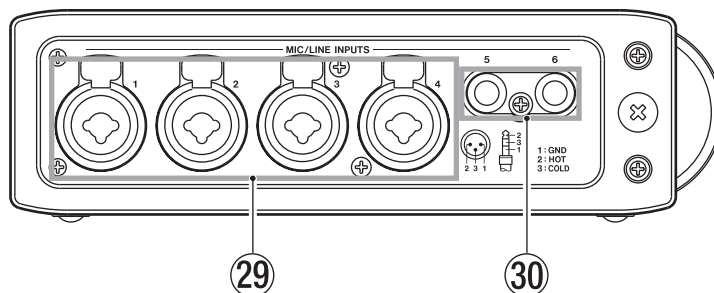

29 MIC/LINE INPUTS (XLR/TRS) jacks

These are balanced analog XLR/TRS combo jacks for microphone and line level inputs (1: GND 2: HOT 3: COLD, Tip: HOT Ring: COLD Sleeve: GND).

30 MIC/LINE INPUTS (TRS) jacks


These are balanced analog TRS jacks for microphone and line level inputs (Tip: HOT Ring: COLD Sleeve: GND).

CAUTION

- Confirm that phantom power is OFF before connecting a line level device to a MIC/LINE INPUTS jack. If you connect a line level device while phantom power is being supplied, that device and this unit could be damaged.
- When using a condenser microphone, before connecting to and disconnecting from a MIC/LINE INPUTS jack, confirm that the phantom power for that jack is OFF. If you connect or disconnect a mic while phantom power is being supplied, that mic and this unit could be damaged.
- Do not connect an unbalanced dynamic mic to an XLR connector when phantom power is being supplied. Doing so could damage that mic and this unit.

2 – Names and Functions of Parts

Right side panel

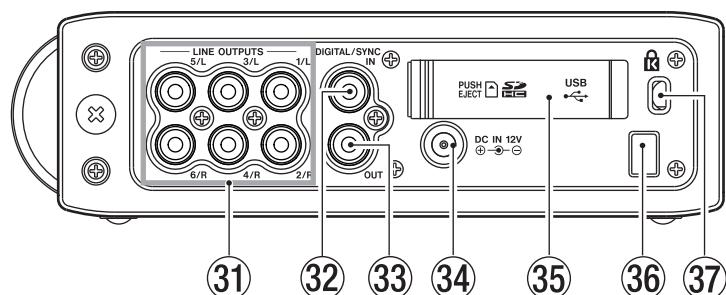

③① LINE OUTPUTS jacks

These RCA pin jacks are unbalanced analog output jacks. During the playback of multitrack files, the sound previously recorded on each track is output from these jacks.

During recording, the sound recorded to each track is output from these jacks.

During the playback of the multi-track, according to the unit setting, the stereo signal mixed by the internal mixer can be output from output jacks 1/2, 3/4 or 5/6.

During the playback of a stereo track, the sound of the stereo track is output through output jacks 1 and 2.

③② DIGITAL/SYNC IN jack

This is a digital input jack. The signal input through this jack can be recorded to tracks 5 and 6 or the stereo track. The unit automatically determines whether the input signal is S/PDIF (IEC60958-3) or AES3-2003/IEC60958-4 (AES/EBU), which are both supported.

Transmission occurs at double speed when the sampling frequency is 96 kHz and at quad speed when 192 kHz.

When linking two of these units using the cascade function, connect the **DIGITAL/SYNC OUT** jack of the other DR-680 to this jack.

③③ DIGITAL/SYNC OUT jack

The stereo signal mixed by the internal mixer is output from this jack.

According to the unit setting, the signal is output in S/PDIF (IEC60958-3) or AES3-2003/IEC60958-4 (AES/EBU) format.

Transmission occurs at double speed when the sampling frequency is 96 kHz and at quad speed when 192 kHz.

When linking two of these units using the cascade function, connect the **DIGITAL/SYNC IN** jack of the other DR-680 to this jack.

③④ DC IN 12V jack


Connect the included AC adaptor (PS-1225L), which matches the power specifications of this unit.

③⑤ SD card slot/USB port cover

③⑥ Cord holder

Secure the cord of the included AC adaptor (PS-1225L) with this holder to prevent the plug from being disconnected accidentally.

③⑦ Kensington security slot

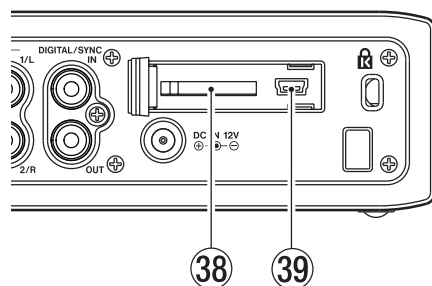

③⑧ SD card slot


Insert SD cards here.

③⑨ USB port

Connect this unit with a computer using a USB2.0 cable. The computer will recognize this unit as a mass storage device. No driver software is necessary.

Audio files can be transferred between an SD card in this unit and a computer by the USB connection.

Bottom panel

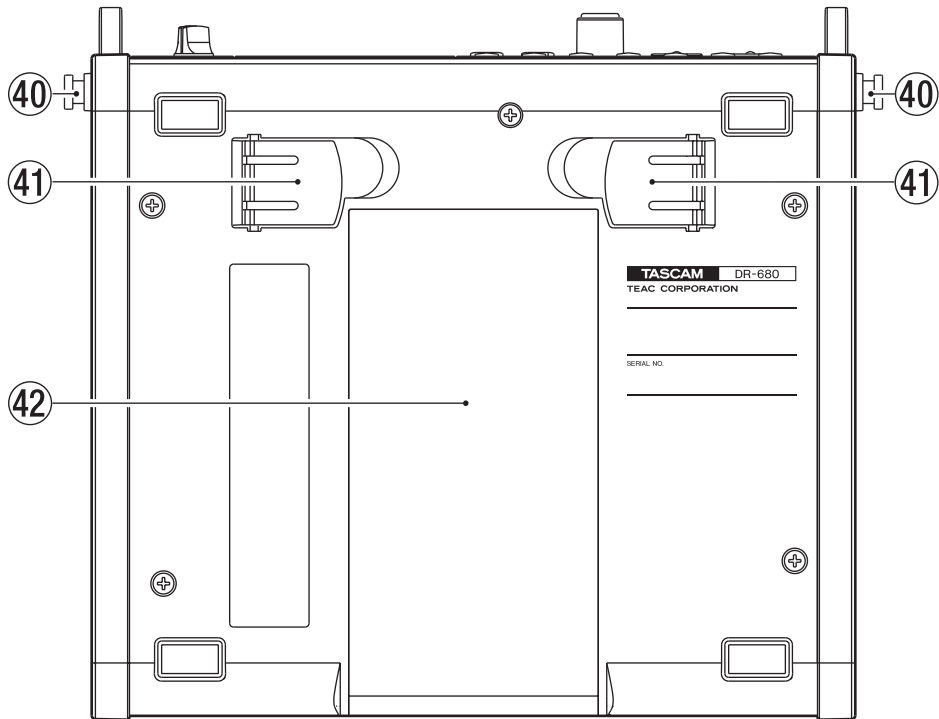


④① Hook for the shoulder strap

Attach the included shoulder strap here.

④② Stand

Use this stand to raise the front of the unit when operating it on a flat surface.

④③ Battery compartment cover

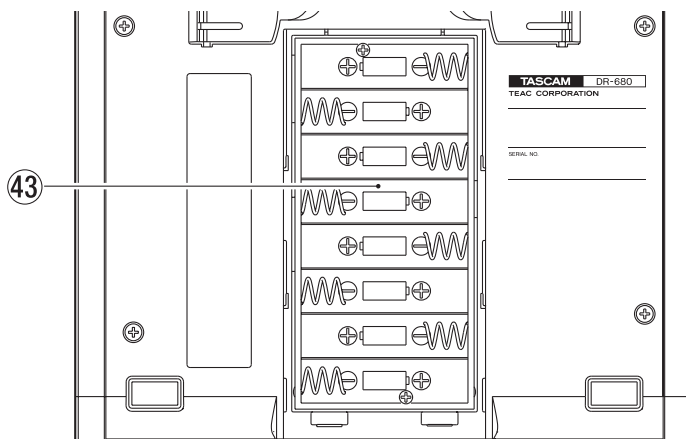


④④ Battery compartment

Install batteries (8 AA) for powering the unit in this compartment. (See “Using AA batteries” on page 20.)

2 – Names and Functions of Parts

Home Screen

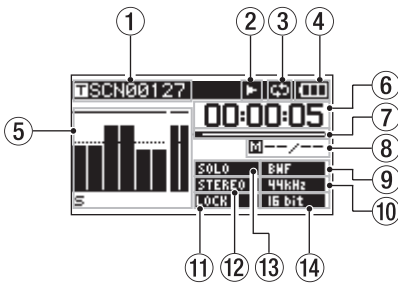

NOTE

Even before the batteries lose their charge, a “Battery Low” warning pop-up message might appear if you try to start recording or conduct another operation that requires considerable power.

⑤ Level meters

These show the levels of tracks 1–6 and the stereo track.


When recording, if stereo track recording is ON and the stereo track recording source is set to DIGITAL IN, the stereo track meters become the DIGITAL IN input level meters.

During playback of a multitrack file, the playback levels of each track are shown.

When recording, the recording levels of each track are shown.

When recording, if a signal is distorted at the input stage, the area beneath its meter is highlighted.

If a recording level exceeds 2.0 dB below the maximum level, a mark appears at the top of its meter, indicating an overload.

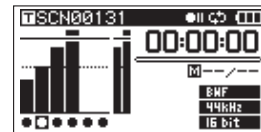

Ch2: Signal is distorted at the input stage

Ch4: Recording level exceeds 2.0dB less than the maximum level.

During stereo track playback, the meters for tracks 1 and 2 function as the L and R meters.

When a track is armed for recording, “●” appears beneath its meter.

When a track is soloed, “S” appears beneath its meter.

NOTE

If a track is both armed for recording and soloed, only “S” appears beneath its meter.

⑥ Time (hours: minutes: seconds)

During playback, the elapsed playback time of the take is shown.

Press the **DISPLAY** key on the front panel to show the remaining time of the take as a negative number.

When recording, the elapsed recording time of the take is shown.

① Take name

When stopped or during playback, the name of the currently loaded take is shown.

When recording or in recording standby, the name of the take being recorded is shown.


Up to 11 characters are shown. Longer names are scrolled.

② Recorder operation status

The operation status of the recorder is shown with one of the following icons.




- : Stopped
- ▶ : Playing back
- ⏸ : Paused
- ⏭ : Searching forward
- ⏮ : Searching backwards
- : Recording
- : Recording standby
- ⏭ : Skip forward
- ⏮ : Skip backward


③ Repeat icon

When the repeat function is ON, the repeat icon  appears.

④ Power supply status

When operating on battery power, a battery icon appears.

Depending on the amount of remaining battery power, a number of bars appear (, , or ).

When the battery charge is very low, the last bar disappears, the  icon blinks, and the unit's power will soon change to standby.

When using the included AC adaptor (PS-1225L), the  icon appears.

2 – Names and Functions of Parts

Press the **DISPLAY** key on the front panel to show the remaining available recording time for the take.

⑦ Playback position

This bar shows the current playback position during playback or the amount of remaining time available for recording during recording. As recording or playback progresses, the bar darkens from the left.

⑧ Mark information

The mark number and the total number of marks in the current take are shown.

During playback, the number of the mark that is before and closest to the current position is shown.

When recording, the last added mark number is shown.

⑨ File type indicator

When stopped or during playback, the file type of the currently loaded take is shown.

When recording or in recording standby, the file type of the take being recorded is shown.

BWF : BWF

WAV : WAV

MP3 : MP3

⑩ Sampling frequency indicator

When stopped or during playback, the sampling frequency of the currently loaded take is shown.

When recording or in recording standby, the sampling frequency of the take being recorded is shown.

44kHz : 44.1 kHz

48kHz : 48 kHz

96kHz : 96 kHz

192kHz : 192 kHz

⑪ LOCK indicator

When the lock function for the front panel and/or top panel keys is ON, the **LOCK** indicator appears.

⑫ STEREO indicator

When a stereo track is being played, the **STEREO** indicator appears. During stereo track playback, the meters for tracks 1 and 2 function as the L and R meters.

⑬ SOLO indicator

When a track has been soloed, the **SOLO** indicator appears. An **S** icon appears beneath the meter of the currently soloed track.

⑭ Quantization/bit-rate indicator

When stopped or during playback, the quantization/bit-rate of the currently loaded take is shown.

When recording or in recording standby, the quantization/bit-rate of the take being recorded is shown.

When the take being recorded or played is an MP3, its bit rate is shown.

BWF/WAV

16bit : 16-bit

24bit : 24-bit

MP3

96Kbps : 96 kbps (48 kbps)

128Kbps : 128 kbps (64 kbps)

192Kbps : 192 kbps (96 kbps)

320Kbps : 320 kbps (160 kbps)

NOTE

The bit rate in parentheses is for when recording a monaural take.

Menu structure

Press the **MENU** key on the top panel to open the MENU screen. The menu items are as follows.

NOTE

This screen cannot be accessed during recording or when in recording standby.


Menu item	Contents	Pages
BROWSE	Work with takes and folders	37
REC	Make recording settings	24
AUTO REC	Make auto-recording settings	31
LOW CUT	Make low cut filter settings	33
I/O	Make input and output settings	27, 47
PLAY	Make playback settings	41
CARD	Manage the SD card	49
SYSTEM	Make system settings	47
DATE/TIME	Set the date and time	22

2 – Names and Functions of Parts


Using menus

In this example, we show how to change the sampling frequency.


- 1 Press the **MENU** key on the top panel or press and hold the **HOME/FUNC** key on the front panel to open the **MENU** screen.

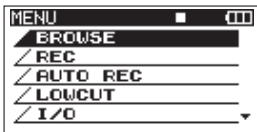


- 2 Use the **DATA** wheel to select the desired menu item, and press the **ENTER** key to open the menu item screen.

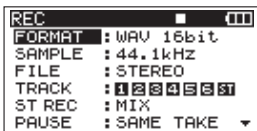

- 3 Use the **DATA** wheel to select the desired item.

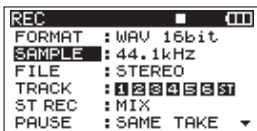

- 4 Press the **▷** key or **ENTER** key to move the cursor to the setting value.

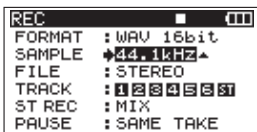

- 5 Use the **DATA** wheel to change the setting.
- 6 If you want to set another item within the same menu, press the **◀** key to return to the selection of setting items, and use the **DATA** wheel to select the next item that you want to set.
- 7 Repeat steps 4–6 as necessary to set other items.
- 8 Press the **MENU** key to go back one level in the menu.

Press the **HOME/FUNC** key to return to the Home Screen.

Operation basics

Use the following controls to operate the various settings screens.

MENU key

Press to open the **MENU** screen when it is not already open.

When the **MENU** screen is open, press the **MENU** key to go back one level in the menu.

You can also press and hold the **HOME/FUNC** key to open the **MENU** screen.

DATA wheel

Use to select items and to change values.

You can also use the **VALUE** dial instead for the same functions.

ENTER key

Press to confirm the selection of a setting item, and to select “YES” on a confirmation pop-up message.

You can also press the **VALUE** dial instead for the same function.

▷ key

Press to move the cursor right in a settings screen and to open a folder on the **BROWSE** screen.

◀ key

Press to move the cursor left in a settings screen and to close a folder on the **BROWSE** screen.

Press to select “NO” on a confirmation pop-up message.

HOME/FUNC key

When a settings screen is open, press the **HOME/FUNC** key to return to the Home Screen.

Functions Screen

When the Home Screen is open, press the **HOME/FUNC** key to open the Functions Screen.



On the Functions Screen, you can view and activate the following items.

- Repeat
- Pre-record
- Auto-record
- DIN/MIX monitor
- Limiter

Low-cut filter

- 1 When the Home Screen is open, press the HOME/FUNC key to open the Functions Screen.
- 2 Use the VALUE knob to move the cursor to select the item to set.
- 3 Press the VALUE knob.
When selecting LIMITER or LOW CUT, press the VALUE knob or 1-6 keys.
- 4 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.

Repeat activation

Use the REPEAT item to turn loop playback ON or OFF. The default value is OFF.

REPEAT : Repeat playback ON
REPEAT : Repeat playback OFF

Pre-record activation

Use the PRE.REC item to turn the pre-record function ON or OFF. The default value is OFF.

PRE.REC : Pre-record ON
PRE.REC : Pre-record OFF

Auto-record activation

Use the A.REC item to turn the auto-record function ON or OFF. The default value is OFF.

A.REC : Auto-record function ON
A.REC : Auto-record function OFF

DIN/MIX monitor settings

When the ST REC item on the REC screen is set to DIN, the signal to be monitored can be selected. Press the VALUE dial to select DIN MON or MIX MON.

The default value is MIX MON.

MIX MON : Set to monitor the stereo mix
DIN MON : Set to monitor the digital input

NOTE

When the ST REC item on the REC screen is set to MIX, this setting is fixed to MIX MON, and it cannot be changed to DIN MON.

Limiter activation

Use the LIMITER item to turn the limiter function ON or OFF for each input independently.

The limiter for an input is ON when its number appears light on a dark background. The default value is OFF for all inputs.

Press the VALUE knob to turn the limiter ON or OFF for all inputs at the same time.

Press the 1–6 keys to turn the limiter ON or OFF for each input independently.

If the limiter has been turned ON for one or more inputs, the LIMITER indicator appears with a dark background.

LIMITER ▶ 123456 : Limiter ON for all inputs
LIMITER ▶ 123456 : Limiter ON for input 1
LIMITER ▶ 123456 : Limiter OFF for all inputs

Low-cut filter activation

Use the LOW CUT item to turn the low-cut filter function ON or OFF for each input independently.

The low-cut filter for an input is ON when its number appears light on a dark background. The default value is OFF for all inputs.

Press the VALUE knob to turn the low-cut filter ON or OFF for all inputs at the same time.

Press the 1–6 keys to turn the low-cut filter ON or OFF for each input independently.

If the low-cut filter has been turned ON for one or more inputs, the LOW CUT indicator appears with a dark background.

LOW CUT ▶ 123456 : Low-cut filter ON for all inputs
LOW CUT ▶ 123456 : Low-cut filter function ON for input 1
LOW CUT ▶ 123456 : Low-cut filter OFF for all inputs

NOTE

You can set the cut-off frequency with the FREQUENCY item of the LOW CUT menu. (See "Using the low-cut filter" on page 33.)

3 – Preparations

Powering the unit


About the power supply

This unit can be powered by 8 AA batteries or the included PS-1225L AC adaptor, which matches the power specifications of this unit.

This unit can use alkaline or nickel-metal hydride AA batteries.

Using AA batteries

Slide off the battery compartment cover on the bottom panel of this unit, insert 8 AA batteries into the battery compartment according to the +/– indications, and close the compartment cover again.

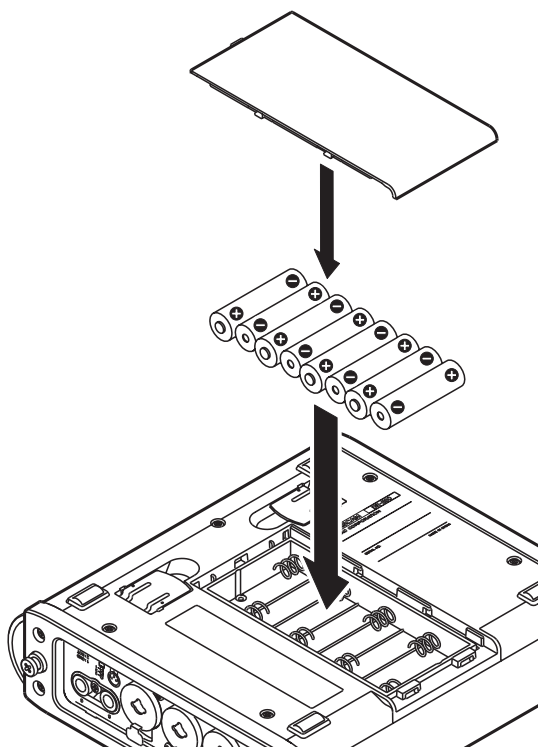

When using AA batteries, set the battery type so that the unit can accurately display the remaining battery charge and determine the necessary minimum remaining charge for operation. (See “Setting the battery type” on page 48.)

CAUTION


- Manganese AA batteries cannot be used.
- This unit cannot recharge AA nickel-metal hydride (NiMH) batteries. Use a commercially-available battery recharger to recharge NiMH batteries.

NOTE


A great amount of power is required to provide phantom power to a condenser microphone. If you use a condenser microphone while running the unit on AA batteries (NiMH rechargeable or alkaline), the operation time will be greatly shortened. If you need to operate the unit for a long time, use the AC adaptor.

Using the AC adaptor

As shown in the figure, connect the included PS-1225L AC adaptor, which conforms to the specifications of this unit, to the **DC IN 12V** jack.

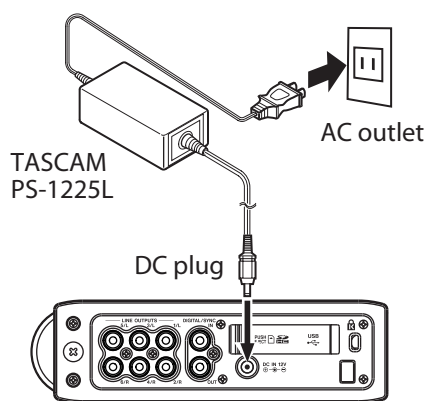

A hook (cord holder) to fix the cord of the AC adaptor is on the right side panel. Wrap the cord around the hook when connecting it to prevent it from being disconnected during use.

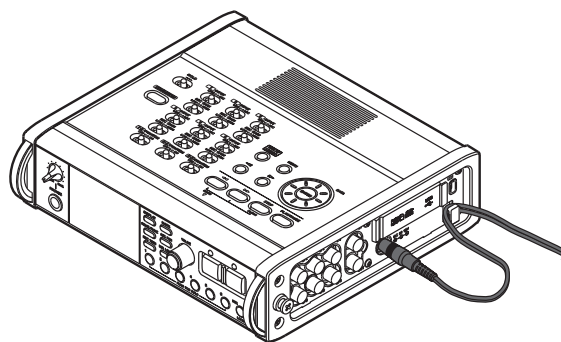

CAUTION

Use only the included PS-1225L AC adaptor, which conforms to the specifications of this unit. Use of an adaptor other than this model could cause malfunction, fire or electric shock.


NOTE

If power is available from both batteries and the AC adaptor, the power is supplied by the AC adaptor.

Turning the power on and putting the unit into standby

Turning the power on

When the power is in standby, press and hold the **STANDBY/ON** key until the startup screen with TASCAM DR-680 appears. The unit starts up and the Home Screen opens.

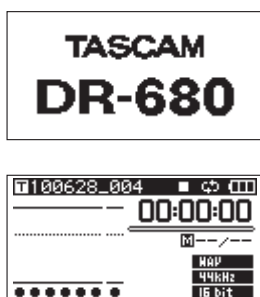

CAUTION

Do not remove or insert an SD card until the Home Screen appears.

Putting the unit into standby

When the power is ON, press and hold the **STANDBY/ON** key until the following shutdown screen appears.



After the unit completes shutting down, the unit's power is set to standby.

CAUTION

Always use the **STANDBY/ON** key to put the unit power into standby. When the power is ON, if you remove the batteries or disconnect the power cord when using the PS-1225L AC adaptor, all recording data and settings, for example, are lost and such data cannot be recovered.


Inserting and removing SD cards

This unit can use SD cards with capacities of 2 GB or more that are compliant with the standards for Class 4 (or faster) SD/SDHC cards.

A list of SD/SDHC cards that have been verified for use with this unit can be found on the TASCAM website (<http://www.tascam.com/>).

Inserting an SD card

- 1 Open the SD card slot cover on the right side panel of the unit.
- 2 Insert the SD card in the direction shown in the illustration until it clicks into place.

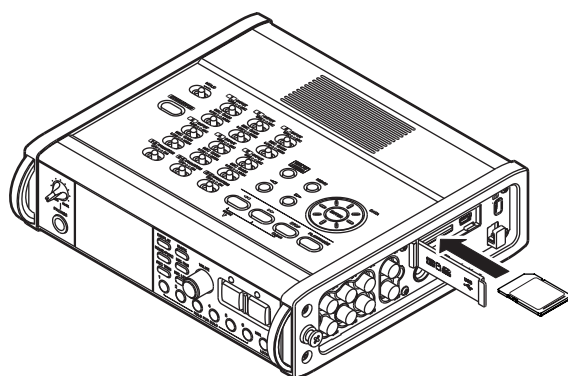


CAUTION

Do not remove an SD card while it is in use (being read).

Ejecting an SD card

- 1 Open the SD card slot cover.
- 2 Push the SD card gently, and it will come out of the unit slightly and can be pulled out.

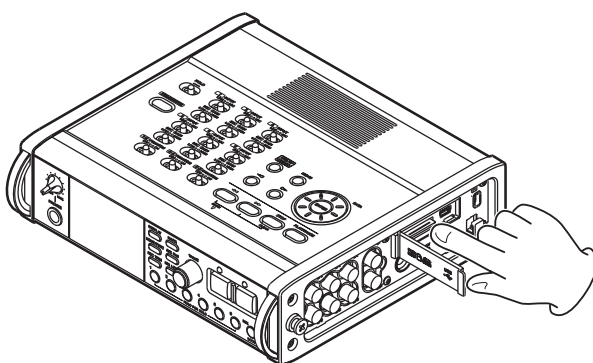

CAUTION

When connected with a computer by USB do not remove the SD card from the unit.

3 – Preparations


Preparing an SD card for use

An SD card must be formatted by this unit to be used with the unit.

CAUTION

- Formatting erases all data on the card.
- When formatting, use the included AC adaptor (PS-1225L) or confirm that the remaining battery charge is sufficient.

- 1 Confirm that the SD card is inserted and turn the power ON.
- 2 If a new card or a card that has been formatted by a device other than this unit has been inserted, the following pop-up message appears.

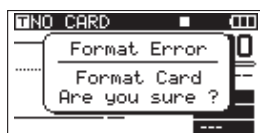


- 3 Press the ENTER key to start formatting.
- 4 When formatting is complete, the Home Screen opens.

You can reformat a card at any time with this unit. (See “Reformatting SD cards” on page 49.)

Card write-protection

SD cards have lock (write-protection) switches.

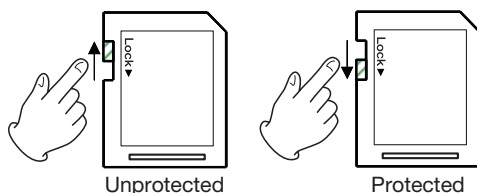


Slide the switch in the direction of the Lock arrow to prevent the recording and editing of files on the card. To record, erase or otherwise change files on a card, disable the write-protection.


Setting the date and time

This unit adds date and time information to recorded files using its internal clock.

- 1 Press the MENU key to open the MENU screen.

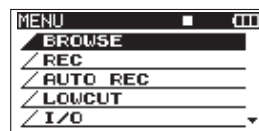

- 2 Use the DATA wheel to select the DATE/TIME menu item.

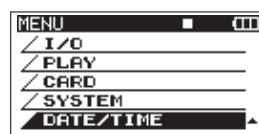

- 3 Press the ENTER key to open the DATE/TIME screen.



- 4 Use the </> keys to move the cursor and use the DATA wheel to change the values.
- 5 Press the ENTER key to confirm and return to the MENU screen.
- 6 Press the MENU or HOME/FUNC key to return to the Home Screen.

NOTE

You can add the date and time set here to the take name. (See “Setting the name given to recording takes” on page 26.)

Monitoring playback with the built-in speaker

To monitor playback using the built-in speaker, adjust the volume using the PHONES knob.

CAUTION


Before using the built-in speaker, turn the PHONES knob to the minimum volume. Failure to do so could cause sudden loud noises to occur, which might damage your hearing or equipment.

NOTE

When headphones are connected, no sound is output from the speaker.

Connecting monitoring equipment


To monitor with headphones, connect them to the **PHONES** jack. Use the **PHONES** knob to adjust the headphones volume.

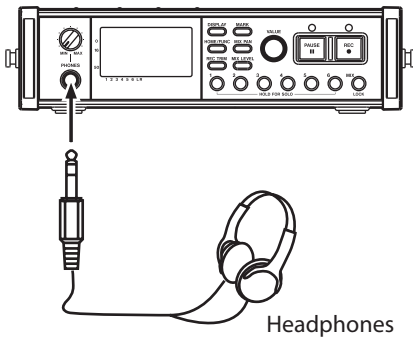

CAUTION

Before connecting headphones, turn the **PHONES** knob to the minimum volume. Failure to do so could cause sudden loud noises to occur, which might damage your hearing or equipment.

To monitor with an external monitoring system (powered monitor speakers or an amplifier and speakers), connect it to the **LINE OUTPUTS** jack.

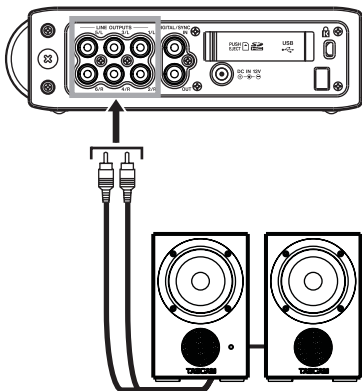


Powered monitor speakers
or amplifier and speakers

CAUTION

Before using an external monitoring system, turn the volume to minimum. Failure to do so could cause sudden loud noises to occur, which might damage your hearing or equipment.

Adjusting the display contrast

Turn the **VALUE** knob while pressing and holding the **DISPLAY** key to adjust the display contrast.

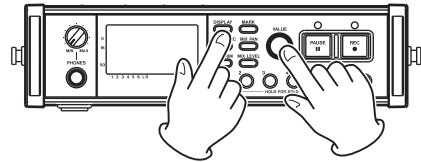

4 – Recording

This unit can record in the following formats.

- WAV/BWF (16/24-bit, 44.1/48/96 kHz)
6 tracks and a stereo mix
- WAV/BWF (16/24-bit, 192 kHz)
2 tracks
- MP3 (96/128/192/320 kbps, 44.1/48 kHz)
4 tracks
2 tracks and a stereo mix

Files and takes

With this unit, a group of audio files that are recorded at the same time are collectively called a “take.”

Depending on the file recording mode setting, the files included in the recorded take will be as follows.

Example 1: 6 tracks and a stereo track recorded

- MONO format set: 6 mono WAV files and a stereo WAV file
- STEREO format set: 3 stereo WAV files of inputs pairs 1-2, 3-4 and 5-6 and a stereo WAV file of the mix
- 6ch format set: a 6-channel WAV file and a stereo WAV file

Example 2: 4-track recording in MP3 format

- MONO format set: 4 mono MP3 files
- STEREO format set: 2 stereo MP3 files

An SD card in this unit can have up to 5000 files and folders and 1000 takes.

When using a folder that contains a large number of files, starting recording can take time and the beginnings of recordings might be cut off. To prevent this, use a folder that contains as few takes as possible or put the unit in recording standby before recording. Moreover, if a folder contains a large number of files, the same issues can occur when starting a new take while continuing to record. This occurs when you press the **REC** key during recording and automatically if the maximum file size is exceeded. For details, see “Starting a new take and continuing to record” on page 32.

NOTE

- You should use a folder that contains as few takes as possible when creating new takes while recording or when expecting to do so.
- The maximum number of takes in a folder is about 100.

Recording settings


Setting the recording file format

You can set the recording file format (BWF/WAV/MP3) and bit depth (BWF/WAV) or bit rate (MP3).

NOTE

- WAV format recordings have a higher audio quality than MP3 format recordings.
- BWF, which is the broadcast wave format, has the same sound quality as the standard wave (WAV) format.
- MP3 format allows greater recording time than WAV format.
- With MP3 formats, higher bit rates record with better audio quality.
- For information about recording times, see “Recording times” on page 36.
- When the file format is set to MP3, the maximum number of tracks is limited to 4 (4 mono, 2 stereo, or 2 mono and 1 stereo).

- 1 Press the **MENU** key to open the **MENU** screen.
- 2 Use the **DATA** wheel to select the **REC** menu item, and press the **ENTER** key to open the **REC** screen.

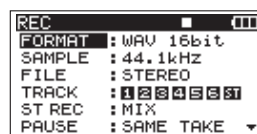

- 3 Use the **DATA** wheel to select the **FORMAT** item, and press the **▷** key.



- 4 Use the **DATA** wheel to select one of the following options:

BWF-16bit,
BWF-24bit,
WAV-16bit (default value),
WAV-24bit,
MP3-96kbps,
MP3-128kbps,
MP3-192kbps, or
MP3-320kbps.

- 5 Press the **◀** key to return to the selection of items on the **REC** screen.

- 6 Press the MENU key to return to the MENU screen. Press the HOME/FUNC key to return to the Home Screen.

Setting the sampling frequency

You can set the sampling frequency and record BWF and WAV files at 44.1, 48, 96 or 192 kHz.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the REC menu item, and press the ENTER key to open the REC screen.
- 3 Use the DATA wheel to select the SAMPLE item, and press the \triangleright key or ENTER key.



- 4 Use the DATA wheel to select one of the following options: 44.1kHz (default value), 48kHz, 96kHz, or 192kHz.

NOTE

When the file format is MP3, 96 kHz and 192 kHz cannot be selected.

- 5 Press the \triangleleft key to return to the selection of items on the REC screen.
- 6 Press the MENU key to return to the MENU screen. Press the HOME/FUNC key to return to the Home Screen.

Setting the file recording mode

The file recording mode can be set to a monaural file, a stereo file or a 6-channel file.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the REC menu item, and press the ENTER key to open the REC screen.
- 3 Use the DATA wheel to select the FILE item, and press the \triangleright key or ENTER key.



- 4 Use the DATA wheel to select one of the following options: MONO, STEREO (default value), or 6ch.


NOTE

- When set to MONO, a mono file is created for each recorded track. When set to STEREO, a stereo file is created for each pair of tracks (1-2, 3-4 and 5-6). When set to 6ch, one 6-channel file is created for tracks 1-6.
 - 6ch cannot be selected when the file format is set to MP3 or the sampling frequency is set to 192 kHz.
- 5 Press the \triangleleft key to return to the selection of items on the REC screen.
 - 6 Press the MENU key to return to the MENU screen. Press the HOME/FUNC key to return to the Home Screen.

Stereo track recording settings

You can set what is recorded on the stereo track.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the REC menu item, and press the ENTER key to open the REC screen.
- 3 Use the DATA wheel to select the ST REC item, and press the \triangleright key or ENTER key.

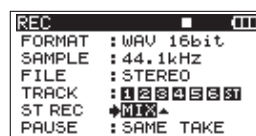

- 4 Use the DATA wheel to select one of the following options.

MIX (default): Record a mix of the 6 inputs on the stereo track.

DIN : Record the signal from the DIGITAL/ SYNC IN input jack on the stereo track.

- 5 Press the \triangleleft key to return to the selection of items on the REC screen.
- 6 Press the MENU key to return to the MENU screen. Press the HOME/FUNC key to return to the Home Screen.


Arming and disarming tracks for recording

Tracks can be armed and disarmed for recording from the MENU screen.


1. Press the MENU key on the top panel to open the MENU screen.

4 – Recording

2. Use the DATA wheel on the top panel to select (highlight) the REC menu item and press the ENTER key on the top panel to open the REC screen.
3. Use the DATA wheel to select (highlight) the TRACK item.

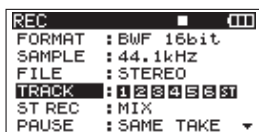


4. Use the 1-6 keys on the front panel to arm/disarm recording for the corresponding tracks. When a track is armed for recording, its track number appears light on a dark background.

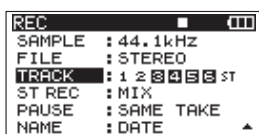

Creation of new takes when restarting recording

Set whether the unit continues recording to the same take or begins a new take when restarting recording. This setting determines the take recorded to when you press the REC key again after having pressed the PAUSE key to put the unit in recording standby.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the REC menu item, and press the ENTER key to open the REC screen.
- 3 Use the DATA wheel to select the PAUSE item, and press the ▷ key or ENTER key.

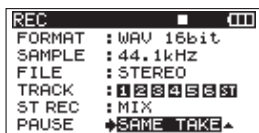

- 4 Use the DATA wheel to select one of the following options.

SAME TAKE Continue recording to the same take.
(default value):

NEW TAKE: Record to a new take.

- 5 Press the ◀ key to return to the selection of items on the REC screen.
- 6 Press the MENU key to return to the MENU screen. Press the HOME/FUNC key to return to the Home Screen.

Setting the name given to recording takes

Set whether take names are based on the date or one of three names that have been created on the NAME EDIT screen.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the REC menu item, and press the ENTER key to open the REC screen.
- 3 Use the DATA wheel to select the NAME item, and press the ▷ key.



- 4 Use the DATA wheel to select one of the following options.

DATE The take name is based on the date.
(default value):

USER 1 : The take name is based on a user word defined on the USER WORD edit screen.

USER 2 : The take name is based on a user word defined on the USER WORD edit screen.

USER 3 : The take name is based on a user word defined on the USER WORD edit screen.

- 5 Press the ◀ key to return to the selection of items on the REC screen.
- 6 Press the MENU key to return to the MENU screen. Press the HOME/FUNC key to return to the Home Screen.


Editing the user take names

You can edit the user words used for take names on the NAME EDIT screen.


- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the REC menu item, and press the ENTER key to open the REC screen.
- 3 Use the DATA wheel to select the NAME item, and press the ▷ key.



- 4 Press the key again to open the USER WORD edit screen.

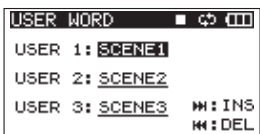

- 5 Use the DATA wheel to select the user word that you want to edit, and press the ENTER key.

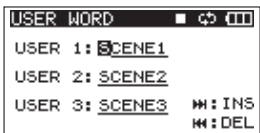

- 6 Use the following keys to edit the user words.


- keys: Move the cursor.
- DATA wheel: Select characters.
- key: Add a space at the cursor position.
- key: Erase the character at the cursor position

- 7 When you have finished editing a user word, press the ENTER key.
- 8 Press the MENU key to return to the selection of items on the REC screen. Press the HOME/FUNC key to return to the Home Screen.

Available recording time display

Available recording time varies according to the SD card capacity and the file format, file mode and sampling frequency settings. (See “Recording times” on page 36.)

You can check the amount of time available for recording using the inserted SD card on the Home Screen. When recording or in recording standby press the **DISPLAY** key to switch between showing the elapsed recording time (of the current recording) and the remaining available recording time. When the remaining available recording time is shown, it appears as a negative number.

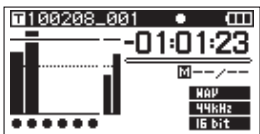


Set the folder for saving takes

You can set the folder where recorded takes are saved. (See “Folder operations” on page 38.) By default, recorded takes are saved in the “PROJECT0000” folder that is automatically created under the “MUSIC” folder.

Connecting other equipment

Connect microphones and other external equipment as shown in the figure below.

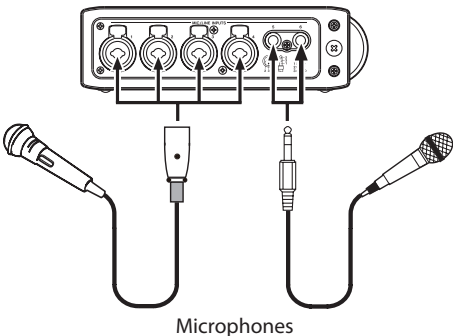

Input settings

This unit has 6 analog mic/line inputs and a stereo digital input.

6 tracks and a stereo track can be recorded for a total of 8 tracks.

The inputs recorded on the tracks are as follows.


Track	Input
Tracks 1/2	Analog inputs 1/2
Tracks 3/4	Analog inputs 3/4
Tracks 5/6	Analog inputs 5/6 or digital input
Stereo track	Stereo mix of inputs 1–6 or digital input

Set the recording source for the stereo track on the REC screen. (See “Stereo track recording settings” on page 25.)

4 – Recording

Setting the input sources

Use the **INPUT** switches on the top panel to set the type of input for each track to either mic or line.

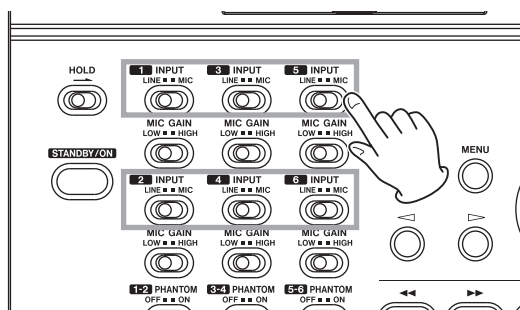


LINE: Set the switch to **LINE** when the line output jack of an external device is connected to the analog input on this unit.

MIC: Set this switch to **MIC** when a microphone is connected to this unit.

Phantom power

This unit can supply +48 V phantom power to condenser microphones.

Use the **PHANTOM** switches on the top panel to turn the phantom power supply ON or OFF for mic input pairs 1/2, 3/4 and 5/6.

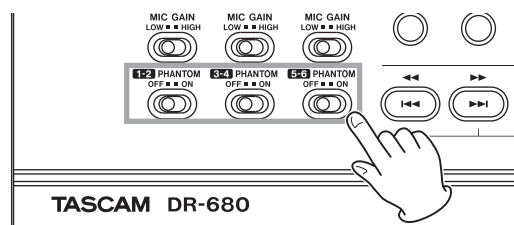


CAUTION

- Confirm that phantom power is **OFF** before connecting a line level device to a MIC/LINE INPUTS jack. If you connect a line level device while phantom power is being supplied, that device and this unit could be damaged.
- When using a condenser microphone, before connecting it to and disconnecting it from a MIC/LINE INPUTS jack, confirm that the phantom power for that jack is **OFF**. If you connect or disconnect a mic while phantom power is being supplied, that mic and this unit could be damaged.
- Do not connect an unbalanced dynamic mic to a mic input when phantom power is being supplied. Doing so could damage that mic and this unit.


Selecting the inputs for recording to tracks 5 and 6

Tracks 5 and 6 can be used to record either analog mic/line inputs or the digital input.

- 1 Press the **MENU** key to open the **MENU** screen.
- 2 Use the **DATA** wheel to select the **I/O** menu item, and press the **ENTER** key to open the **I/O** screen.

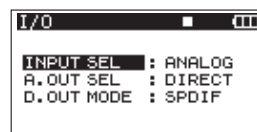

- 3 Use the **DATA** wheel to select the **INPUT SEL** menu item, and press the **▷** key or **ENTER** key.

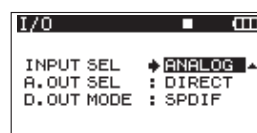

- 4 Use the **DATA** wheel to select **ANALOG** (default value) or **DIGITAL**.

ANALOG : Record the signals of analog inputs 5 and 6 to tracks 5 and 6.


DIGITAL : Record the digital input signal to tracks 5 and 6.

NOTE


If the **ST REC** item is set to **DIN**, this setting has no effect. The unit will operate as though set to **ANALOG**.

Adjusting the input levels

- 1 Press the PAUSE key to enable recording standby. The PAUSE and REC indicators light.

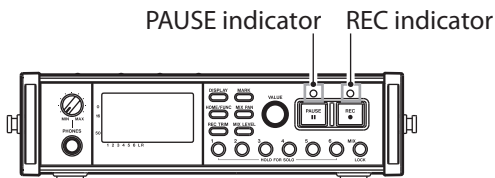


- 2 Use the 1-6 and MIX keys to turn the record function ON for tracks that you want to record. When the record function is ON for a track, an ● appears under its meter on the display.

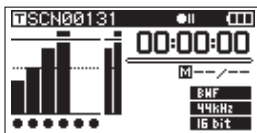

NOTE

- If the file recording mode is set to STEREO, the record function is turned ON and OFF for channels in pairs. If the file recording mode is set to 6ch, the record function cannot be turned ON and OFF for individual channels.
- The record function can only be turned ON/OFF when record standby is enabled when the unit is stopped or during playback. It cannot be turned ON/OFF when record standby is caused by use of the Auto Rec function or record standby is enabled during recording.



- 3 If a mic is connected, set the MIC GAIN switch for that input to LOW.

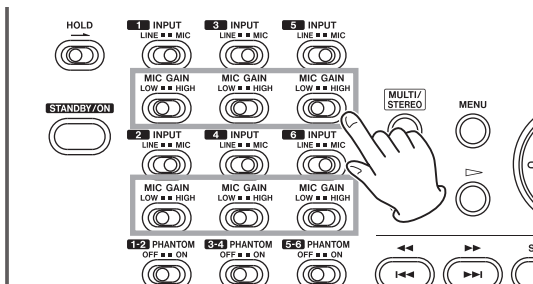

NOTE

If an INPUT switch is set to LINE, the corresponding MIC GAIN switch is disabled.

- 4 Press the REC TRIM key to open the TRIM screen.

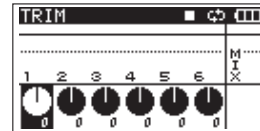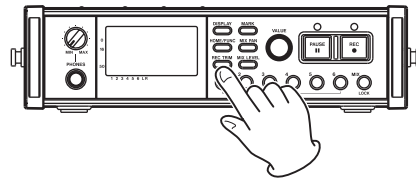


- 5 Use this screen to set input levels. Use the 1–6 keys to select the input channels that you want to adjust.
- 6 Use the VALUE knob to adjust the input levels in a range of ± 32 dB (default value: 0).

CAUTION

When recording with microphones, please pay attention to the following points.

- Adjust the input level so that distortion does not occur at the input stage. If distortion does occur at the input stage, the channel number to the left of the meter on the TRIM screen is shown as a light number on a dark background. In this case, the unit might record distorted sound even if the overload indicator for the meter has not appeared.

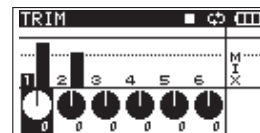

- When adjusting the input level, at first, set the MIC GAIN switch to LOW and adjust the input level on the TRIM screen. If the input level is still too low even when the trim is set to maximum, set the MIC GAIN switch to HIGH.

TIP

- In addition to using the TRIM screen to adjust the recording levels, try changing the orientation of the microphones and their distances from the sources of the sound. The orientation and distance of a microphone also changes the sound quality.
- You can use the limiter function to prevent distortion when recording even when loud sounds are input. (See "Using the limiter" on page 33.)


- 7 Press the REC TRIM or HOME/FUNC key to return to the Home Screen.

4 – Recording


Recording a take

Before starting the following procedures, input selection and level adjustment for each track should be completed, and the Home Screen should be open.

- 1 Press the **PAUSE** key to start recording standby. The **PAUSE** and **REC** indicators light.

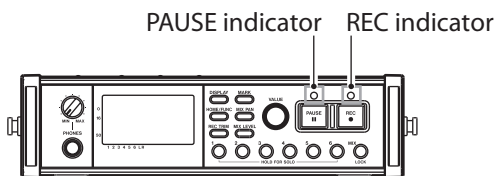


- 2 Press the **REC** key to start recording. During recording, the **REC** indicator lights, and the elapsed recording time or remaining recordable time appear on the display.

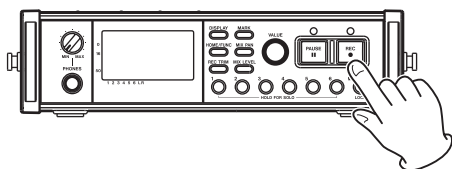


NOTE

You can also start recording by pressing the **REC** key first without pushing the **PAUSE** key beforehand.

- 3 Press the **STOP** key to stop recording.

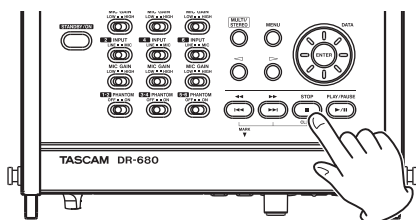

Press the **PAUSE** key to pause recording. When paused, you can press the **REC** key again to restart recording.

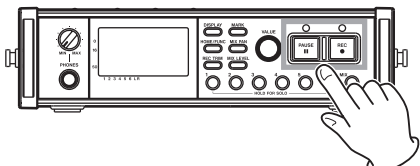

NOTE


You can set whether recording continues in the same take or a new take is created when you start recording again after pausing. (See "Creation of new takes when restarting recording" on page 26.)

Recording a stereo mix

With this unit, in addition to recording up to 6 discrete tracks from the 6 inputs, these inputs can also be mixed internally and recorded as a stereo track.

Before starting the following procedures, input selection and level adjustment for each track should be completed, and the Home Screen should be open.

- 1 Press the **MIX LEVEL** key to open the **LEVEL** screen.

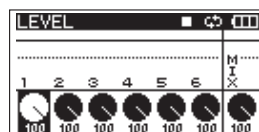


- 2 On this screen you can adjust the mix levels of each input channel and the recording level of the stereo track. Use the 1–6 and **MIX** keys to select the channels that you want to adjust.
- 3 Use the **VALUE** knob to adjust each to a suitable recording level in a range from 0–100 (default value: 100).

NOTE

Adjust the levels so that overload indicators do not appear at the tops of the meters.

- 4 Next, press the **MIX PAN** key to open the **PAN** screen.

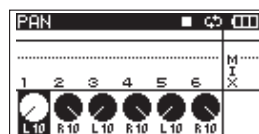

- 5 On this screen you can adjust the pan (stereo position) of each channel. Use the 1–6 keys to select the channel that you want to adjust.
- 6 Use the **VALUE** knob to adjust each to a suitable stereo position using values ranging from L10–L1 (left) to C (center) and R1–R10 (right).

(Odd number channels are set to L10 and even number channels are set to R10 by default.)


NOTE

Adjust the pan settings of the channels so that the mix is balanced as desired. You can check the balance with the MIX meters at the far right.


- 7 When you have finished making the settings, press the **HOME/FUNC** key to return to the Home Screen.

Using the solo function

Press and hold one of the 1–6 keys on the front panel to enable solo monitoring for that channel.

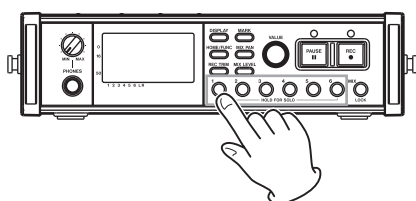

When solo monitoring, the **SOLO** indicator appears on the Home Screen, and the **S** indicator appears for the soloed channel.

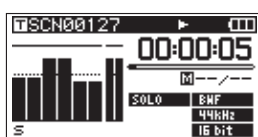

To stop solo monitoring, press and hold the key (1–6) for the soloed channel again.

Automatically starting and pausing recording (auto-record function)

If you turn the auto-record function ON, you can automatically start, stop and pause recording in response to the level of the input sound.

If an input level greater than the level set in advance is detected on any input channel, recording starts.

In addition, the unit can automatically cut silent parts and add marks at points where recording starts again.


NOTE

The levels of input on all channels must remain below the set level for at least one second before the auto-record function is activated.

Using the auto-record function

- 1 When the Home Screen is open, press the HOME/FUNC key to open the Functions Screen.
- 2 Use the VALUE knob to move the cursor and select the **A.REC** item.
- 3 Press the VALUE knob to turn auto-recording ON or OFF.


If auto-recording has been turned ON, the **A.REC** indicator appears with a dark background.

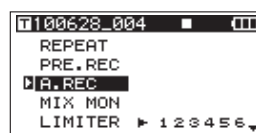


- 4 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.

Auto-record settings

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the **AUTO REC** menu item, and press the ENTER key to open the **AUTO REC** screen.

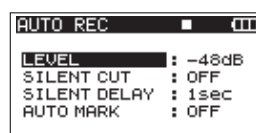

- 3 Use the DATA wheel to select the **LEVEL** item, and press the \triangleright key or ENTER key.

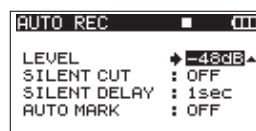

- 4 Set the level at which the unit determines that a signal is being input for starting and stopping automatic recording. Use the DATA wheel to set the value to -6dB, -12dB (default value), -24dB, or -48dB.
- 5 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.
- 6 Press the PAUSE key to enter recording standby. When the input sound exceeds the level set by the **LEVEL** item, the unit automatically starts recording.


Automatically cutting unnecessary silences when recording (silent cut function)

When recording, the unit can pause when it detects silence for a certain amount of time, and then restart recording when it detects an input signal again. Since this cuts unnecessary silence during recording, space on the card can be conserved.


- 1 Set **AUTO REC** and **LEVEL** as explained in the previous section.
- 2 Open the **AUTO REC** screen of selecting items.

4 – Recording

- 3 Use the DATA wheel to select the SILENT CUT item, and press the \triangleright key or ENTER key.
- 4 Use the DATA wheel to set it to ON (default value: OFF).

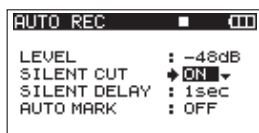

- 5 Press the \triangleleft key to return to selecting items.
- 6 Use the DATA wheel to select the SILENT DELAY item, and press the \triangleright key.

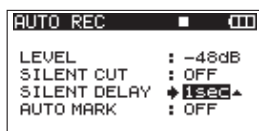

- 7 Use the DATA wheel to set the silence that must be detected before recording is paused between 1–5 seconds (default value: 1 seconds).
- 8 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.
- 9 Press the PAUSE key to start recording standby. When the input sound exceeds the level set in the LEVEL item, recording starts automatically.


When the input sound level is below the level set in the LEVEL item for a set number of seconds, recording automatically pauses.

When the input sound exceeds the level set in the LEVEL item again, recording restarts automatically.

Automatically adding marks at the position where recording restarts

You can set whether a mark is added or a new take is created whenever input higher than the set auto rec level is detected after the input level has been below the auto rec level for one second or more.

- 1 Set the AUTO REC and LEVEL as described above.
- 2 Open the AUTO REC screen of selecting items.
- 3 Use the DATA wheel to select the AUTO MARK item, and press the \triangleright key or ENTER key.
- 4 Use the DATA wheel to set it to MARK or TAKE.

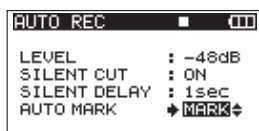

OFF (default): Auto mark function off

MARK: After the input level has been below the set auto rec level for one second or more, when input higher than the auto rec level is detected again, a mark is added at that position. Recording continues in the same take.

TAKE: After the input level has been below the set auto rec level for one second or more, when input higher than the auto rec level is detected again, recording continues in a new take. After pausing because of activation of the silent cut function, recording restarts in a new take.

- 5 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.
- 6 Press the PAUSE key to start recording standby. Depending on the setting, a mark is added or a new take is created when recording starts automatically.


Starting a new take and continuing to record

With this unit, the maximum recording file size is 2 GB. If the file size reaches 2 GB while recording, the unit automatically continues recording in a new take and stops recording the current take.

Manually starting a new take during recording

You can manually create a new take during recording at any time.

Press the REC key during recording to create a new take and continue recording.

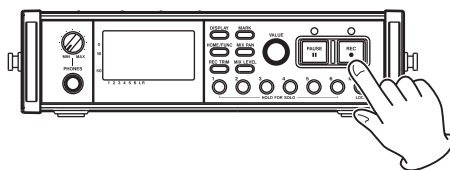

NOTE

- When a new take is created, the number at the end of the take name is increased by one.
- You should use a folder that contains as few takes as possible when creating new takes while recording or when expecting to do so.
- The maximum number of takes in a folder is about 100.

CAUTION

- If the total number of folders and files would exceed 5000, a new take cannot be created.
- If the total number of takes would exceed 1000, a new take cannot be created.
- A new take cannot be created if the recording time is less than 4 seconds.
- If the newly created take would have the same name as an existing take, the numerical suffix is increased by one as many times as necessary until a unique name is created.

Automatically starting a new take during recording

When recording, if the size of the file reaches one of the limits listed below, the unit stops recording the current take and starts recording in a new take without interrupting the recording.

WAV/BWF: When the file size reaches 2 GB

MP3: When the file size reaches 2 GB or the recording time reaches 24 hours

CAUTION

- If the total number of folders and files would exceed 5000, a new take cannot be created.
- If the total number of takes would exceed 1000, a new take cannot be created.

NOTE

Recording times are different for the same file size depending on the file format and recording mode.

Using the limiter

Turn the limiter function ON to make the unit automatically adjust the input level to prevent distortion if the input level is too loud.

- 1 When the Home Screen is open, press the HOME/FUNC key to open the Functions Screen.
- 2 Use the VALUE knob to move the cursor and select the **LIMITER** menu item.
- 3 Press the VALUE knob.
- 4 Press the VALUE knob to turn the limiter ON or OFF for all inputs at the same time (default: all channels off).

Press the 1–6 keys to turn the limiter ON or OFF for each input independently.

If the limiter has been turned ON for one or more inputs, the **LIMITER** indicator appears with a dark background.



- 5 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.

Using the low-cut filter


Use the low-cut filter to reduce low-frequency noise. Set the cut-off frequency to 40 Hz, 80 Hz or 120 Hz according to the recording conditions.

Turning the low-cut filter on and off

- 1 When the Home Screen is open, press the HOME/FUNC key to open the Functions Screen.
- 2 Use the VALUE knob to move the cursor and select the **LOW CUT** menu item.
- 3 Press the VALUE knob.
- 4 Press the VALUE knob to turn the low-cut filter ON or OFF for all inputs at the same time (default: all channels off).

Press the 1–6 keys to turn the low-cut filter ON or OFF for each input independently.

If the low-cut filter has been turned ON for one or more inputs, the **LOW CUT** indicator appears with a dark background.

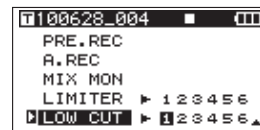


- 5 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.


Setting the cut-off frequency of the low-cut filter

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the **LOW CUT** menu item, and press the ENTER key to open the LOW CUT screen.

4 – Recording


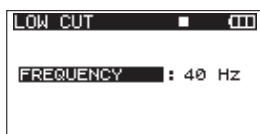


- 3 Use the DATA wheel to set the cut-off frequency to 40 Hz, 80 Hz (default value) or 120 Hz.

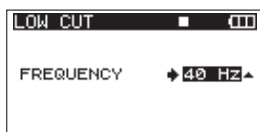

- 4 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.

MARK key to move backward or forward to the nearest mark in the selected take.

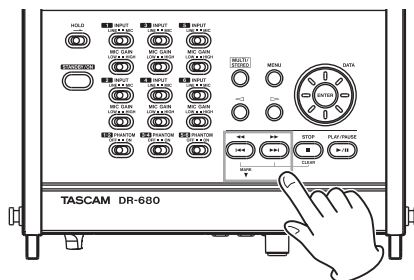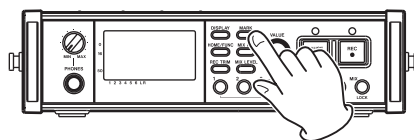

You can use these marks to index places where you might want to resume playback.


NOTE

You cannot move to a mark in a different take.


Using marks

Manually adding marks when recording and during playback

Press the MARK key when recording and during playback to add a mark at a desired position.

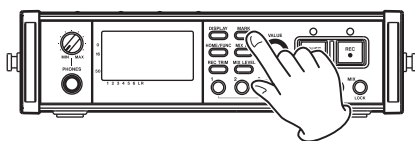

The mark number is shown when you do this.


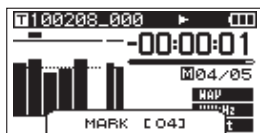


NOTE

- When a recording is paused and then restarted, a mark is added at that point. Marks are numbered in each take from 01–99, and the mark data is saved with each take.
- If you add a mark during playback, the mark is not immediately saved in the file, but rather is saved when playback stops. If you change the take using the ◀◀ or ▶▶ key without stopping, the addition of mark is not completed.

Erasing marks

Press the STOP key while pressing and holding the MARK to erase the nearest mark before the current position.

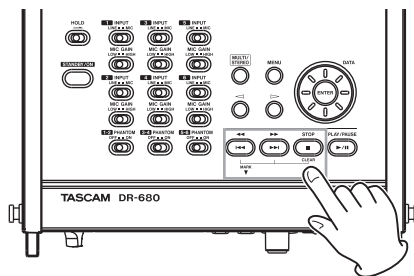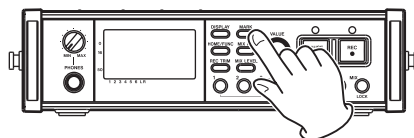

NOTE

If you erase a mark during playback, the mark is not immediately erased, but rather is erased when playback stops. If you change the take using the ◀◀ or ▶▶ key without stopping, the erasure of marks is not completed.

Moving to a mark

When stopped or during playback, press the ▶▶ key or ◀◀ key while pressing and holding the

Pre-recording

When the unit is in recording standby, the unit can record up to two seconds before the start of recording and include it in the recording.

- 1 **When the Home Screen is open, press the HOME/FUNC key to open the Functions Screen.**
- 2 **Use the VALUE knob to move the cursor and select the PRE.REC menu item.**
- 3 **Press the VALUE knob to turn pre-recording ON or OFF.**

If pre-recording has been turned ON, the PRE.REC indicator appears with a dark background.



- 4 **When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.**

TIP

Used in combination with the auto-record function, you can capture recordings without losing the initial sound.

NOTE

If the unit has been in recording standby for less than two seconds, only the amount of time that the unit has been in standby can be recorded.

4 – Recording

Recording times

Recording times for different file formats and SD/SDHC card capacities are shown in the following table.


File recording format and number of recordable tracks		2GB	4GB	8GB	16GB	32GB
WAV BWF	16-bit, 44.1 kHz, 6 tracks	1 hour 2 minutes	2 hours 5 minutes	4 hours 11 minutes	8 hours 23 minutes	16 hours 47 minutes
	16-bit, 44.1 kHz, 8 tracks	47 minutes	1 hour 34 minutes	3 hours 8 minutes	6 hours 17 minutes	12 hours 35 minutes
	24-bit, 44.1 kHz, 6 tracks	41 minutes	1 hour 23 minutes	2 hours 47 minutes	5 hours 35 minutes	11 hours 11 minutes
	24-bit, 44.1 kHz, 8 tracks	31 minutes	1 hour 2 minutes	2 hours 5 minutes	4 hours 11 minutes	8 hours 23 minutes
	16-bit, 48 kHz, 6 tracks	57 minutes	1 hour 55 minutes	3 hours 51 minutes	7 hours 42 minutes	15 hours 25 minutes
	16-bit, 48 kHz, 8 tracks	43 minutes	1 hour 26 minutes	2 hours 53 minutes	5 hours 47 minutes	11 hours 34 minutes
	24-bit, 48 kHz, 6 tracks	38 minutes	1 hour 17 minutes	2 hours 34 minutes	5 hours 8 minutes	10 hours 17 minutes
	24-bit, 48 kHz, 8 tracks	28 minutes	57 minutes	1 hour 55 minutes	3 hours 51 minutes	7 hours 42 minutes
	16-bit, 96 kHz, 6 tracks	28 minutes	57 minutes	1 hour 55 minutes	3 hours 51 minutes	7 hours 42 minutes
	16-bit, 96kHz, 8 tracks	21 minutes	43 minutes	1 hour 26 minutes	2 hours 53 minutes	5 hours 47 minutes
	24-bit, 96kHz, 6 tracks	19 minutes	38 minutes	1 hour 17 minutes	2 hours 34 minutes	5 hours 8 minutes
	24-bit, 96kHz, 8 tracks	14 minutes	28 minutes	57 minutes	1 hour 55 minutes	3 hours 51 minutes
	16-bit, 192kHz, 2 tracks	43 minutes	1 hour 26 minutes	2 hours 53 minutes	5 hours 47 minutes	11 hours 34 minutes
	24-bit, 192kHz, 2 tracks	28 minutes	57 minutes	1 hour 55 minutes	3 hours 51 minutes	7 hours 42 minutes
MP3	96kbps, 44.1 kHz/48 kHz, 4 tracks	23 hours 8 minutes	46 hours 17 minutes	92 hours 34 minutes	185 hours 10 minutes	370 hours 21 minutes
	128kbps, 44.1 kHz/48 kHz, 4 tracks	17 hours 21 minutes	34 hours 42 minutes	69 hours 26 minutes	138 hours 52 minutes	277 hours 46 minutes
	192kbps, 44.1 kHz/48 kHz, 4 tracks	11 hours 34 minutes	23 hours 8 minutes	46 hours 17 minutes	92 hours 35 minutes	185 hours 10 minutes
	320kbps, 44.1 kHz/48 kHz, 4 tracks	6 hours 56 minutes	13 hours 53 minutes	27 hours 46 minutes	55 hours 33 minutes	111 hours 6 minutes

- The above recording times are estimates, and might differ according to the SD/SDHC card.
- The above recording times are not continuous recording times. They are total recording times for SD/SDHC card capacities.

5 – Take and folder operations (BROWSE screen)

On the **BROWSE** screen, you can view the contents of the **MUSIC** Folder, which is where take files are stored on the SD card.

To open the **BROWSE** screen, press the **MENU** key to open the **MENU** screen. Then, use the **DATA** wheel to select the **BROWSE** menu item, and press the **ENTER** key.

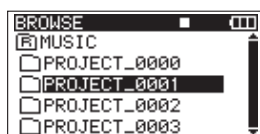

The contents of the folder that contains the take that was selected on the Home Screen before the **BROWSE** screen was opened appears on the display.

Navigating the BROWSE screen

On the **BROWSE** screen, folders and takes appear in a hierarchical structure much like they would appear on a computer. On this unit, only one level of folders can be created.

- Use the **DATA** wheel to select takes and folders.
- When a folder is selected, press the **▷** key to show the contents of that folder.
- When a taker folder is selected, press the **◁** key to close the currently open folder and show the higher-level folder that contains it.
- When a folder or take is selected, press the **ENTER** key to open the pop-up menu.

Icons on the BROWSE screen

The meanings of the icons that appear on the **BROWSE** screen are as follows.

MUSIC folder ()

The **MUSIC** folder is the highest-level folder (root folder) shown on the **BROWSE** screen.

Take ()

This icon appears before the name of a recorded take.

Folder ()


This icon shows a folder.

Open folder ()

The contents of this folder are currently shown on the screen.

Take operations

Select the desired take on the **BROWSE** screen and press the **ENTER** key to open the pop-up window that is shown below.

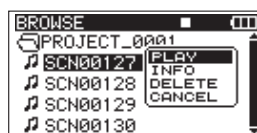


Use the **DATA** wheel to select the desired item from the following options, and press the **ENTER** key to execute it.

PLAY

Choose this to select the take, return to the Home Screen and start playback of that take. If the playback area is set to **FOLDER**, the folder that contains this take becomes the playback area.

INFO

This shows information about the selected take. Press the **ENTER** key again to return to the **BROWSE** screen.

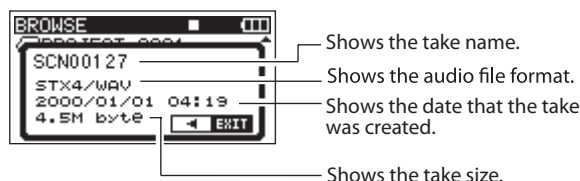

DELETE

If you choose this, a pop-up message appears to confirm that you want to delete the take. Press the **ENTER** key to erase the take and return to the **BROWSE** screen.

Press the **◁** key to cancel deletion and reopen the pop-up menu.



CANCEL

Press this to not conduct any operation on the selected take.

5 – Take and folder operations (BROWSE screen)

Folder operations

Select the desired folder on the BROWSE screen, and press the **ENTER** key to open the following pop-up menu.



Use the **DATA** wheel to select the desired item from the following options, and press the **ENTER** key to execute it.

SELECT

Returns to the Home Screen and selects the first take in the folder. This folder becomes the new playback area regardless of the previous playback area setting. New recorded takes are saved in this folder.

CREATE

A pop-up appears to confirm that you want to create a new folder.



Press the **ENTER** key to create a new folder. New recorded takes are saved in this folder.

Press the **<** key to cancel folder creation and reopen the pop-up menu.

ALLDEL

A pop-up appears to confirm that you want to delete all the takes in the selected folder at once.

Press the **ENTER** key to erase the takes and return to the BROWSE screen. Press the **<** key to cancel deletion and reopen the pop-up menu.




NOTE

This unit cannot delete write-protected files and files that the unit does not recognize.

REBUILD

A pop-up appears to confirm that you want to rebuild the selected folder. Rebuilding refreshes the take information inside the selected folder, and recognizes files that are not contained in takes as independent takes, making their playback possible. Use this function after you have copied files to the SD card from a computer, for example.

Press the **ENTER** key to rebuild the folder and return to the BROWSE screen. Press the **<** key to cancel rebuilding and reopen the pop-up menu.

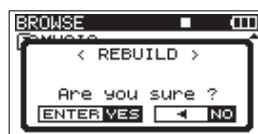

NOTE

- Files with formats that are not supported by this unit will not be recognized even after rebuilding and cannot be played back.
- Files with file names that contain characters other than standard single-byte alphanumeric characters cannot be played back even after rebuilding.

CANCEL

Press this to not conduct any operation on the selected folder.

When the Home Screen is open, use the ◀◀ and ▶▶ keys to select the take that you want to play. You can only select takes within the playback area that is currently set. When there are lots of takes on a card, for example, setting the play area to a limited number of takes can make selection easier. You can set the playback area to a single take, the current folder or all accessible takes on the SD card on the **PLAY** menu. You can also set a folder for playback on the **BROWSE** screen.


NOTE

On the **BROWSE** screen, regardless of the current playback area setting, you can select and play any take on the card.

Playback

Starting playback

On the Home Screen, when the unit is stopped, press the **PLAY/PAUSE** key to start playback.

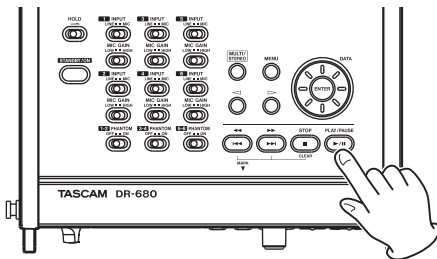

NOTE

- Only takes in the playback area can be played. (See "Setting the playback area" on page 41.)
- You can also start playback by selecting a take on the **BROWSE** screen.

Stopping playback

On the Home Screen, press the **STOP** key during playback to stop playing a take and return to its beginning.

Pausing playback

On the Home Screen, press the **PLAY/PAUSE** key during playback to pause playback at the current position in the take.


Press the **PLAY/PAUSE** key again to restart playback from that position.

Searching forward and backward

On the Home Screen, when stopped or during playback, press and hold the ◀◀ key or ▶▶ key to search backward or forward.

Selecting a take for playback

On the Home Screen, use the ◀◀ and ▶▶ keys to select a take for playback.

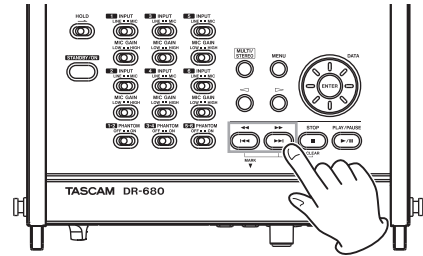

When in the middle of a take, press the ◀◀ key to return to the beginning of that take.

When stopped at the beginning of a take, press the ◀◀ key to skip to the beginning of the previous take.


When at the beginning of or in the middle of a take, press the ▶▶ key to skip to the beginning of the next take.

NOTE

- Only takes in the playback area can be played.
- Information about the take being played, including the name, is shown.

Changing the playback position (scrubbing)

On the Home Screen, when stopped or during playback, use the **DATA** wheel to change the playback position.

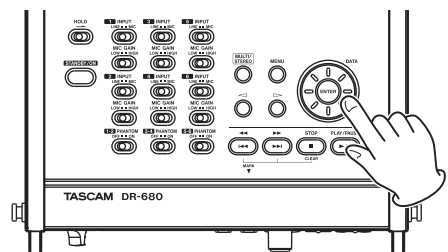

NOTE

- No sound is output while you are turning the **DATA** wheel.

6 – Playback

- If you turn the **DATA** wheel during playback, playback restarts at the position located when you stop turning the **DATA** wheel.

Mixing and outputting a multitrack recording

When playing back the sound of a multitrack recording, you can use the unit's internal mixer to make a stereo mix and then output that.


Adjust the playback sound of tracks 1–6 using mixer channels 1–6. You can also adjust the overall level of the mix.

You can output the stereo mix that you have mixed using the internal mixer to the headphone and digital output jacks.


Moreover, by setting **A. OUT SEL** to **MIX** in the **I/O** menu, the stereo mix can be output from the **LINE OUTPUTS** jacks. When set this way, the sound of the left (L) channel is output through **LINE OUTPUTS 1, 3** and **5** and the sound of the right (R) channel is output through **LINE OUTPUTS 2, 4** and **6**.

Using the internal mixer

- 1 Press the **MIX LEVEL** key to open the **LEVEL** screen.

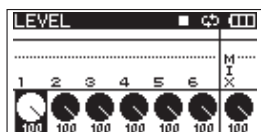

- 2 Adjust the levels of channels 1–6 and the overall mix on this screen. Use the 1–6 and **MIX (LOCK)** keys to select the channels that you want to adjust.
- 3 Use the **VALUE** knob to adjust the optimal level in a range between 0 and 100 (default value is 100).
- 4 Press the **MIX PAN** key to open the **PAN** screen.

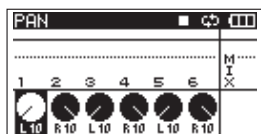

- 5 Use the pan controls on this screen to adjust the stereo position of each channel. Use the 1–6 keys to select the channels that you want to adjust.
- 6 Use the **VALUE** knob to adjust each to a suitable stereo position using values ranging from

L10–L1 (left) to C (center) and R1–R10 (right). (Odd number channels are set to L10 and even number channels are set to R10 by default.)


- 7 When you have finished making the settings, press the **HOME/FUNC** key to return to the Home Screen.

NOTE


This function cannot be used when playing a stereo track.

Using the solo function

Press and hold one of the 1–6 keys on the front panel to enable solo monitoring for that channel.

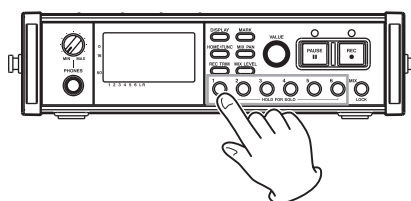

When solo monitoring, the **SOLO** indicator appears on the Home Screen, and the **S** indicator appears for the soloed channel.

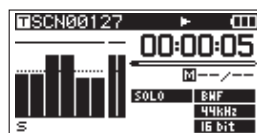

To stop solo monitoring, press and hold the key (1–6 or **MIX**) for the soloed channel again.


NOTE

Solo monitoring can only be used with headphones and the built-in speaker.

Playing a stereo track

In addition to multitrack recording, this unit can also record a stereo track simultaneously. For example, a 6-track multitrack and a stereo track can be recorded at the same time.


During playback, press the **MULTI/STEREO** key to switch between the multitrack and the stereo track

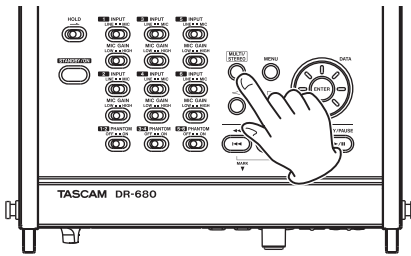


During playback of the stereo track, the **STEREO** icon appears on the Home Screen.

Setting the playback area

- 1 Press the **MENU** key to open the **MENU** screen.
- 2 Use the **DATA** wheel to select the **PLAY** menu item, and press the **ENTER** key to open the **PLAY** screen.

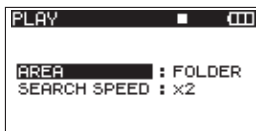

- 3 Use the **DATA** wheel to select the **AREA** item, and press the **▷** key or **ENTER** key.

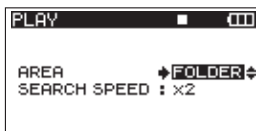

- 4 Use the **DATA** wheel to set the playback area.

SINGLE:

Play only the selected take.

FOLDER (default value):

Play all the takes in the currently selected folder on the **BROWSE** screen.

ALL:

Play all takes in the **MUSIC** Folder on the **SD** card.

- 5 When you have finished making the settings, press the **HOME/FUNC** key to return to the **Home** Screen.

Selecting a folder for the playback area on the BROWSE screen


Regardless of the current playback area, if you play a take on the **BROWSE** screen, the playback area changes to the folder that contains that take.

- 1 Press the **MENU** key to open the **MENU** screen.
- 2 Use the **DATA** wheel to select the **BROWSE** menu item, and press the **ENTER** key to open the **BROWSE** screen.
- 3 Use the **DATA** wheel to select the folder that contains the take that you want to play.

NOTE

For additional information about how to navigate the **BROWSE** screen, see "Navigating the **BROWSE** screen" on page 37.

- 4 Press the **▷** key.
- 5 Select the take that you want to play.
- 6 Press the **ENTER** key to open the following pop-up menu.

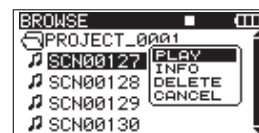

Use the **DATA** wheel to choose **PLAY**, and press the **ENTER** key to return to the **Home** Screen.

The selected take begins to play. If the playback area is set to **FOLDER**, the folder that contains that take becomes the playback area.

Setting the search speed

- 1 Press the **MENU** key to open the **MENU** screen.
- 2 Use the **DATA** wheel to select the **PLAY** menu item, and press the **ENTER** key to open the **PLAY** screen.



- 3 Use the **DATA** wheel to select the **SEARCH SPEED** item, and press the **▷** key or **ENTER** key.



- 4 Use the **DATA** wheel to set the search speed to **x2**, **x4**, **x8** (default value) or **x10**.
- 5 When you have finished making the settings, press the **HOME/FUNC** key to return to the **Home** Screen.

6 – Playback

Repeat playback

You can set the unit to repeatedly play a single take or all takes in a folder.


- 1 When the Home Screen is open, press the HOME/FUNC key to open the Functions Screen.
- 2 Use the VALUE knob to move the cursor and select the REPEAT menu item.
- 3 Press the VALUE knob to turn the repeat playback ON or OFF.

If the repeat has been turned ON, the REPEAT indicator appears with a dark background.



- 4 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.


NOTE

- The  icon appears on the Home Screen when the repeat function is ON.
- The takes in the currently set playback area are repeated. (See “Setting the playback area” on page 41.)

7 – Connection with a computer

By connecting this unit with a computer using the included USB cable, you can copy audio files between the SD card in the unit and the computer.

This unit can handle MP3 (96, 128, 192, 320 kbps, 44.1/48 kHz) and WAV/BWF (44.1/48/96/192 kHz, 16/24-bit) audio files.

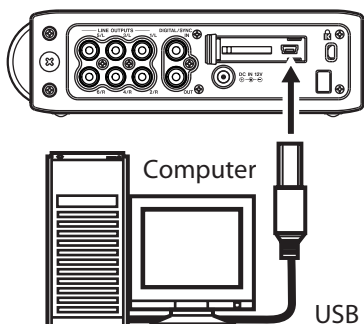

NOTE

Instead of connecting this unit to a computer by USB, you can also perform the same operations by removing the SD card and connecting it directly to a computer using a card reader, for example.

Confirm that an SD card is inserted correctly into the unit. If an SD card is not inserted correctly when the unit is connected to a computer by USB, a “Can’t Save Data” pop-up message appears.


When connected, “USB connected” appears on the display of this unit.



NOTE

Other unit functions cannot be used when it is connected to a computer by USB.


This unit appears on the computer as an external drive named “DR-680”.

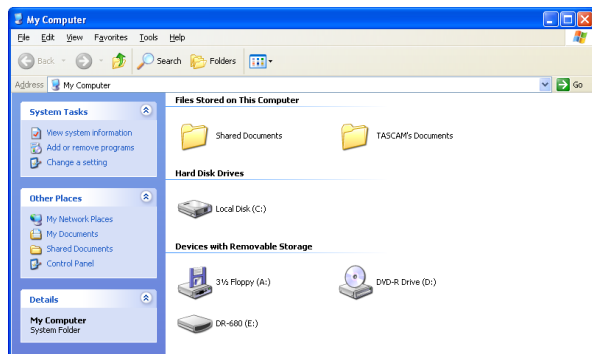

On Windows, open “My computer” to show the “DR-680” drive.

On Mac OS X, the “DR-680” drive should appear on the desktop or in the Finder sidebar, depending on the system settings.

Click on the “DR-680” drive to show the “MUSIC” and “UTILITY” folders.

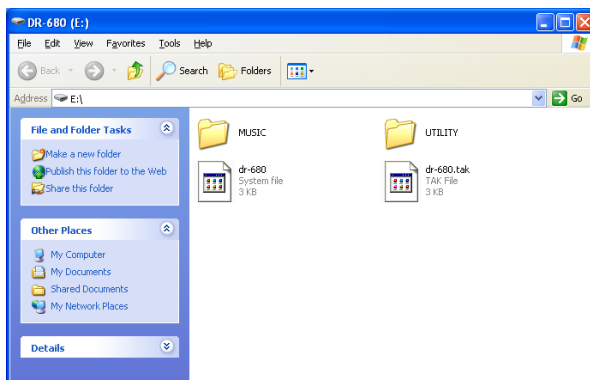

Copying files to a computer

Open the “MUSIC” folder, and drag-and-drop the files that you want to copy to any location on the computer.

Copying files from a computer

Drag and drop files from anywhere on the computer to folders that you create as desired in the “MUSIC” folder. After you have copied files to an SD card and disconnected from the computer, on the BROWSE screen, select the folder that you copied the files into and execute the REBUILD operation. Rebuilding the folder makes it possible for this unit to play the copied files.

Before rebuilding, make sure the file and folder names contain only single-byte alphanumeric characters.

NOTE

- If you use a computer to change the name of a file or folder created by this unit, the unit will not recognize the affected files as takes. Avoid changing names on a computer if you want to use them again on this unit.
- Files with formats that are not supported by this unit will not be recognized even after rebuilding and cannot be played back.

7 – Connection with a computer

TIP

- You can also use the computer to manage the contents of the “MUSIC” folder.
- You can create subfolders inside the “MUSIC” folder, but this unit can only recognize one level of subfolders. The unit ignores deeper folder levels and the files in them.
- Since this unit can be set to play the contents of a single folder, organizing folders by musical category or artist could be convenient.
- This unit can only read files and folders with names that contain only single-byte alphanumeric characters.
- Names given to subfolders and files are shown on the unit’s Home Screen and the BROWSE screen.
- Folders created directly inside the MUSIC folder using a computer can be given names with 16 or more characters without interfering with the operation of the unit, but only the first 15 characters will be shown on its display.

Ending the connection with a computer


Follow the correct computer procedures to disconnect the unit from the computer before disconnecting the USB cable. Please refer to your computer manual for information about the correct procedures for disconnecting an external drive.

After being disconnected, the power is set to standby.

8 – Cascade connections

Preparing to use the cascade function

- 1 Connect the DIGITAL/SYNC OUT jack of the master unit to the DIGITAL SYNC IN jack of the slave unit.

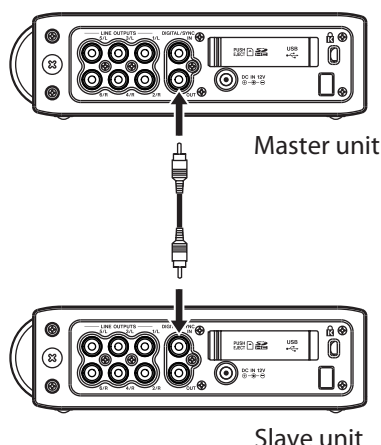

- 2 Make the following settings using the menus of both master and slave units.

■ REC menu

- FORMAT:

We recommend that you use the same setting for both the master and slave units.

- SAMPLE:

We recommend that you use the same setting for both the master and slave units.

- PAUSE:

This must be set to the same value on both the master and slave units.

■ PLAY menu

- AREA:

For cascade playback, both the master and slave units must be set the same.

■ SYSTEM menu

- CASCADE:

Set the master unit to MASTER and the slave unit to SLAVE.

■ Function menu

- REPEAT:

For cascade playback, both the master and slave units must be set the same.

- PRE.REC:

Set both the master and slave units to the same value.

- 3 Press the HOME keys on both the master and slave units to open their Home Screens.

- 4 Press the STOP key on both the master and slave units to stop them.

Cascade recording

When the units are stopped, press the **REC** key on the front panel to start recording with both the master and slave units.

During recording, press the **STOP** key on the top panel to stop recording with both the master and slave units.

Press the **PAUSE** key on the front panel to pause recording with both the master and slave units.

When paused, press the **REC** key on the front panel to resume recording.

When paused, press the **PAUSE** key or the **STOP** key to stop recording.

Cascade playback

When stopped, press the **PLAY/PAUSE** key on the top panel to start playback of both the master and slave units from the current position.

During playback, press the **PLAY/PAUSE** key to pause playback of both the master and slave units at the current position.

Disabling cascade operation

Set the **CASCADE** item in the **SYSTEM** menu to OFF.

8 – Cascade connections

Precautions for use of the cascade function

- When the cascade function is ON, the auto record function is disabled. If you turn the cascade function ON when the auto record function is ON, the auto record function turns OFF automatically. When the cascade function is turned OFF again, the auto record function remains OFF. To use the auto record function, turn it ON again after turning the cascade function OFF.
- When using the cascade function, set the **PAUSE** item of the **REC** menu to the same value for both the master and slave units. If the settings of the master and slave units are different, their operation after pausing recording will not be the same, and control of their transports will not occur correctly.
- If the types of cards used for recording in the master and slave units are different and the **PAUSE** item of the **REC** menu is set to **NEW TAKE**, recording might not start simultaneously when the **REC** key is operated. The reason for this is that the processing time for the units differs when the slave and master units use different types of cards. Moreover, this lag between units can also occur if the recording file format or sampling frequency settings of the master and slave units are not the same. To conduct cascade recording without lag, use the same type of card in both the master and slave units and set their recording file formats and sampling frequencies to the same values. Alternately, the lag between units can also be avoided by waiting several seconds after putting the unit in recording standby before pressing the **REC** key.
- The Home Screen must be open on both the master and slave units to use the cascade function. If a menu screen is open on either or both units, the cascade function will not work properly.
- Use of the cascade function for playback is intended for checking recorded takes. We cannot guarantee synchronized playback.

9 – Other Settings and Information Display

Output settings


You can make settings related to analog and digital output.

Analog output settings


You can set the analog outputs to output the sound of each channel directly or the stereo signal mixed by the internal mixer.

When set to output the MIX, the left and right channels of the stereo track are output through the analog output jack 1/2, 3/4 and 5/6 pairs.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the I/O menu item, and press the ENTER key to open the I/O menu screen.

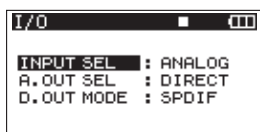

- 3 Use the DATA wheel to select the A.OUT SEL menu item, and press the ENTER key.

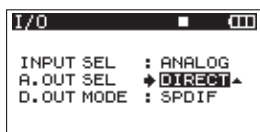

- 4 Use the DATA wheel to set it to DIRECT (default value) or MIX.

DIRECT : The sound of each channel is output directly.

MIX : The stereo signal mixed by the internal mixer is output.

- 5 When you have finished making the setting, press the HOME/FUNC key to return to the Home Screen.


Digital output settings

You can set the digital output format to SPDIF or AES/EBU.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the I/O menu item, and press the ENTER key to open the I/O menu screen.



- 3 Use the DATA wheel to select the D.OUT MODE menu item, and press the ENTER key.

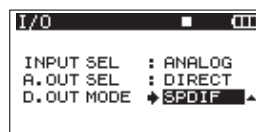

- 4 Use the DATA wheel to select SPDIF (default value) or AES/EBU.

SPDIF : Output in SPDIF format.


AES/EBU : Output in AES/EBU format.

- 5 When you have finished making the setting, press the HOME/FUNC key to return to the Home Screen.

System settings

Use the SYSTEM menu screen to make various settings to suit the environment and conditions in which the unit is to be used, as well as to view system information.

- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the SYSTEM menu item, and press the ENTER key to open the SYSTEM menu screen.

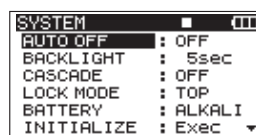

On the SYSTEM menu screen, you can make various settings described below.

Use the LEFT and RIGHT keys, ENTER key and the DATA wheel to select each item.

- 3 When you have finished making the settings, press the HOME/FUNC key to return to the Home Screen.

9 – Other Settings and Information Display

Power AUTO OFF settings

Use the AUTO OFF item to set the amount of time since being last used until the unit's power automatically turns OFF when operating on batteries.

Options: OFF (default value—AUTO OFF disabled), 3min, 5min, 10min, 30min

SYSTEM	■	☐
AUTO OFF	➔	OFF ▲
BACKLIGHT	:	5sec
CASCADE	:	OFF
LOCK MODE	:	TOP
BATTERY	:	ALKALI
INITIALIZE	:	Exec

Turning the backlight off automatically

Use the BACKLIGHT item to set the amount of time since being last used until the backlight automatically turns OFF when operating on batteries.

Options: OFF, 5sec (default value), 10sec, 15sec, 30sec

SYSTEM	■	☐
AUTO OFF	:	OFF
BACKLIGHT	➔	5sec ◀
CASCADE	:	OFF
LOCK MODE	:	TOP
BATTERY	:	ALKALI
INITIALIZE	:	Exec

Cascade settings

Use the CASCADE item to set the cascade function.

Options: OFF (default setting—cascade disabled), MASTER, SLAVE

SYSTEM	■	☐
AUTO OFF	:	OFF
BACKLIGHT	:	5sec
CASCADE	➔	OFF ▲
LOCK MODE	:	TOP
BATTERY	:	ALKALI
INITIALIZE	:	Exec

Setting the extent of the panel operation lock function

You can set which controls are disabled when you engage the panel operation lock function, which is activated by pressing and holding the **MIX** key.

TOP : Button operation of the top panel is disabled.

FRONT : Button operation of the front panel is disabled.

T+F : Button operation of both the front and top panels is disabled.

SYSTEM	■	☐
AUTO OFF	:	OFF
BACKLIGHT	:	5sec
CASCADE	:	OFF
LOCK MODE	➔	TOP ▲
BATTERY	:	ALKALI
INITIALIZE	:	Exec

Setting the battery type


Use the BATTERY item to set the type of battery used. The unit uses this setting to display the remaining battery charge and determine the minimum necessary remaining charge for correct operation.

Options: ALKALI (alkaline batteries (default value)), Ni-MH (nickel metal hydride batteries)


SYSTEM	■	☐
AUTO OFF	:	OFF
BACKLIGHT	:	5sec
CASCADE	:	OFF
LOCK MODE	:	TOP
BATTERY	➔	ALKALI ▲
INITIALIZE	:	Exec

Initializing the unit

Use the INITIALIZE item to restore the various settings of this unit to their initial settings.

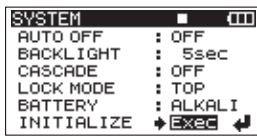

When selecting Exec item, press the ENTER key to open a confirmation screen.

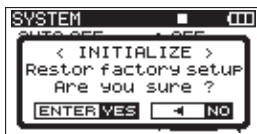


Press the ENTER key to initialize the unit. Press the STOP key to cancel initialization.


After completing or canceling initialization, the SYSTEM menu screen reopens.

Viewing system information

Use the INFORMATION item to view information about the unit's system settings and the firmware version.

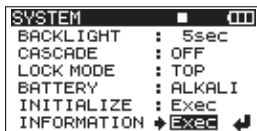

Press the ENTER key to open the system information screen.

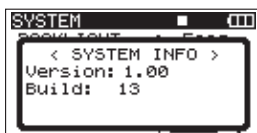

This page shows information about the system firmware version.

When the INFORMATION screen is open, press the ENTER key to return to the SYSTEM screen.


Reformatting SD cards

You can reformat an SD card that is in the unit.


CAUTION

- If you format a card, all information, including takes and folders, on it is erased.
- When formatting, use the AC adaptor or confirm that the remaining battery charge is sufficient. If the batteries run out of power during this operation, the formatting might not be completed correctly.


- 1 Press the MENU key to open the MENU screen.
- 2 Use the DATA wheel to select the CARD menu item, and press the ENTER key to open the CARD menu screen.

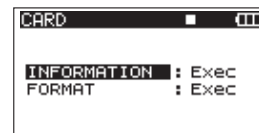

- 3 Use the DATA wheel to select the FORMAT item, and press the \triangleright key or ENTER key to open the following screen.

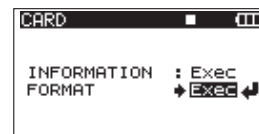

- 4 Press the ENTER key to open a confirmation screen.

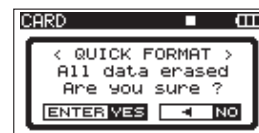


- 5 Press the ENTER key again to start formatting.
- 6 When formatting completes, the CARD screen reopens.

9 – Other Settings and Information Display


Viewing card information

On the **CARD** page, information about the status of the currently inserted SD card is shown.


- 1 Press the **MENU** key to open the **MENU** screen.
- 2 Use the **DATA** wheel to select the **CARD** menu item, and press the **ENTER** key to open the **CARD** menu screen.

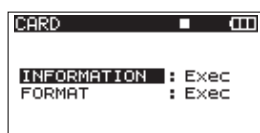

- 3 Use the **DATA** wheel to select the **INFORMATION** item, and press the **▷** or **ENTER** key.

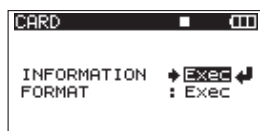

- 4 Press the **ENTER** key to open the following screen.

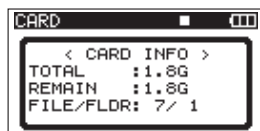

TOTAL

Shows the total memory capacity of the SD card.

REMAIN

Shows the remaining capacity of the SD card.

FILE/FLDR

Shows the total number of files and folders inside the **MUSIC** folder.

10 – Messages

The following is a list of the pop-up messages that might appear on the DR-680 under certain conditions. Refer to this list if one of these pop-up messages appears and you want to check the meaning or determine a suitable response.

Message	Meaning and response
Battery Empty	The battery is almost out of power. Replace the AA batteries.
MBR Error Init CARD	The card is not formatted properly or the formatting is broken. Change the card or press the ENTER key when this message appears to format the card in FAT format. CAUTION: Execution of FAT formatting erases all data currently on the card.
Format Error Format CARD	The FAT formatting of the card is abnormal or broken. This message also appears if you FAT formatted the card using a computer connected by USB and if a new card is inserted in the unit. Always use the DR-680 to conduct FAT formatting of cards to be used with it. Change the card or press the ENTER key when this message appears to format the card in FAT format. CAUTION: Execution of FAT formatting erases all data currently on the card.
File Not Found Make Sys File	The system file is missing. This unit requires a system file for operation. When this message appears, press ENTER to automatically create a system file.
Invalid SysFile Make Sys File	The system file required to operate this unit is invalid. When this message appears, press ENTER to automatically create a system file.
Invalid Card Change Card	Something might be wrong with the card. Change the card.
Protected Card Change Card	This appears when the card is protected and lacks the necessary MUSIC Folder and other folders and files. Unlock the write protect switch, restart the power and format the card.
Write Timeout	Writing to the card timed out. Backup files on the card to your computer, and format the card. If this problem still occurs even after formatting a card, the card transfer rate is not fast enough. Use a different card.
Card Full	The card has no remaining capacity. Erase unnecessary takes or move them to your computer to make open space.
Max File Size	The file is larger than the designated size or the recording time exceeded 24 hours.
File Full	The total number of folders and files exceeds 5000. Erase unnecessary files or move them to your computer.
Take Full	The total number of takes exceeds 1000. Erase unnecessary takes or move them to your computer.
Card Error	The card could not be handled properly. Replace the card.
File Protected	The take includes the read only file and cannot be erased.
No Card	No card is in the unit, so recording is not possible.
File Not Found in TAKE	An audio file could not be found inside the take. The audio files in the take might have been erased or renamed using a PC. Restore the files or erase the take using the BROWSE screen.
DIN unlock	When the DIGITAL/SYNC IN input is selected, the DIGITAL IN connection has been lost or the sampling frequency is incorrect. Confirm that the external digital device is connected to the DIGITAL/SYNC IN jack correctly. Confirm that the sampling frequency used by the external digital device and this unit are compatible. Press the STOP key to close this message. If you do this, you will not be able to use the DIGITAL/SYNC IN , but otherwise recording will be possible. If this message appears during recording, noise might be recorded."
DIN lock	DIN unlock status has ended. DIGITAL IN has become possible. Press the STOP key to close this message. If this message appears during recording, noise might be recorded."

10 – Messages

Message	Meaning and response
Not Continued	<p>If any of these errors occur, turn the unit power OFF and restart it. If the power cannot be turned OFF, remove the batteries and disconnect the AC adaptor (if connected). If the error message continues to appear, please contact a TASCAM Service Center.</p>
File Error	
Can't Save Data	
Player Error	
Device Error	
Writing Failed	
Sys Rom Err	
System Err 50	
System Error 1	
System Error 2	
System Error 3	
System Error 4	
System Error 5	
System Error 6	
System Error 7	
System Error 8	
System Error 9	

If you are having trouble with the operation of this unit, please try the following before seeking repair. If these measures do not solve the problem, please contact the store where you bought the unit or a TASCAM Service Center.

■ Power will not turn ON.

- Confirm that the batteries are not dead.
- Confirm that the batteries are installed with the correct +/- orientations.
- Confirm that the power plug of the AC adaptor (PS-1225L) is connected securely.

■ The unit is not responding to operations.

- Is the key lock function ON?

■ SD card is not recognized.

- Confirm that the SD card is inserted securely.

■ Playback is not possible.

- If it is a WAV/BWF file, confirm that it is of a compatible sampling frequency.
- If it is an MP3 file, confirm that it is of a compatible bit-rate.

■ No sound is output from the built-in speaker

- Are headphones connected?
- Is the volume level of the headphones minimized?

■ No sound is output from the headphones

- Is the volume level of the headphones minimized?

■ No sound is output from the monitoring system

- Are headphones connected?
- Confirm that the monitoring system is connected correctly.
- Is the volume level of the connected monitoring system minimized?
- Is the output level of this unit minimized?

■ Recording is not possible.

- Reconfirm connections.
- Reconfirm the input settings.
- Check whether the recording level is too low.
- Confirm that the SD card is not full.
- Confirm that the maximum number of files or takes has not been reached.

■ The recording level is low.

- Is the trim setting too low?
- Is the **MIC GAIN** set to **LOW**?
- Is the output level of a connected external device too low?

■ The sound I am trying to record is distorted.

- Is the trim setting too high?
- Is the **MIC GAIN** set to **HIGH**?

■ I cannot erase a file.

- Confirm that the SD card is not write-protected.

■ Files on this device do not appear on a computer.

- Confirm that the USB port of the unit is connected with the computer.
- Is the unit recording or in recording standby?

12 – Specifications

Recording media and formats

Recording media

- SD card (2 GB) Class 4 or faster
- SDHC card (4 GB – 32 GB) Class 4 or faster

File system

- FAT16 (2 GB Cards)
- FAT32 (Cards larger than 4 GB)

Supported recording and playback formats

- BWF: 16/24-bit, 44.1/48/96/192 kHz
- WAV: 16/24-bit, 44.1/48/96/192 kHz
- MP3: 96/128/192/320 kbps, 44.1/48 kHz

Number of tracks

- 6 tracks and a stereo mix track
- BWF: 44.1/48/96 kHz
- WAV: 44.1/48/96 kHz
- MP3: 44.1/48 kHz
- 2 tracks
- BWF: 192 kHz
- WAV: 192 kHz

File recording modes

- BWF: monaural, stereo, 6-channel
- WAV: monaural, stereo, 6-channel
- MP3: monaural, stereo

Input and output

Analog audio input and output

MIC/LINE INPUTS

- Connectors: XLR-3-31/standard 6.3-mm (1/4") TRS
- (1: GND 2: HOT 3: COLD/Tip: HOT Ring: COLD Sleeve: GND)
- INPUT switch set to MIC
 - Input impedance: 2.4 k Ω
 - Nominal input level:
 - GAIN LOW: –20 dBu (0.11 V)
 - GAIN HIGH: –44 dBu (6.91 mV)
 - Maximum input level:
 - GAIN LOW: +3 dBu (1.55 V)

- GAIN HIGH: –21 dBu (0.098 V)
- Minimum input level:
- GAIN LOW: –51.5 dBu (2.0 mV)
- GAIN HIGH: –75.5 dBu (0.1 mV)
- INPUT switch set to LINE
 - Input impedance: 10 k Ω
 - Nominal input level: +4 dBu (1.23 V)
 - Maximum input level: +24 Bu (12.3 V)
 - Minimum input level: –27.5 dBu (0.05 V)

LINE OUTPUTS jacks

- Connectors: standard RCA pin jacks
- Output impedance: 200 Ω
- Nominal output level: –10 dBV (0.3 V)
- Maximum output level: +6 dBV (2.0 V)

PHONES jack

- Connector: standard 6.3-mm (1/4") stereo jack
- Maximum output: 50 mW + 50 mW (into 32 Ω load)

Built-in speaker

- 500 mW (monaural)

Digital audio input and output

DIGITAL/SYNC IN jack

- Connector: RCA pin jack
- Format: IEC60958-3 (S/PDIF) or AES3-2003/IEC60958-4 (AES/EBU) automatically determined

DIGITAL/SYNC OUT jack

- Connector: RCA pin jack
- Format: IEC60958-3 (S/PDIF) or AES3-2003/IEC60958-4 (AES/EBU) set by user

Control input and output

USB connection

- USB port connector: Mini-B type
- Format: USB2.0 HIGH SPEED (480 Mbps)

Audio performance

(From LINE IN to LINE OUT, Input level = FS –1 dB)

Frequency response

20 Hz-20 kHz +0.5/–1.5 dB (44.1 kHz)

20 Hz-20 kHz +0.5/–0.5 dB (48 kHz)

20 Hz-40 kHz +0.5/–1.0 dB (96 kHz)

20 Hz-80 kHz +0.5/–5.0 dB (192 kHz)

Distortion

0.007% (1 kHz)

S/N ratio

98 dB (A-weighted)

Requirements for connected computers

See the TASCAM web site (<http://www.tascam.com/>) for the latest information about OS compatibility.

Windows computer

Pentium 300 MHz or faster

128 MB or more memory

USB port (USB2.0 recommended)

Macintosh computer

266 MHz Power PC, iMac, G3, G4 or faster

64 MB or more memory

USB port (USB2.0 recommended)

Intel USB host controller recommended

Supported Operating Systems

Windows XP, Windows Vista, Windows 7

Mac OS X 10.2 or newer

Other specifications

Power supply

8 AA batteries (alkaline or NiMH)

AC adaptor (TASCAM PS-1225L, included)

Power consumption

100-120V: 9W (When phantom power ON and TASCAM PS-1225L AC adaptor used)

220-240V: 9.5W (When phantom power ON and TASCAM PS-1225L AC adaptor used)

Battery operation time (when used continuously)

Alkaline batteries

About 4 hours recording (JEITA)

About 4 hours playback (JEITA)

NiMH batteries

About 4.5 hours recording (JEITA)

About 4.5 hours playback (JEITA)

Dimensions (width x height x depth)

216.4 x 56 x 188.4 mm

8.52 x 2.21 x 7.41 in

Weight


1.2 kg/2.646 lb (without batteries)

Operating temperature range

0–40° C/32–104° F

12 – Specifications


Dimensions

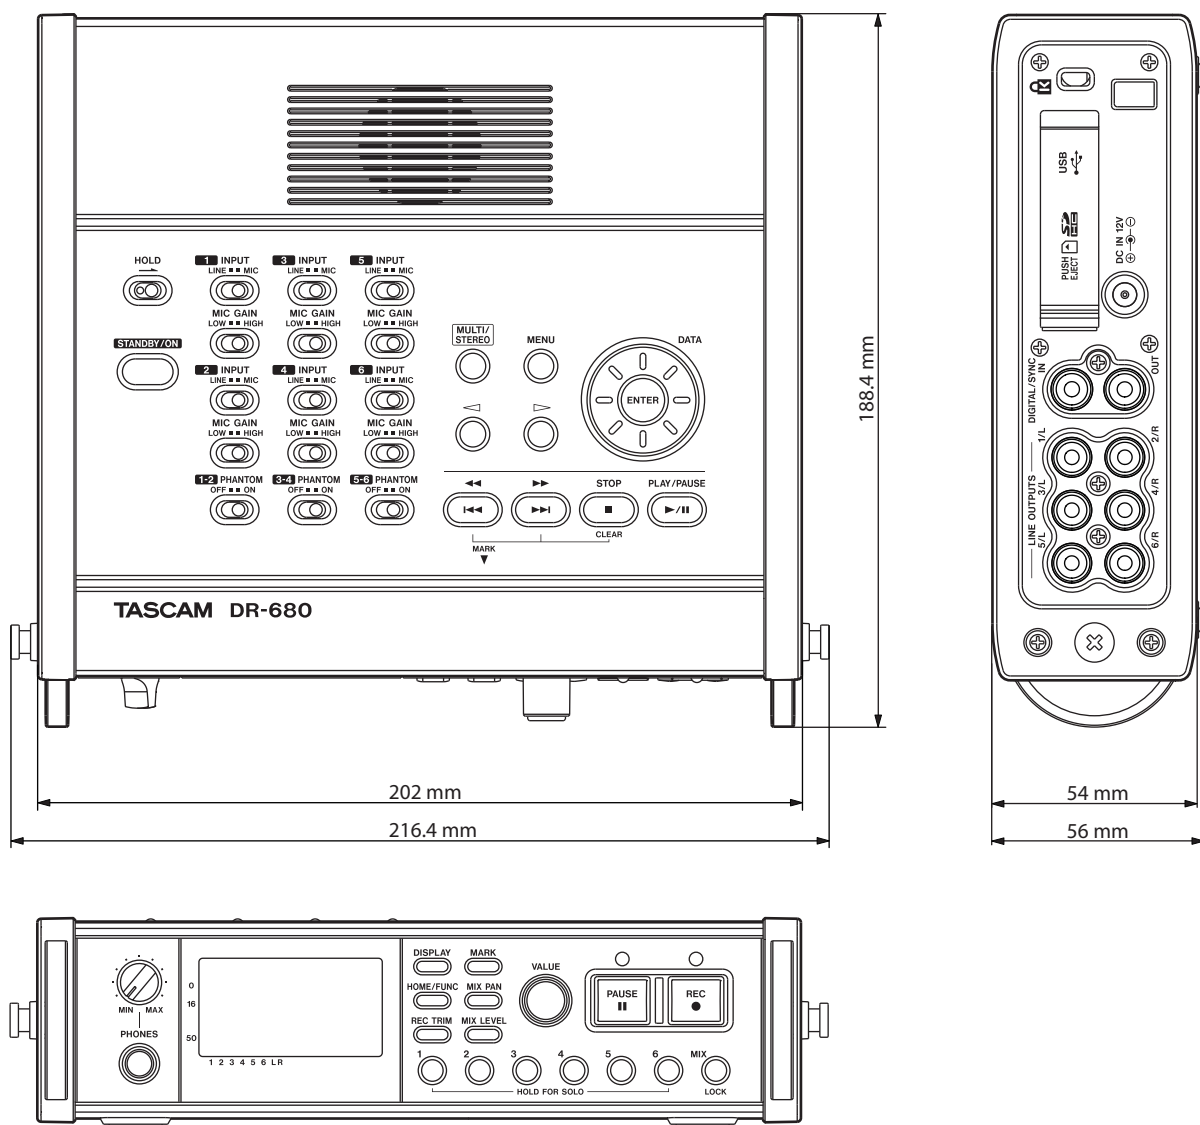


- Illustrations in this manual might differ from the actual product.
- In order to improve the product, specifications and appearance could be changed without prior notice.

Block diagrams

■ Recording

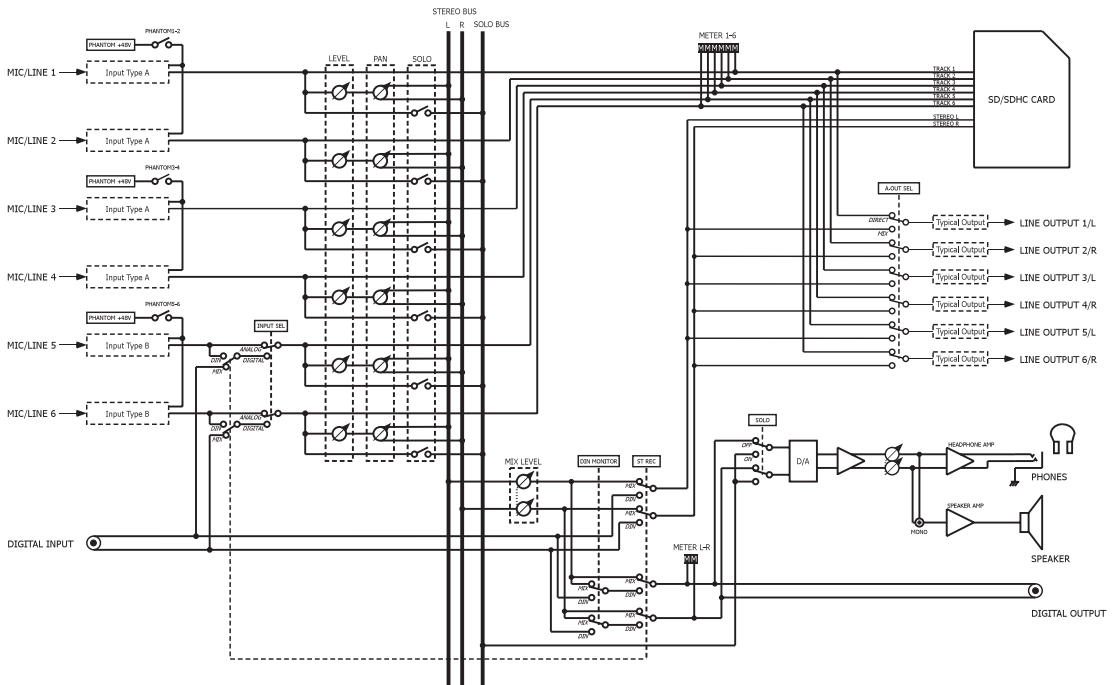


■ Play

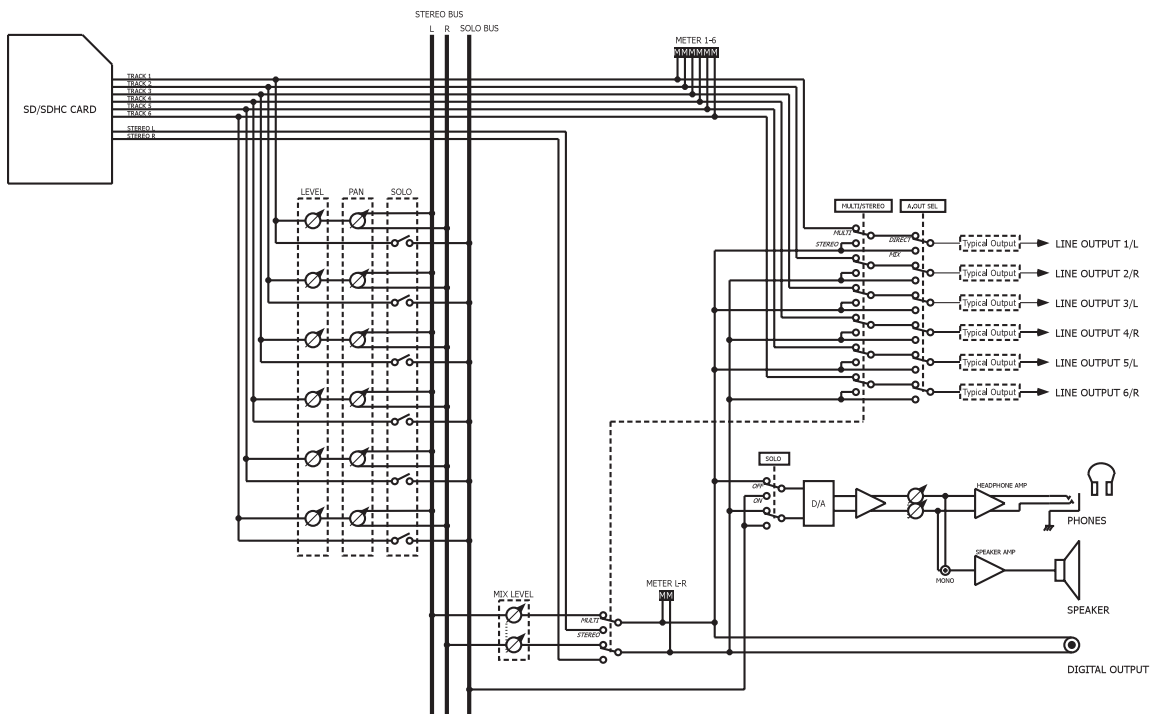


12 – Specifications

I/O

Input Type A

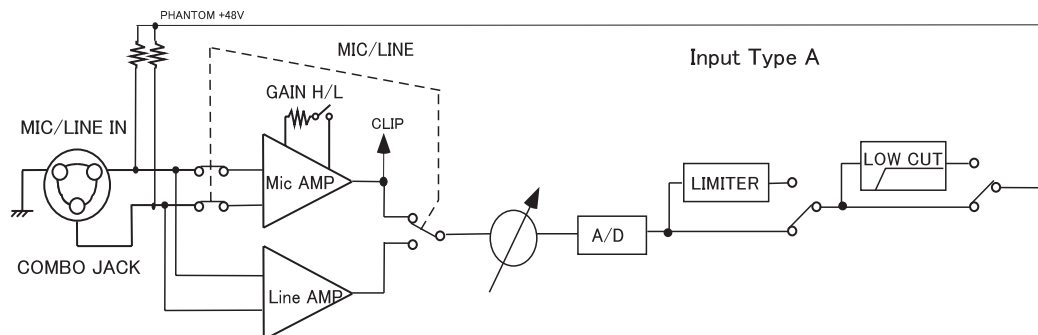


Input Type B

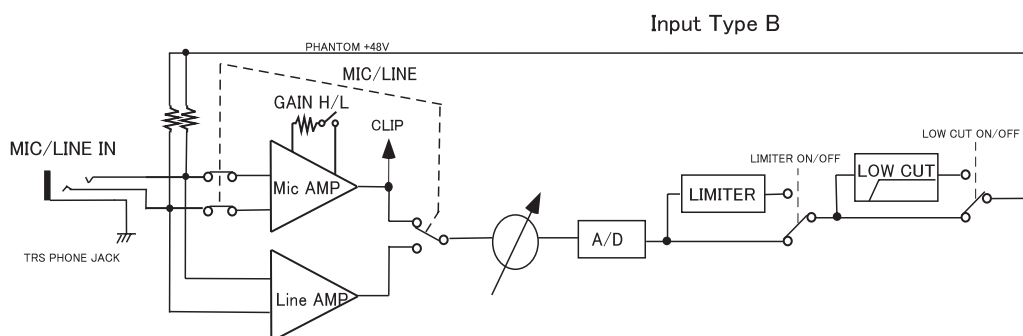

Typical Output

Typical Output



TASCAM
TEAC PROFESSIONAL

DR-680

TEAC CORPORATION

Phone: +81-42-356-9143

www.tascam.jp

1-47 Ochiai, Tama-shi, Tokyo 206-8530, Japan

TEAC AMERICA, INC.

Phone: +1-323-726-0303

www.tascam.com

7733 Telegraph Road, Montebello, California 90640 USA

TEAC CANADA LTD.

Phone: +1905-890-8008 Facsimile: +1905-890-9888

www.tascam.com

5939 Wallace Street, Mississauga, Ontario L4Z 1Z8, Canada

TEAC MEXICO, S.A. de C.V.

Phone: +52-55-5010-6000

www.teacmexico.net

Río Churubusco 364, Colonia Del Carmen, Delegación Coyoacán, CP 04100, México DF, México

TEAC UK LIMITED

Phone: +44-8451-302511

www.tascam.co.uk

Suites 19 & 20, Building 6, Croxley Green Business Park, Hatters Lane, Watford, Hertfordshire, WD18 8TE, UK

TEAC EUROPE GmbH

Phone: +49-611-71580

www.tascam.de

Bahnstrasse 12, 65205 Wiesbaden-Erbenheim, Germany
